


POS.	CODE	DESCRIPTION	QTY
1	A00289	RIGHT HANDLE	1
2	A00290	TENSION DISC	3
3	A00291	POSITIVE MICRO SWITCH	1
4	A00292	SWITCH TRIGGER	1
5	A00293	TRIGGER SPRING	1
6	A00294	INTERNAL WIRE	1
7	A00295	POWER CORD	1
8	A00296	CORD BUSHING	1
9	A00297	BINDING POST	1
10	A00298	LEFT HANDLE	1
11	A00299	SCREW	24
12	A00300	SPRING WIRE ASSEMBLY	1
13	A00301	LEFT HANDLE ROTARY KNOB	1
14	A00302	SPRING	1
15	A00303	RIGHT HANDLE ROTARY KNOB	1
16	A00304	CONTROLLER TOP	1
17	A00305	TELESCOPING TUBE ASSEMBLY	1
18	A00306	SCREW	2
19	A00307	ROTATING JOINT	1
20	A00308	PIVOT HEAD	1
21	A00309	SPRING	1
22	A00310	MODE CHOKE	1
23	A00311	NORMAL TRIM COVER	1
24	A00312	LEFT HOUSING	1
25	A00313	RIGHT HOUSING	1
26	A00314	MOTOR	1
27	A00315	SQUARE NUT	1
28	A00316	MOTOR BRACKET	1
29	A00317	HEAD SCREW	2

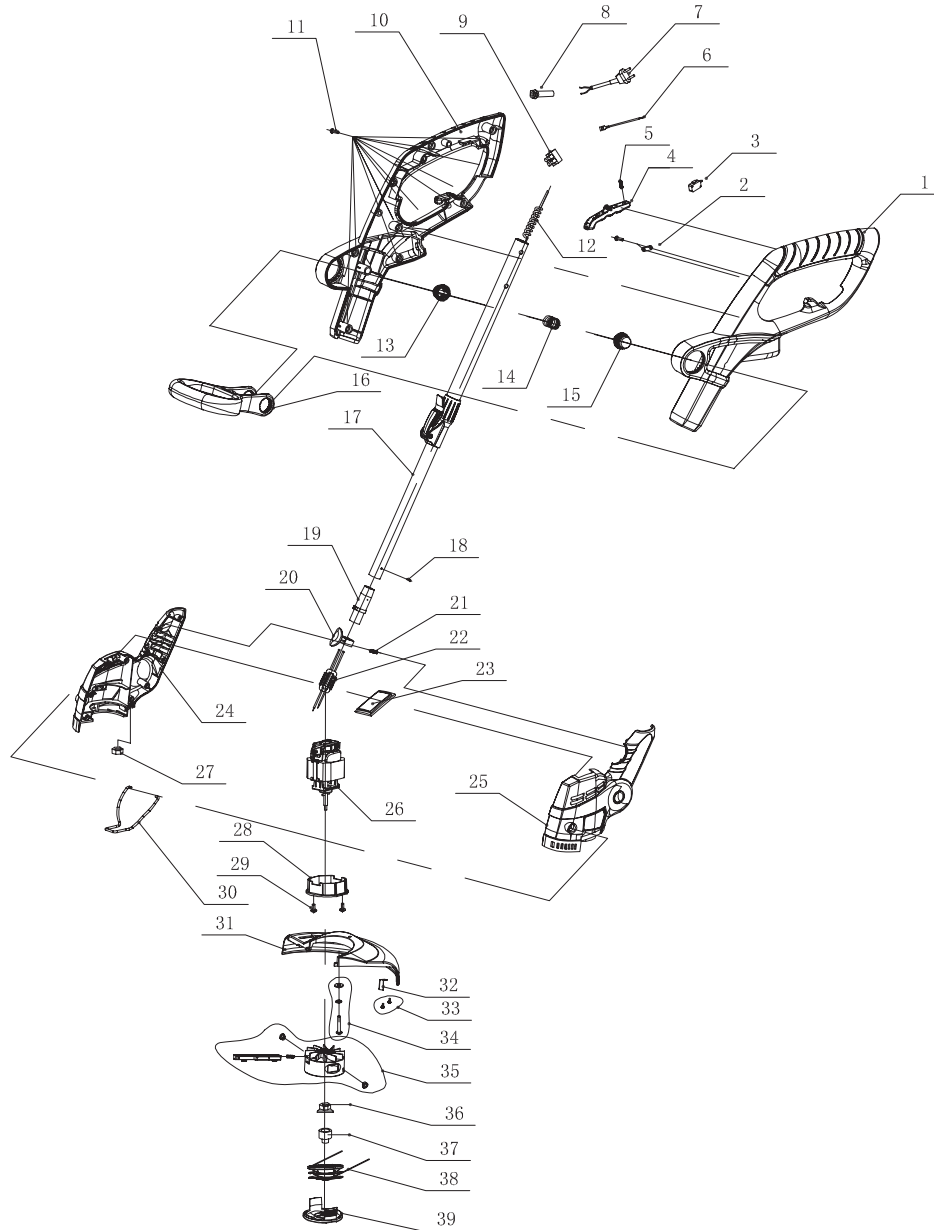

POS.	CODE	DESCRIPTION	QTY
30	A00318	RETRACTABLE FLOWER GUARD	1
31	A00319	PROTECT SHIELD	1
32	A00320	RECTANGULAR BLADE	1
33	A00321	SCREW	2
34	A00322	SCREWS	1
35	A00272	AUTOMATIC BLADE ASSEMBLY	1
36	A00273	FLANGE NUT	1
37	A00274	TRIM COVER	1
38	44640	FEED SPOOL ASSEMBLY	1
39	44642	FEED CUP	1