




POS.	CODE	DESCRIPTION	QTY
1	A02781	FRONT HOUSING	1
2	A02782	KNOB	2
3	A02783	DETERGENT VALVE	1
4	A02784	OUTLET COVER	2
5	A02785	POWER CORD	1
6	A02786	MOTOR ASSEMBLY	1
7	A02787	REAR HOUSING	1
8	A02788	SWITCH BOX	1
9	A02789	WHEEL ASSEMBLY	1
10	A02790	DETERGENT BOTTLE	1
11	A02791	NOZZLE COLLECTOR	1
12	A02792	HANDLE	1
13	A02793	HAND CRANK	1
14	A02794	HOSE REEL	1
15	A02795	REEL BASE	1
16	A02798	PRESSURE HOSE	1
17	A02796	CAPACITOR BOX	1
18	A02797	CAPACITOR 30UF	1
19	43604	HIGH PRESSURE HOSE 8M	1
20	A02799	GUN STOCK	1
21	A02800	CAPACITOR CAP	1
22	A02801	GUN HOLDER	1
23	41926	LANCE ROTOR POWER	1
24	41896	GUN	1
25	41925	TURBO LANCE	1

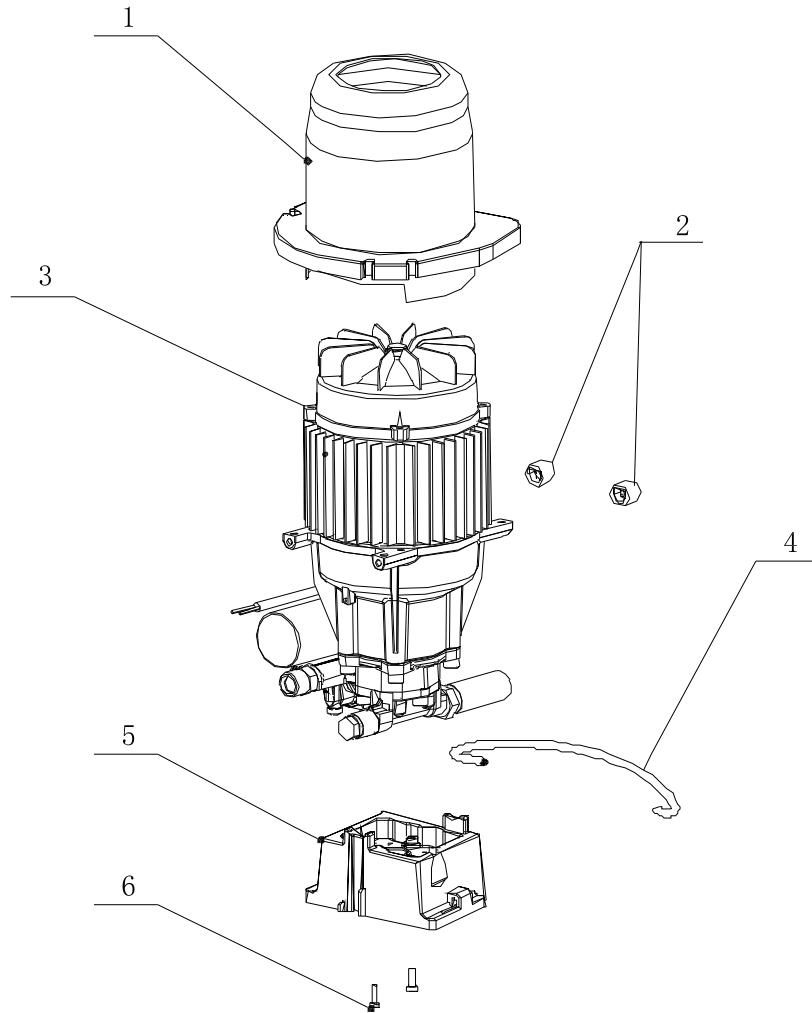

POS.	CODE	DESCRIPTION	QTY
1	A02802	INDUCTIVE MOTOR COVER	1
2	A02803	DAMPING RUBBER	2
3	A02804	MERGE	1
4	A02805	DETERGENT TUBE	1
5	A02806	PUMP BASE	1
6	A02807	SCREW	2

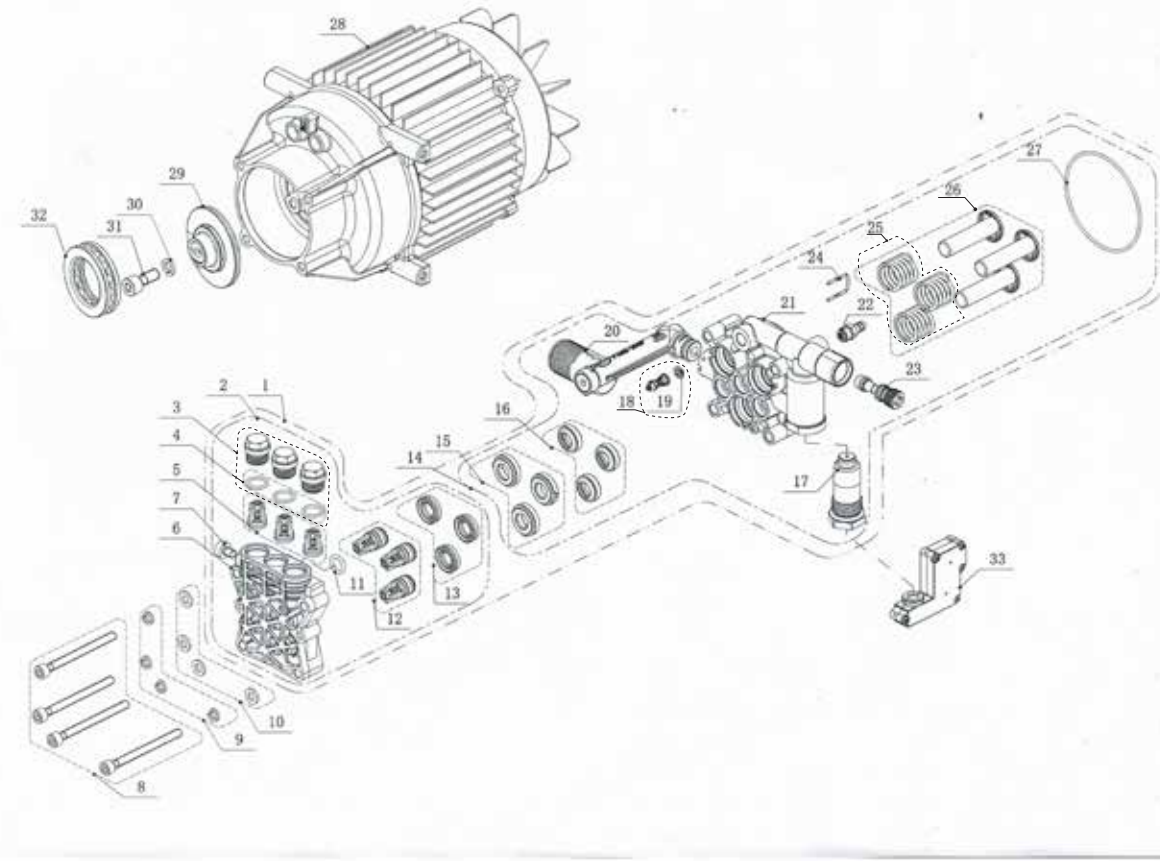

POS.	CODE	DESCRIPTION	QTY
1	A02808	PUMP ASSEMBLY	1
2	A02809	CYLINDER HEAD	1
3	A02810	CHECK VALVE NUT (WITH O-RING)	3
4	A02811	O-RING	3
5	A02812	OUTLET CHECK VALVE (3 PCS)	1
6	A02813	CYLINDER BASE	1
7	A02814	CYLINDER HEAD	1
8	A02815	SCREW	4
9	A02816	SPRING WASHER	4
10	A02817	SMALL PLAIN WASHER-	4
11	A02818	O-RING	1
12	A02819	INLET VALVE (3 PCS)	1
13	A02820	SEAL (3 PCS)	1
14	A02821	PISTON GUIDER	1
15	A02822	WATER SEAL SUPPORT (3 PCS)	1
16	A02823	PISTON SEAL (3 PCS)	1
17	A02824	BYPASS VALVE	1
18	A02825	CHIEF VALVE (WITH CONE BASE)	1
19	A02826	CONE SPRING BASE	1
20	A02827	INLET EXTENSION PLUG	1
21	A02828	PISTON GUIDER	1

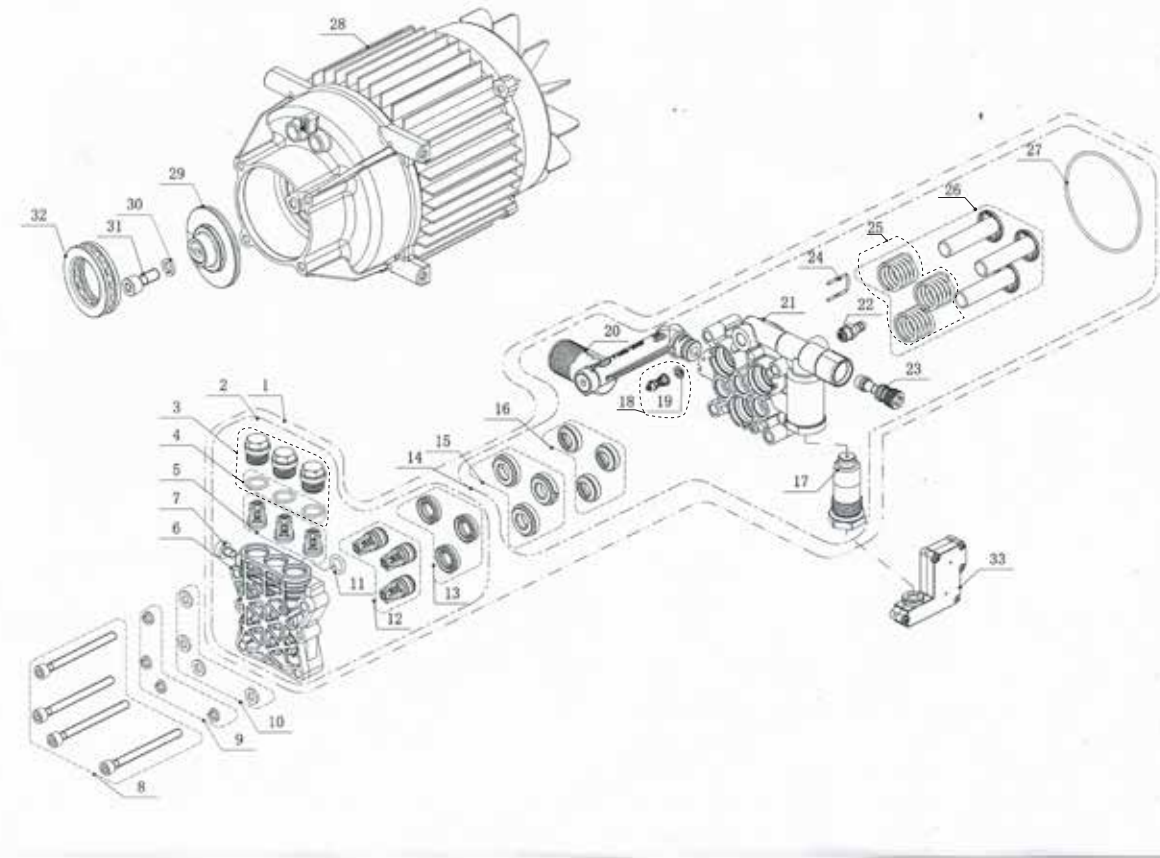

POS.	CODE	DESCRIPTION	QTY
22	A02830	SUCTION NIPPLE	1
23	A02829	VENTURI	1
24	A02831	U-PIN	1
25	A02832	PISTON SPRING	3
26	A02833	PISTON (WITH SPRING)	1
27	A02834	O-RING	1
28	A02835	MOTOR ASSEMBLY	1
29	A02836	WOBBLE PLATE FAM	1
30	A02837	SPRING WASHER	1
31	A02838	SCREW	1
32	A02839	THRUST BALL BEARING	1
33	A02840	TSS	1