




POS.	CODE	DESCRIPTION	QTY
1	A05510	CYLINDER	1
2	A05511	PISTON RING	2
3	A05512	PISTON	1
4	A05513	CIRCLIP	2
5	A05514	NEEDLE BEARING GASKET	2
6	A05515	NEEDLE BEARING	1
7	A05516	PISTON PIN	1
8	A05517	CYLINDER SEALING GASKET	1
9	A05518	NUT	1
10	A05519	SEMI-CIRCLE KEY	1
11	A05520	FLY WHEEL	1
12	A05812	OIL SEAL	2
13	A05522	LEFT CRANKCASE	1
14	A05523	BEARING 6001	2
15	A05524	CRANKCASE GASKET	1
16	A05525	PIN 3X9	2
17	A05526	CRANKSHAFT	1
18	A05527	RIGHT CRANKCASE	1
19	A05528	SCREW M5X25	3
20	A05529	SCREW M5X20	4
21	A05530	SCREW M5X18	2
22	A05531	IGNITION	1
23	A05532	SPARK PLUG	1
24	A05533	MUFFLER GASKET	1
SET 1 (25+26)	A06444	MUFFLER	1
27	A05536	SPRING WASHER	2
28	A05537	SCREW M5X50	2

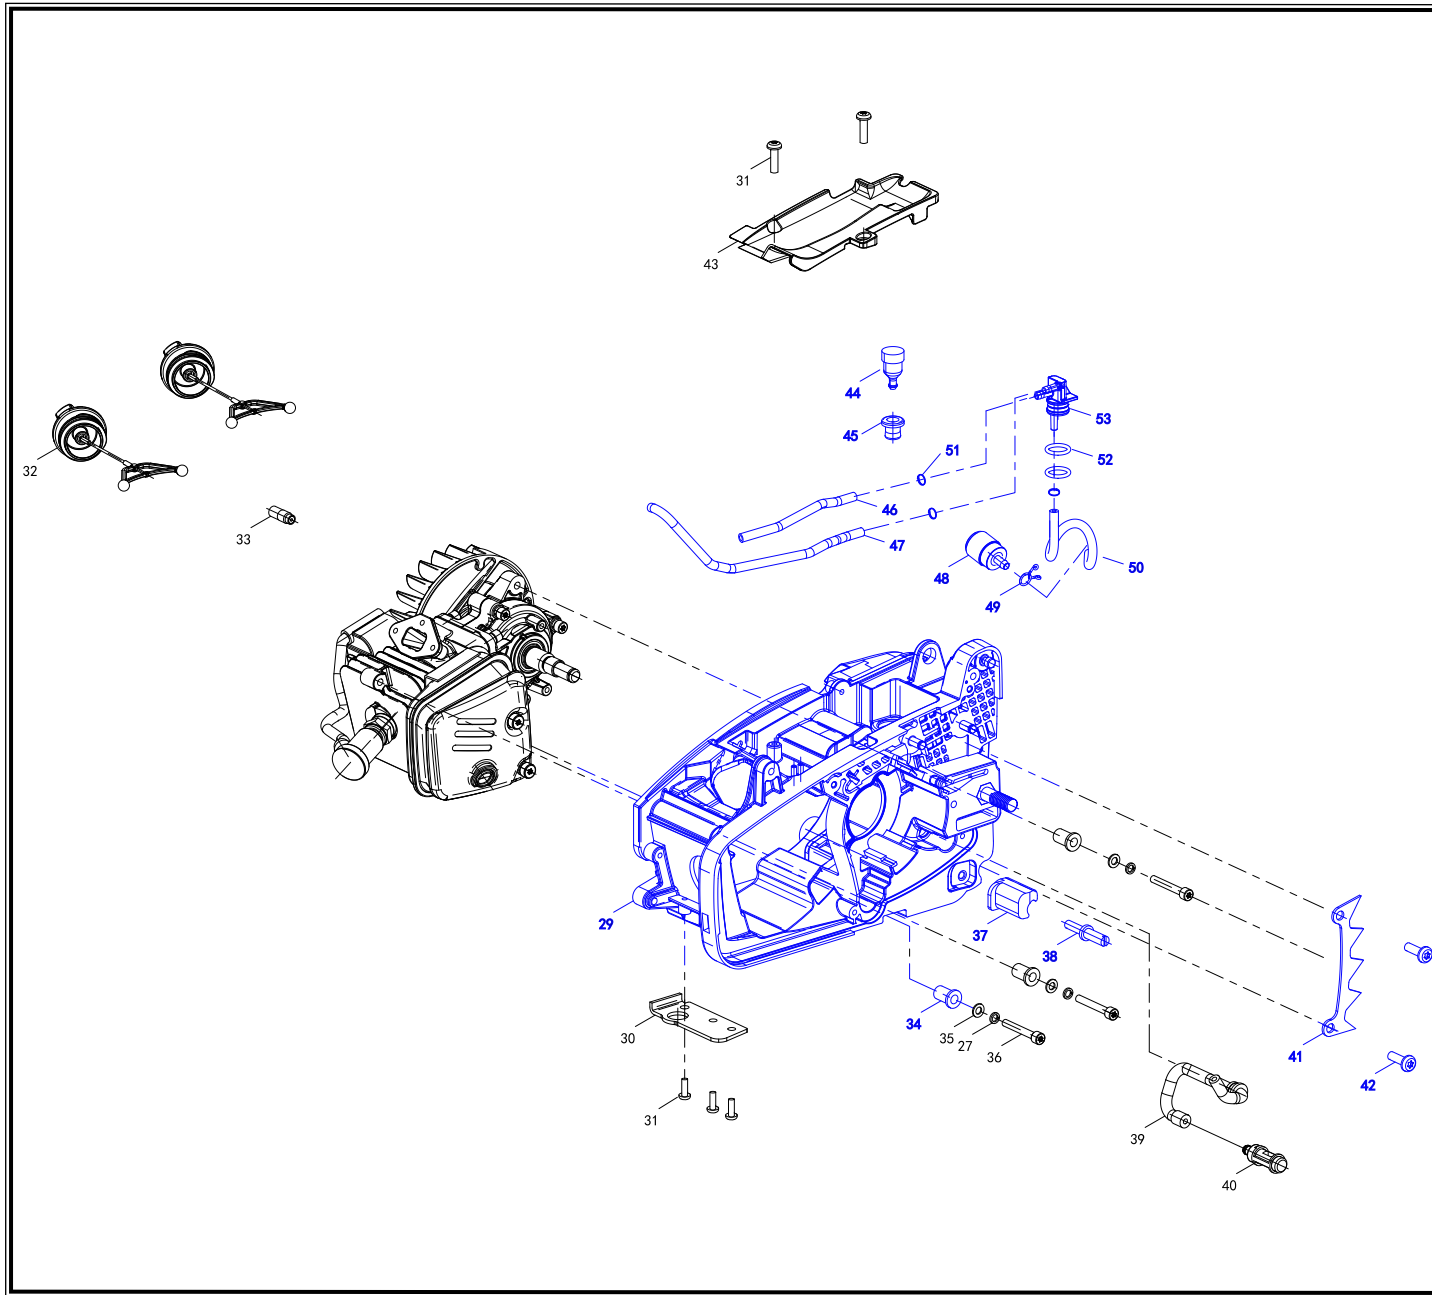


POS.	CODE	DESCRIPTION	QTY
27	A05536	SPRING WASHER	3
29	A05538	BASE ASSEMBLY	1
30	A05539	CLASP	1
31	A05552	TAPPING SCREW ST4.2X10	5
32	A05541	OIL TANK CAP	2
33	A05675	VALVE	1
34	A05543	BASE BUSHING	3
35	A05544	WASHER	3
36	A05545	SCREW M5X28	3
37	A05546	LINK STOPPER	1
38	A05547	CHAIN BLOCK SCREW	1
39	A05548	SPRAY TUBE	1
40	A05549	OIL FILTER	1
41	A05550	FELLING DOG	1
42	A05551	TAPPING SCREW ST4.8X14	2
43	A05553	WIRE COVER	1
44	A05554	BALANCER	1
45	A05555	BALANCER BASE	1
46	A05556	FUEL PIPE	1
47	A05557	INSULATED PIPE	1
48	A05558	FUEL FILTER	1
49	A05788	CLAMP	1
50	A05560	PIPE A	1
51	A05561	CLIP	3
52	A05562	O RING 10X1.5	2
53	A05563	FITTINGS	1

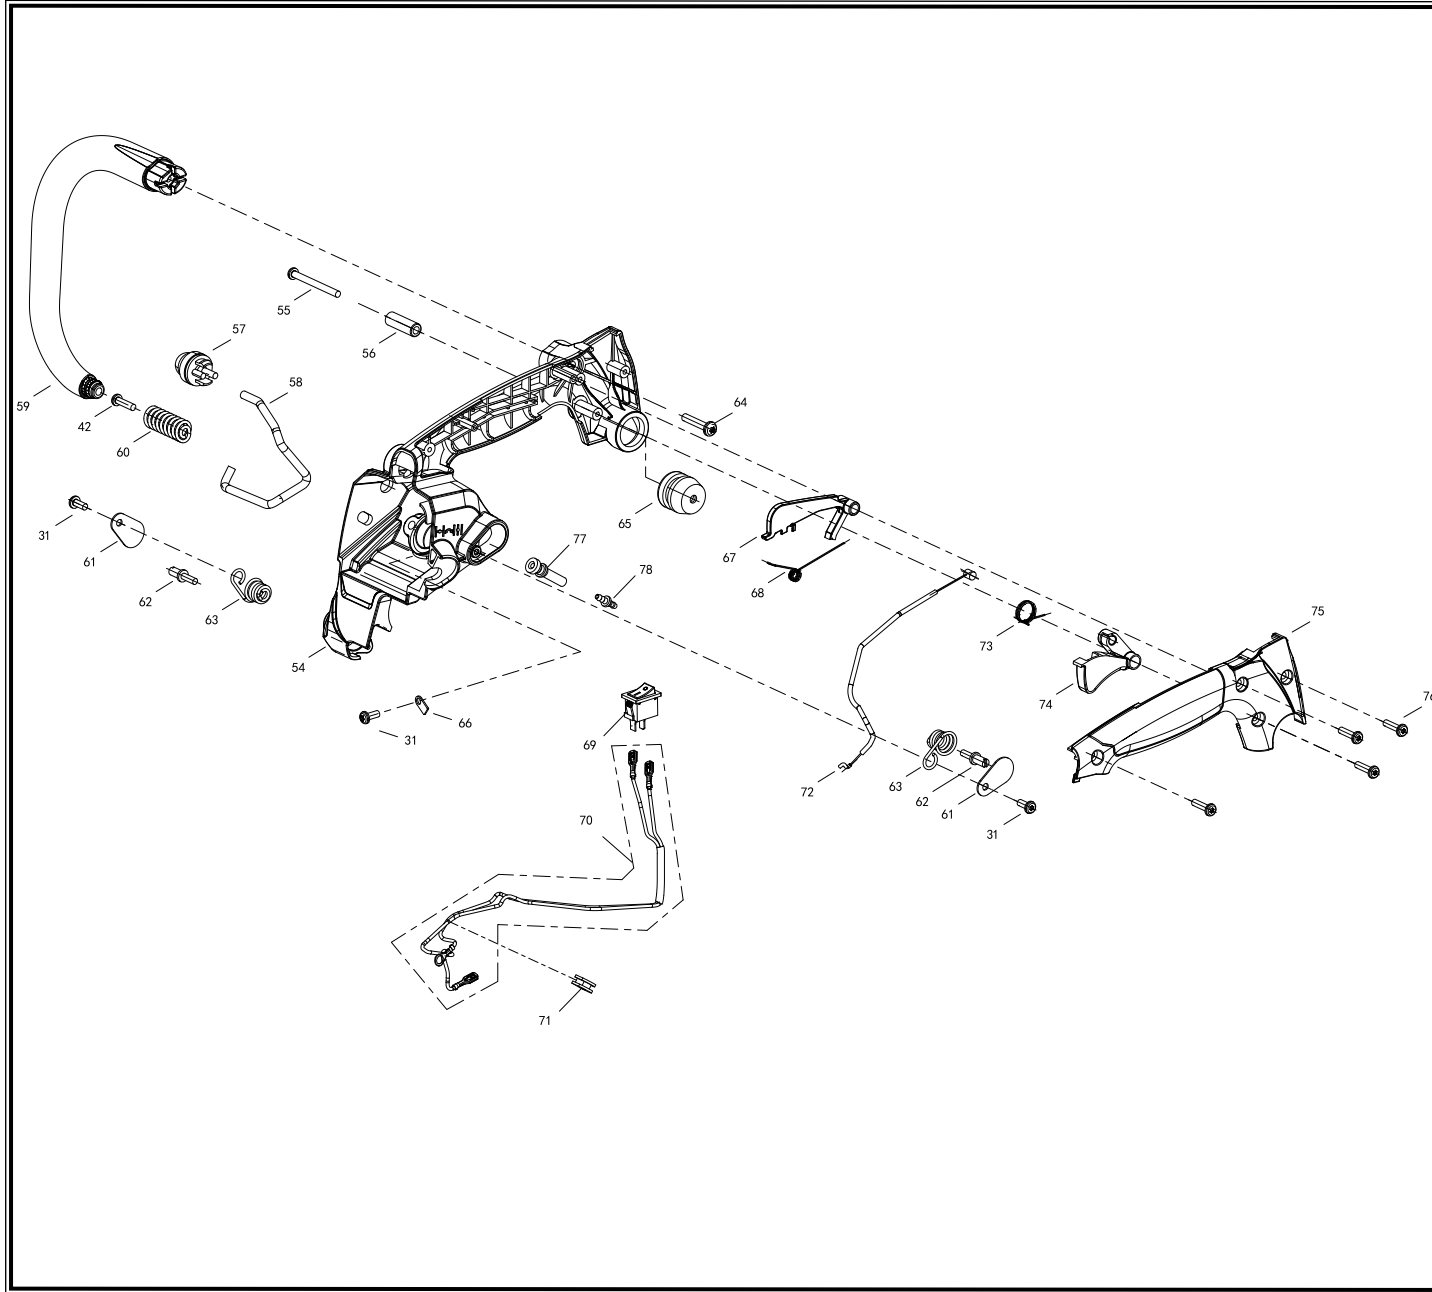


POS.	CODE	DESCRIPTION	QTY
31	A05552	SCREW ST4.2X10	4
42	A05551	SCREW ST4.8X14	1
54	A05564	HANDLE	1
55	A05565	TAPPING SCREW ST4.2X45	1
56	A05566	BUSHING	1
57	A05697	PUMP BALL	1
58	A05568	PUMP PIPE	1
59	A05569	HANDLE	1
60	A05570	HANDLE SPRING	1
61	A05571	SPRING COVER	2
62	A05572	HANDLE SCREW	2
63	A05573	SPRING	2
64	A05574	TAPPING SCREW ST4.8X25	1
65	A05575	DAMPER BASE	2
66	A05576	BLOCK	1
67	A05577	TRIGGER CONTROL	1
68	A05578	SPRING	1
69	A05896	AUTO RESET SWITCH	1
70	A05580	WIRES	1
71	A05581	WIRE CLIP	1
72	A05582	CABLE	1
73	A05583	TRIGGER SPRING	1
74	A05584	TRIGGER	1
75	A05585	HANDLE COVER	1
76	A05586	TAPPING SCREW ST4.2X16	4
77	A05587	FUEL PIPE	1
78	A05588	FITTINGS	1

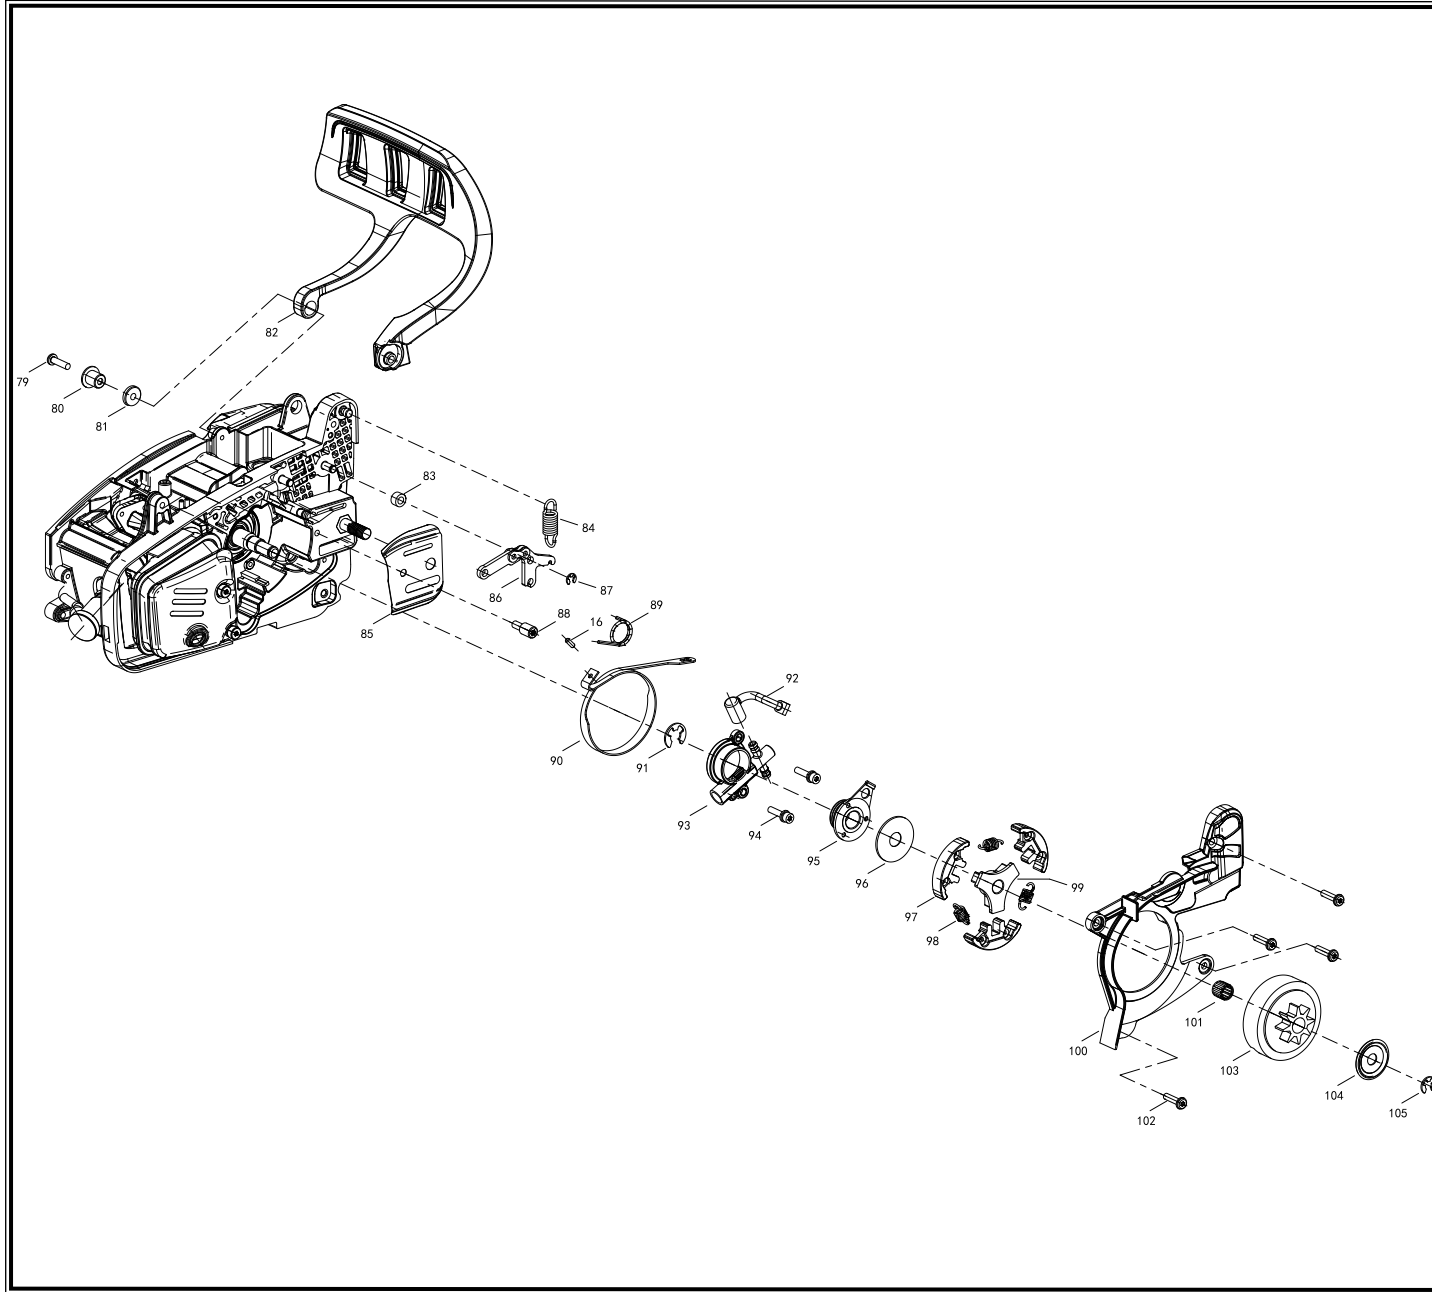


POS.	CODE	DESCRIPTION	QTY
16	A05525	PIN 3X9	1
79	A05604	SCREW M4X14	1
80	A05590	FRONT BEZEL BUSHING	1
81	A05591	FRONT BEZEL BLOCK	1
82	A05592	FRONT HANDLE GUARD	1
83	A05593	CASING	1
84	A05594	BREAK SPRING	1
85	A05595	COVER	1
86	A05596	HINGE	1
87	A05597	E-RING M4	1
88	A05598	LEAD SCREW	1
89	A05599	SPRING FOR FRONT HANDLE GUARD	1
90	A05600	BREAK STRAP	1
91	A05601	E-RING M9	1
92	A05602	OIL PUMP PIPE	1
93	A05603	OIL PUMP	1
94	A05604	SCREW M4X14	2
95	A05605	WORM	1
96	A05606	WASHER FOR CLUTCH	1
97	A05607	BRAKE CHEEK	3
98	A05608	CLUTCH SPRING	3
99	A05609	SUPPORT RING	1
100	A05610	BREAK SPRING COVER	1
101	A05611	NEEDLE BEARING	1
102	A05612	TAPPING SCREW ST4.2X12	4
103	A05613	CLUTCH DRUM	1
104	A05614	WASHER	1
105	A05615	E-RING M6	1

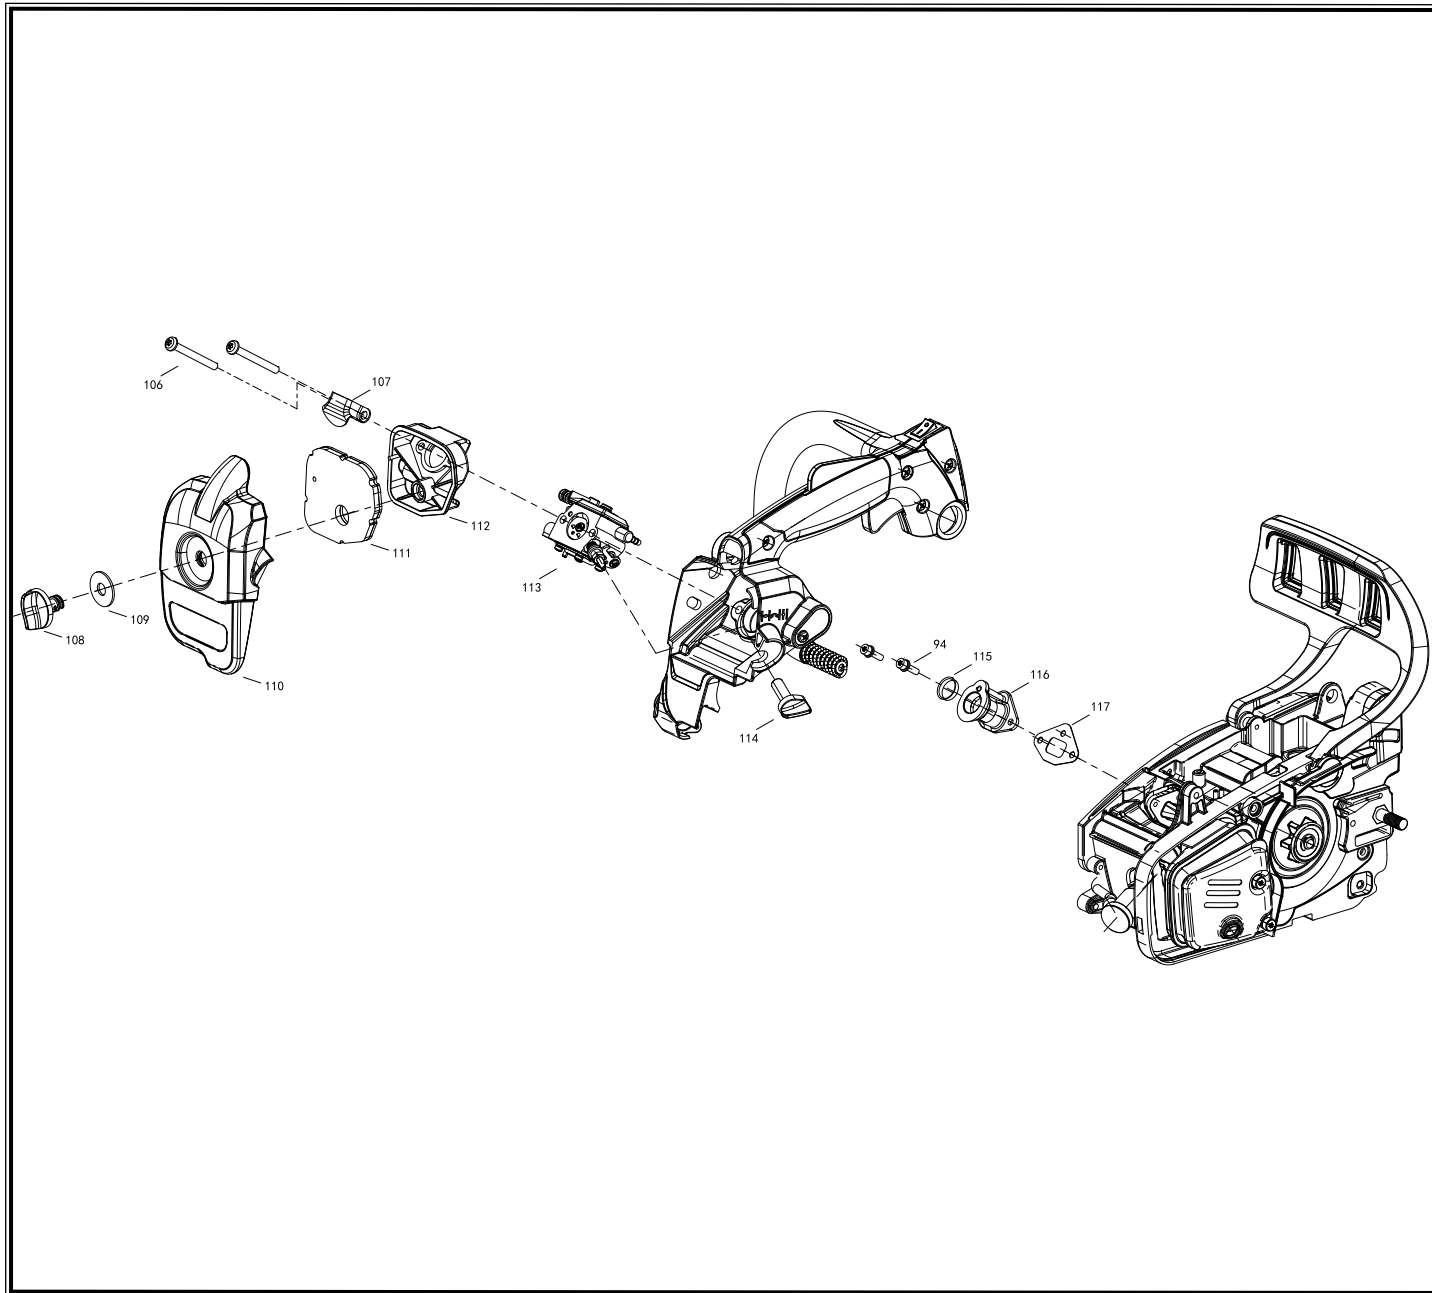

POS.	CODE	DESCRIPTION	QTY
94	A05604	SCREW M4X14	2
106	A05616	SCREW M5X45	2
107	A05617	AIR FILTER PRESSING PLATE	1
108	A05618	AIR FILTER LOCK	1
109	A05619	AIR FILTER LOCK WASHER	1
110	A05620	AIR FILTER COVER	1
111	A05621	AIR FILTER	1
112	A05622	AIR FILTER BASE	1
113	A05623	CARBURETOR	1
114	A05624	CHOKE KNOB	1
115	A05625	SUPPORT RING	1
116	A05626	INTAKE-TUBE	1
117	A05627	INTAKE-TUBE SEALING GASKET	1

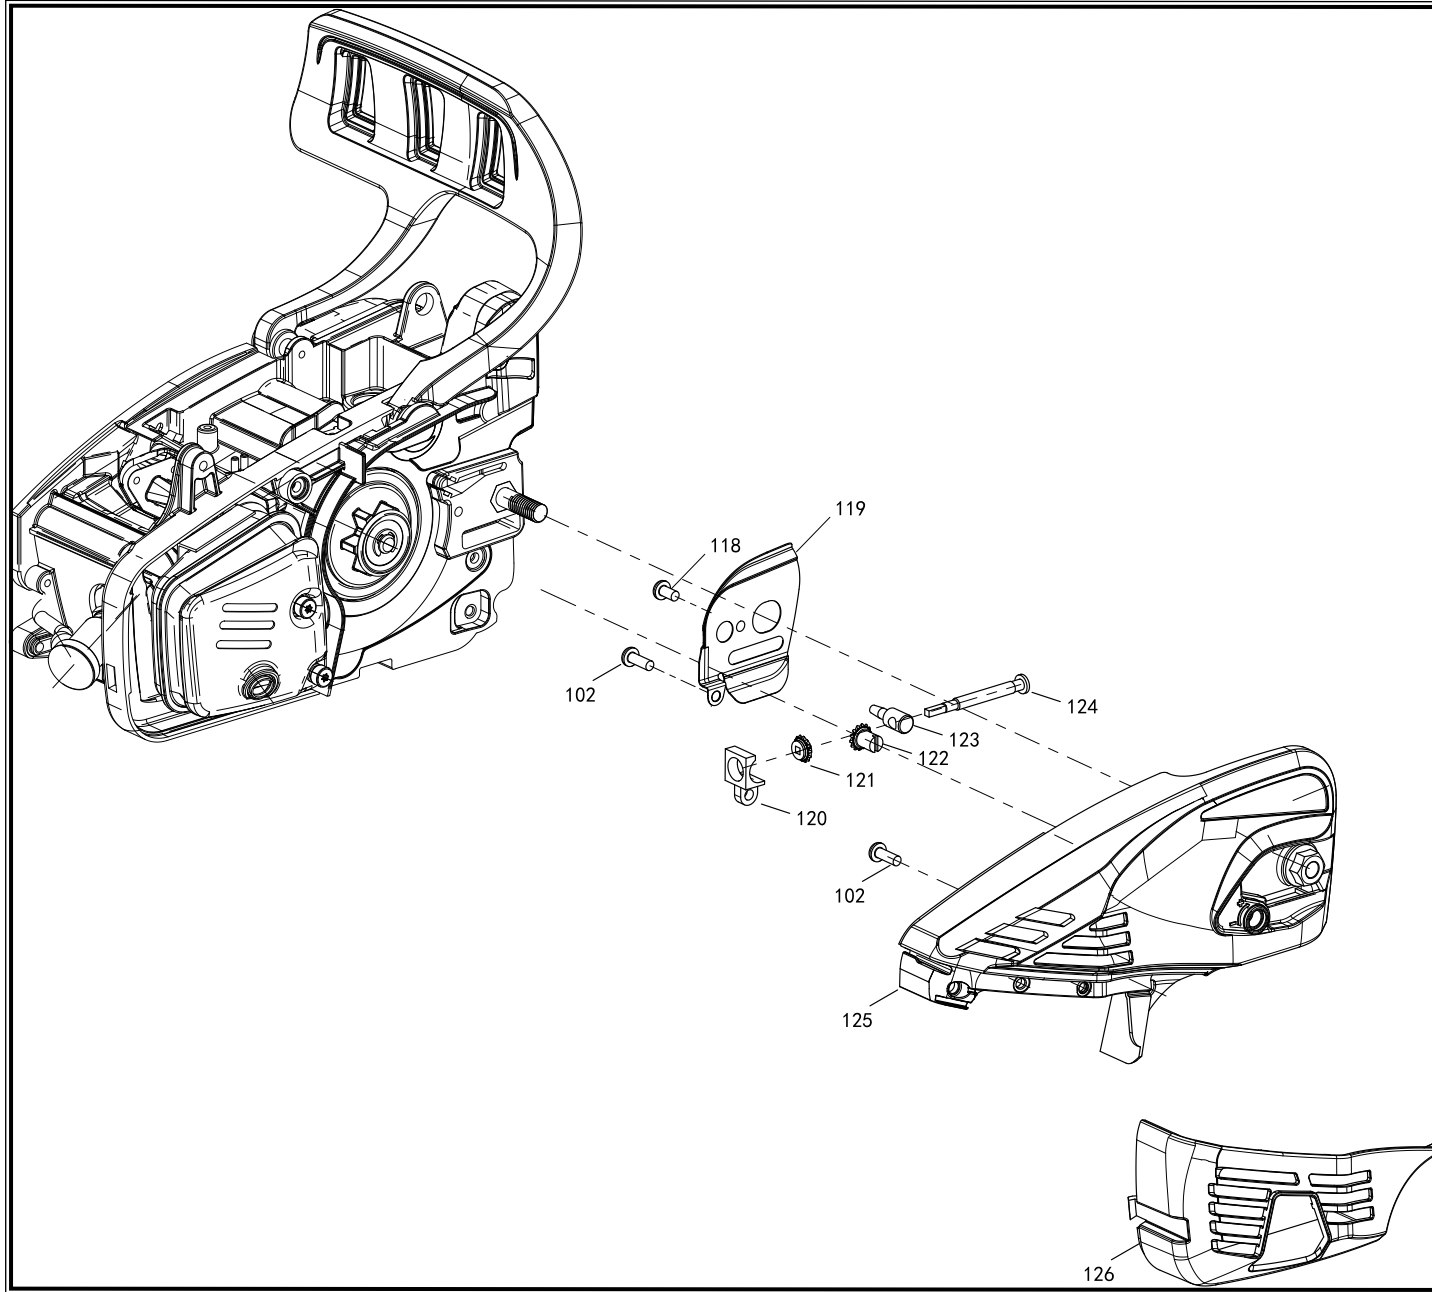

POS.	CODE	DESCRIPTION	QTY
102	A05612	SCREW ST4.2X12	2
118	A05540	TAPPING SCREW ST4.2X8	1
119	A05629	TENSIONER COVER	1
120	A05630	GEAR BASE	1
121	A05631	PASSIVE TENSIONER GEAR	1
122	A05632	INITIATIVE TENSIONER GEAR	1
123	A05633	TENSIONER BLOCK	1
124	A05634	TENSIONER SCREW	1
125	A05635	CLUTCH COVER	1
126	A05636	MUFFLER COVER	1

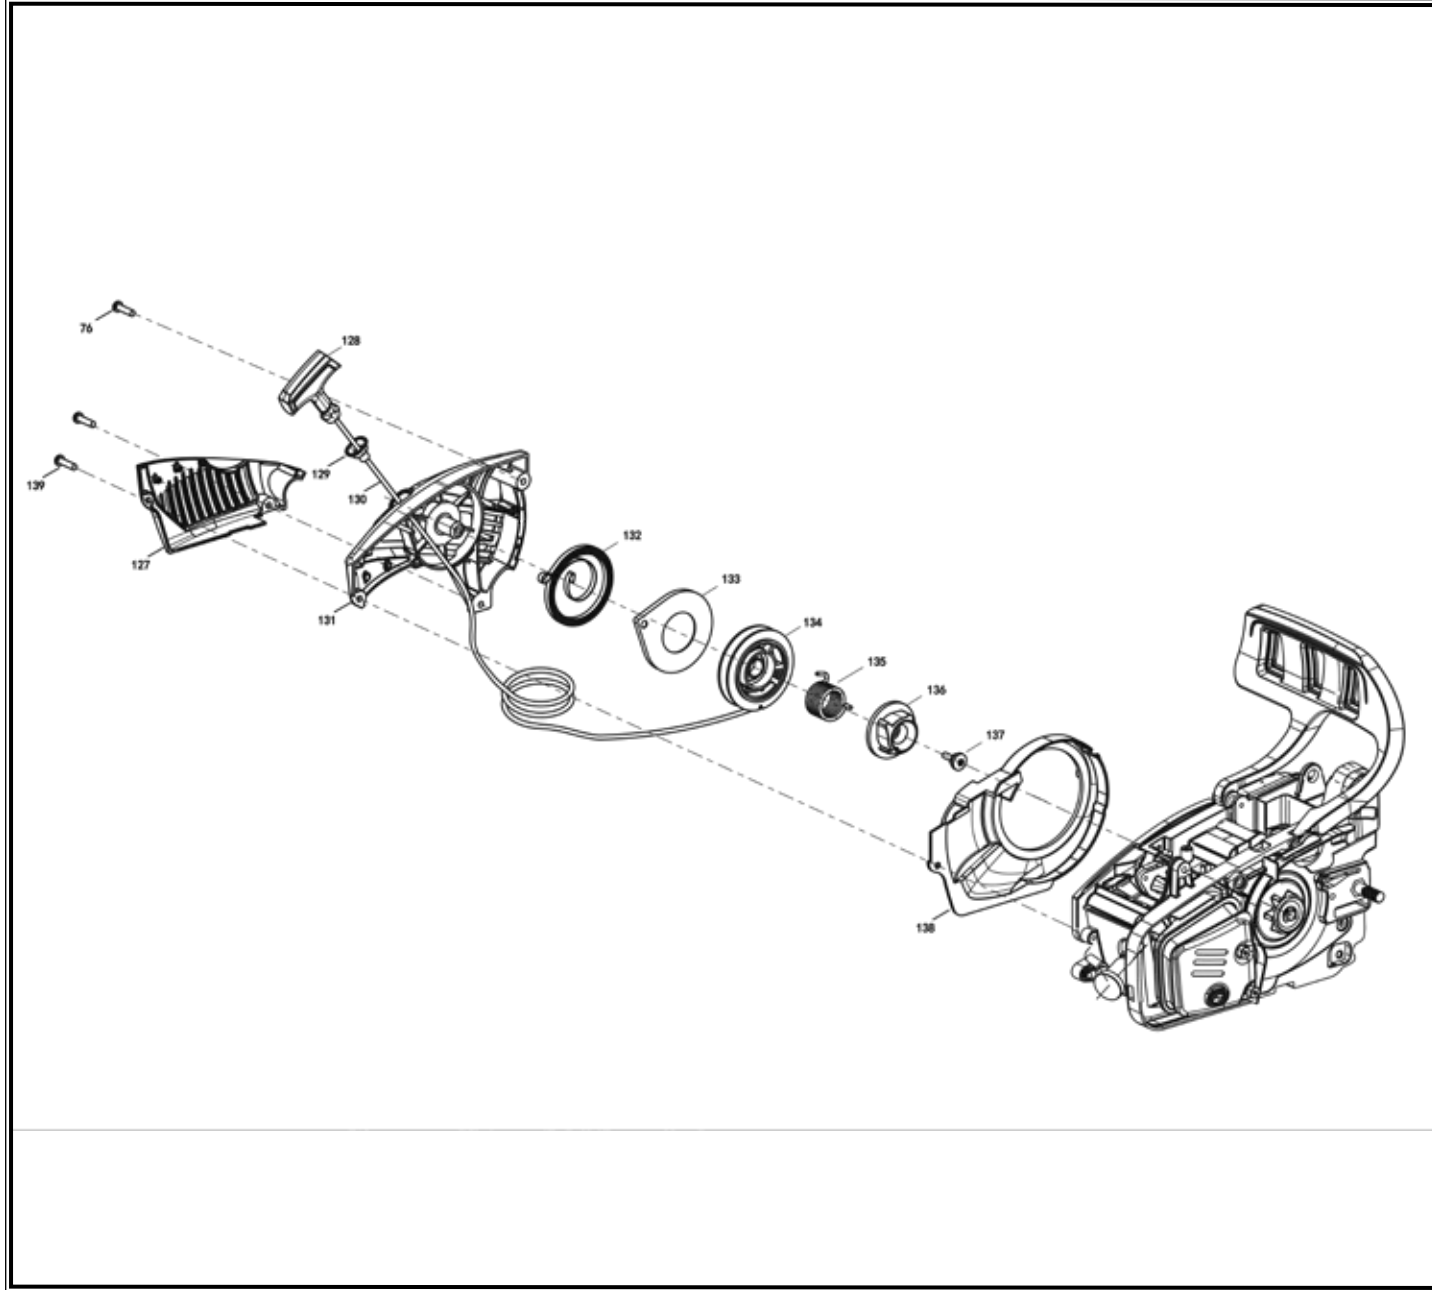

POS.	CODE	DESCRIPTION	QTY
76	A05586	SCREW ST4.2X16	3
127	A05637	START COVER	1
128	A05638	STARTER HANDLE	1
129	A05639	SHEATH OF ROPE	1
130	A05733	STARTER ROPE	1
131	A05641	START COVER	1
132	A05642	STARTER SPRING	1
133	A05643	STARTER SPRING COVER	1
134	A05734	ROPE WHEEL	1
135	A05645	RATCHET SPRING	1
136	A05736	RATCHET	1
137	A05647	START SCREW	1
138	A05648	FLOW GUIDING COVER	1
139	A08064	SCREW ST4.2X22	2