



POS.	CODE	DESCRIPTION	QTY
1	A00541	SCREW	11
2	A00551	BRAND	1
3	A09257	RIGHT PROTECTIVE COVER	1
4	A00566	SCREW	2
5	A00565	LOCATION SLEEVE	1
6	A00567	TORSIONAL SPRING	1
7	A00564	BLADE GUIDE	1
8	A00568	BLADE SUPPORTER	1
9	A09258	RIGHT HOUSING	1
10	A00554	SPRING	1
11	A00553	DUST BLOCK	1
12	39619	BEARING 608-2RS	2
13	A09259	STATOR	1
14	A00563	WASHER Ø4	2
15	A00573	SCREW	2
16	A00544	SWITCH	1
17	A00543	CAPACITANCE	1
18	A09263	NEON LIGHT COVER	1
19	A00540	POWER CORD PROTECTIVE TUBE	1
20	39387	POWER CORD	1
21	A00542	TENSION DISC	1
22	A00545	LAMP BEAD	1
23	A09260	COPPER BRUSH HOLDER	2
24	A09261	ELECTRIC BRUSH	2
25	A09262	ROTOR	1
26	A00560	AIR DEFLECTOR	1
27	A00552	DUST ADJUST TURNING PLATE	1
28	42615	BEARING 606-2RS	1
29	A09256	BLADE ASSEMBLY	1

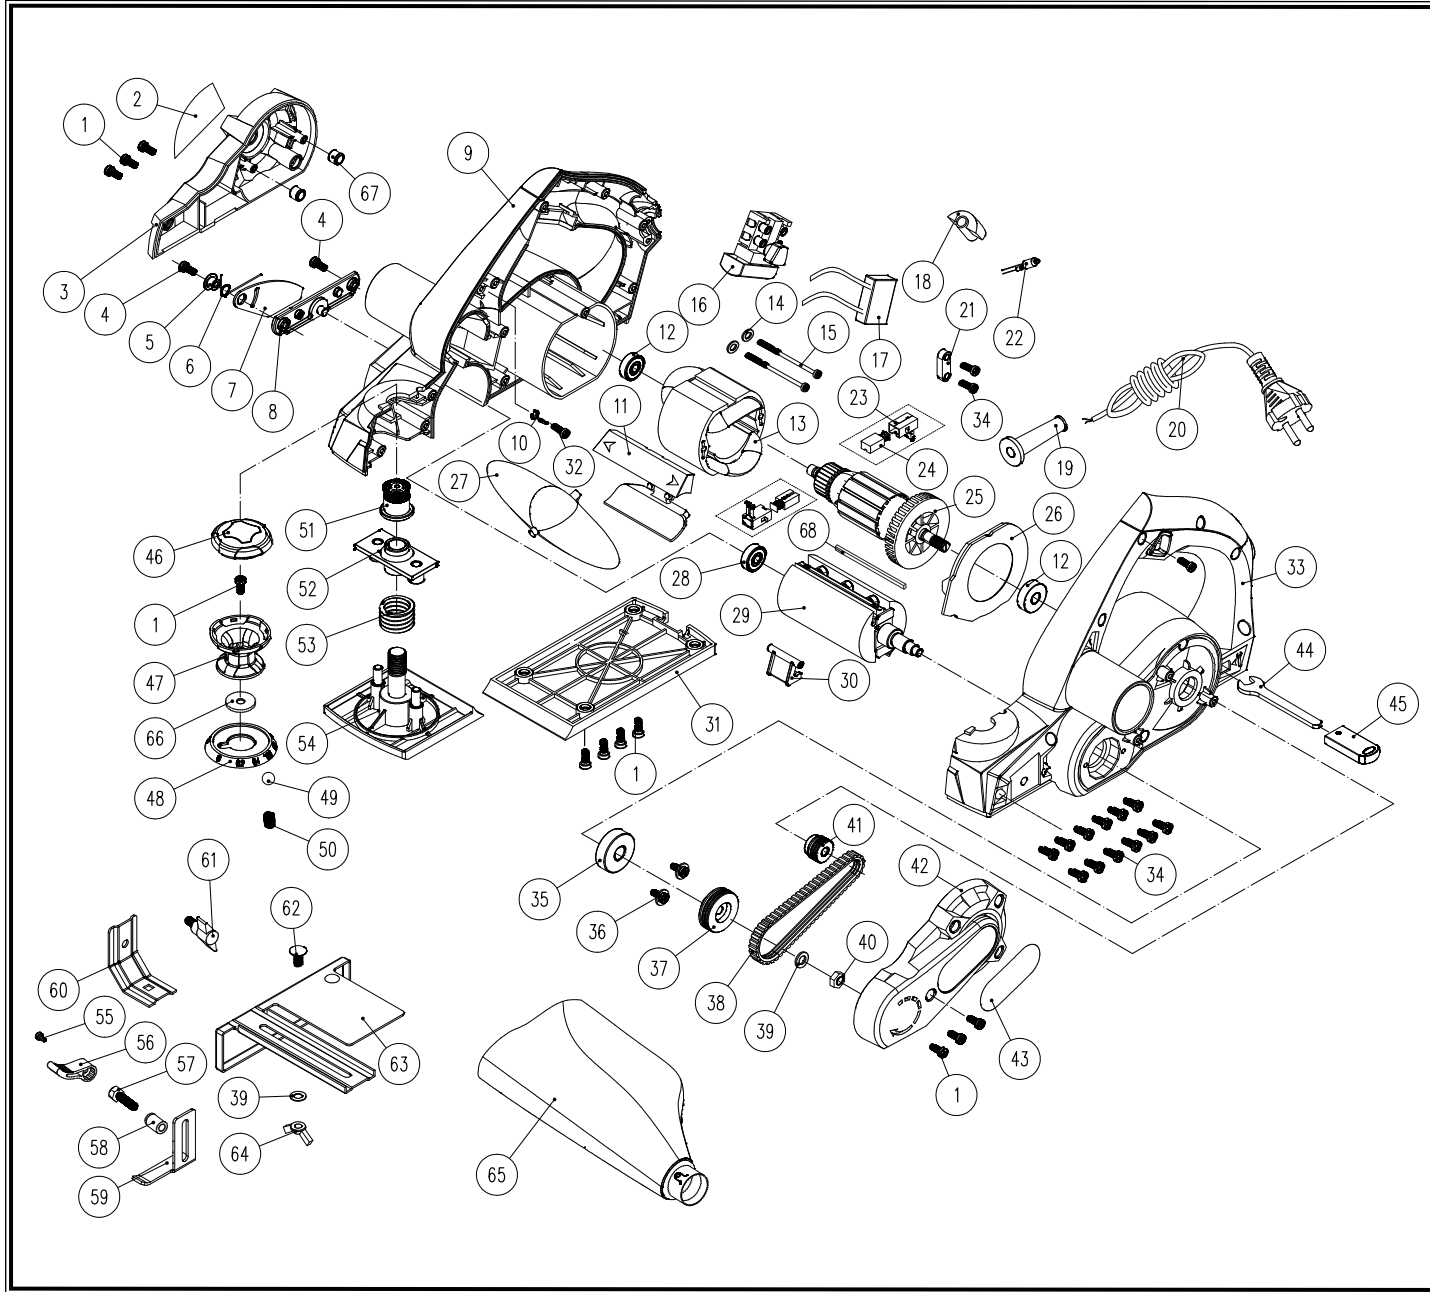

POS.	CODE	DESCRIPTION	QTY
30	A00557	PROTECTIVE BLADE SUPPORT	1
31	A00555	BASEPLATE	1
32	A00605	SCREW	1
33	A09265	LEFT HOUSING	1
34	A00586	SCREW	14
35	39626	BEARING 6200-2RS	1
36	A00558	SCREW	2
37	A09266	DRIVEN WHEEL	1
38	A00582	BELT	1
39	A00588	WASHER Ø6	2
40	A00587	NUT	1
41	A09268	DRIVING WHEEL	1
42	A09269	BELT COVER	1
43	A00590	BRAND	1
44	A00576	WRENCH	1
45	A00577	WRENCH BOX	1
46	A09270	ADJUST KNOB COVER	1
47	A09271	ADJUST KNOB BASE	1
48	A00595	DIAL	1
49	A09273	STEEL BALL	1
50	A09274	SPRING	1
51	A09275	NUT	1
52	A09276	ADJUST SUPPORT	1
53	A09277	ADJUST SPRING	1
54	A09278	ADJUST BASEPLATE	1
55	A00606	SCREW	1
56	A00607	LOCK KNOB	1
57	A00608	SCREW	1
58	A00609	LOCK WASHER	1

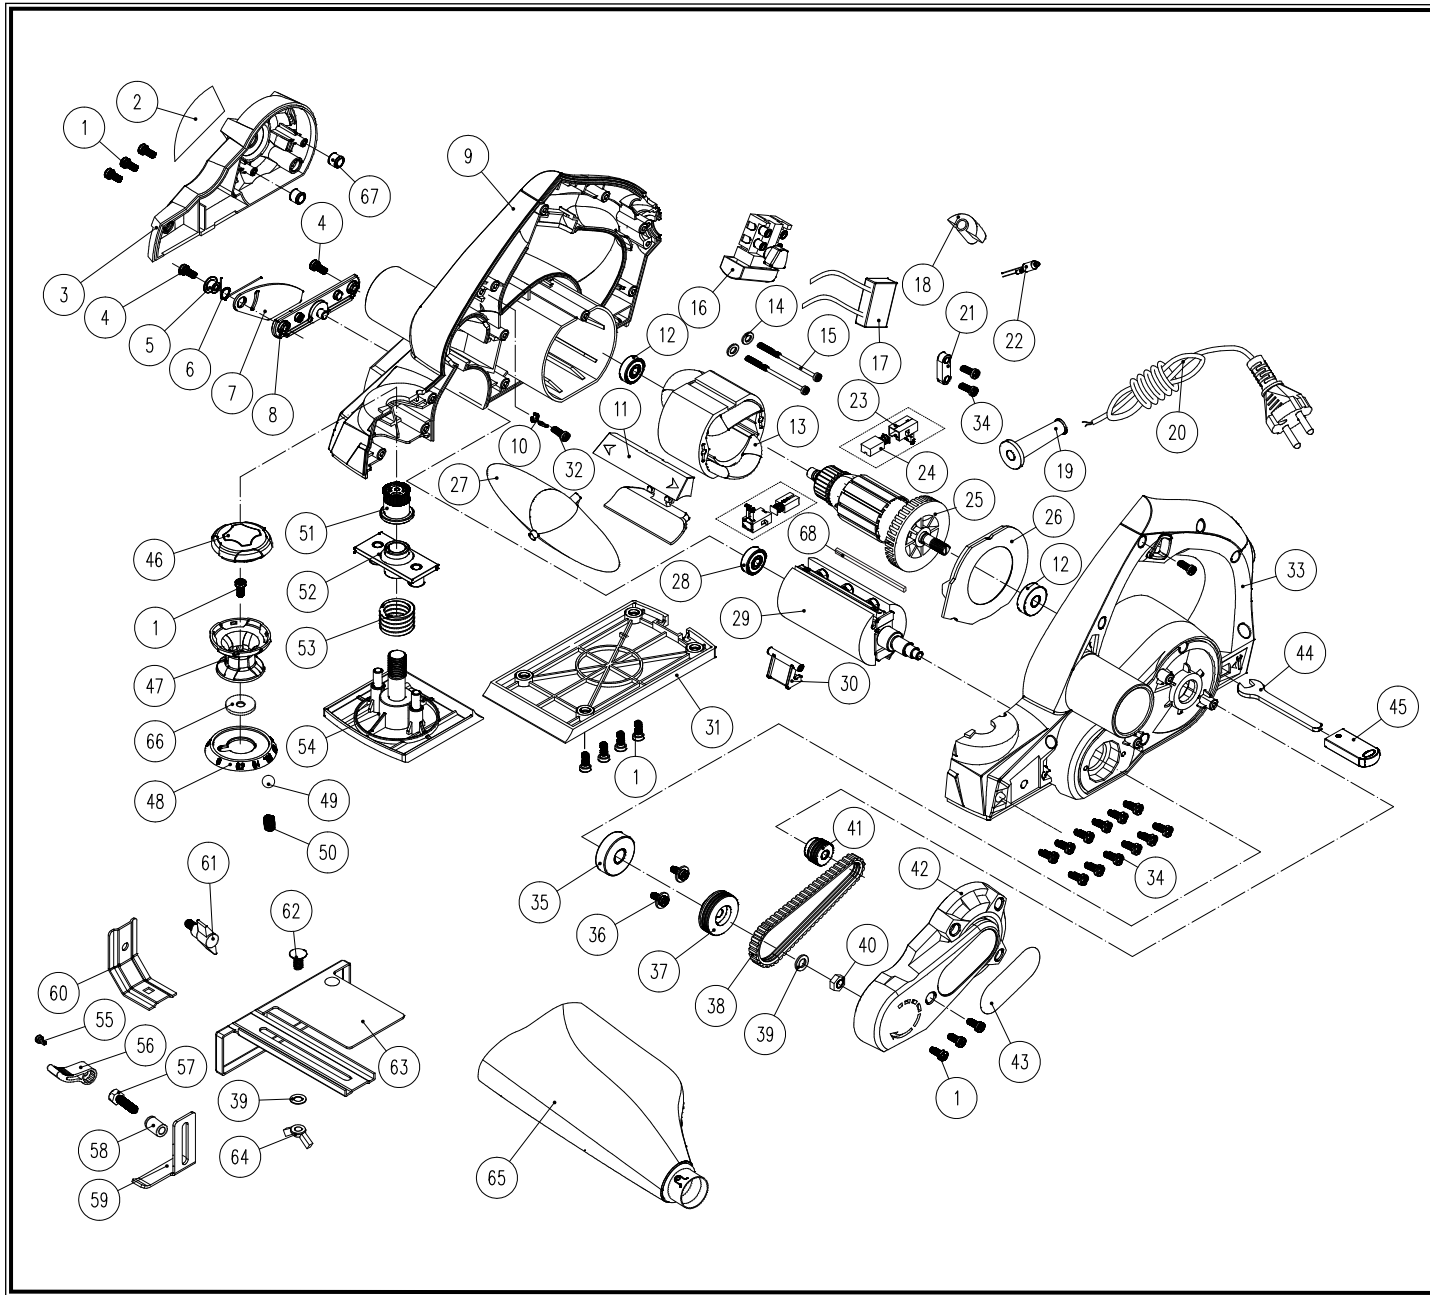

POS.	CODE	DESCRIPTION	QTY
59	A00610	DEPTH PANEL	1
60	A00615	FIX SUPPORT	1
61	A00614	SCREW	1
62	A00612	BOLT	1
63	A00613	PARALLEL GUIDE	1
64	A00611	NUT	1
65	A09279	DUST BAG	1
66	A09280	PAPER GASKET	1
67	A00549	ELECTRIC BRUSH PRESSURE COLUMN	2
68	A00619	BLADES (SET 2pcs)	