

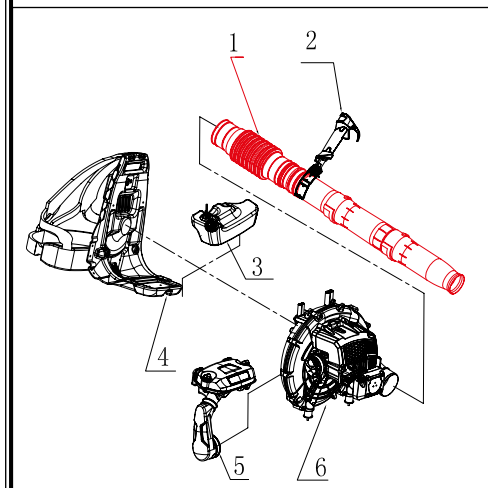
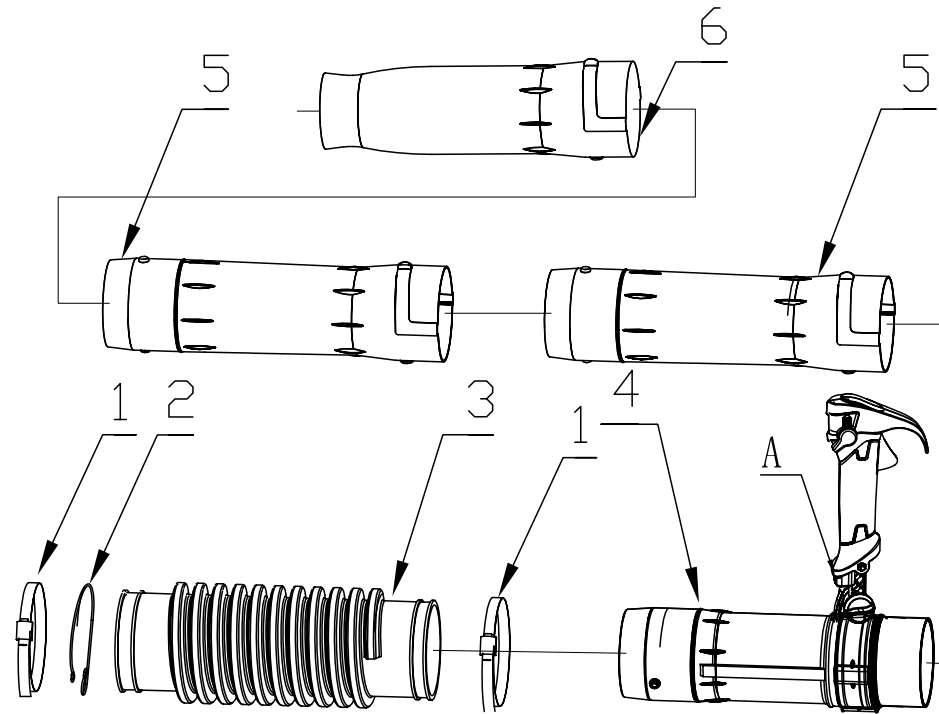


TABLE 1

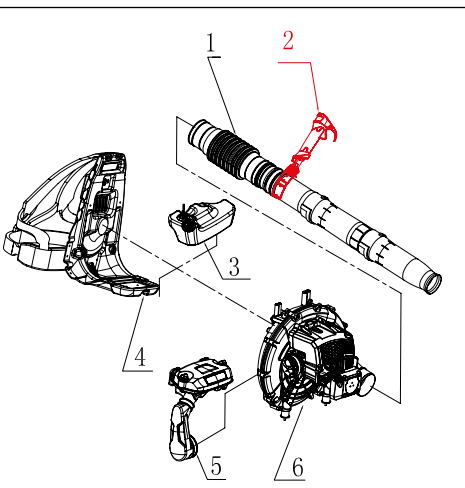



POS.	CODE	DESCRIPTION	QTY
1	A06264	CLAMP Ø90--Ø110	2
2	A06192	CORRUGATED PIPE RING	1
3	A06261	PIPE	1
4	A06265	BLOW PIPE (BACK)	1
5	A06262	BLOW PIPE (MIDDLE)	2
6	A06263	BLOW PIPE (FRONT)	1

TABLE 2

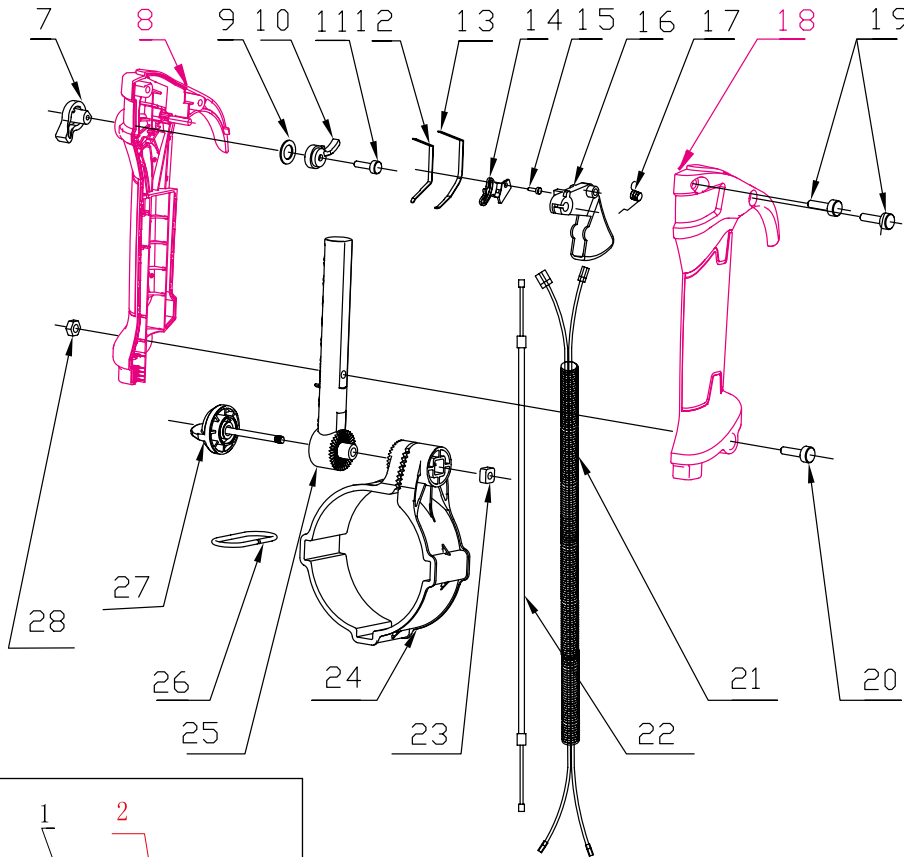


POS.	CODE	DESCRIPTION	QTY
7	A06251	SPEED KONB	1
<b>SET 1 (8+18)</b>	A06257	RIGHT +LEFT COVER	1
9	A0605	WASHER	1
10	A06250	CRUISE CONTROL LEVER	1
11	A05693	SCREW 4×16	1
12	A06254	LEAF A	1
13	A06255	LEAF B	1
14	A06253	LIMIT PLATE	1
15	A06283	SCREW 3.5×6	1
16	A06252	THROTTLE PUSH ROD	1
17	A06256	TRIGGER SPRING	1
19	A05981	SCREW 5.0×14	2
20	A05995	SCREW M5X40	1
21	A06259	OFF LINE	1
22	A06260	THROTTLE CABLE	1
23	A06278	NUT M5	1
24	A06248	HANDLE SEAT FIXING RING	1
25	A06247	HANDLE SEAT	1
26	A06249	CONNECTING SHACKLE	1
27	A06216	LOCKING KONB	1
28	A06279	NUT M5	1

TABLE 3

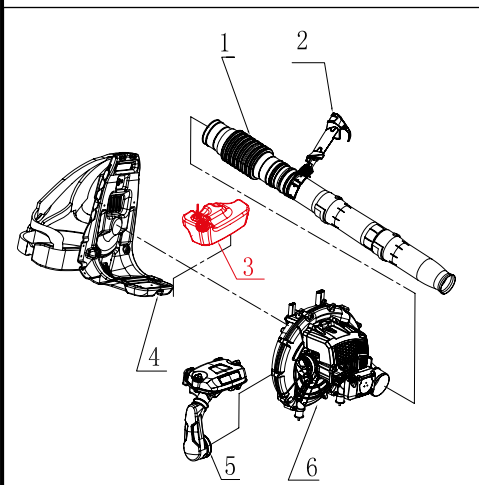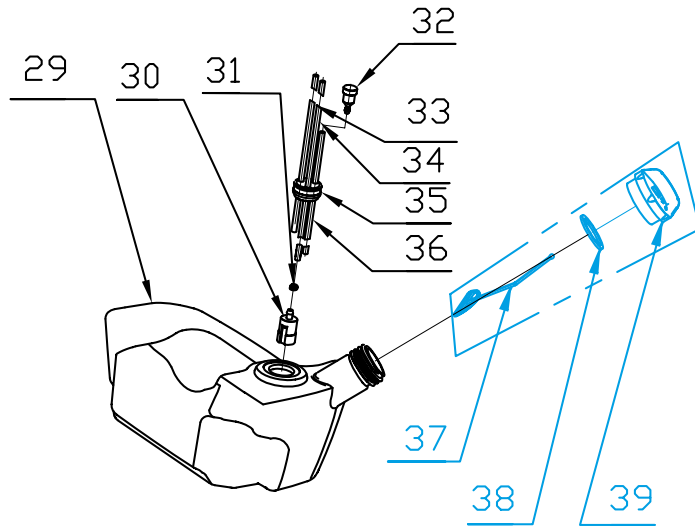

POS.	CODE	DESCRIPTION	QTY
29	A06222	FUEL TANK	1
30	A06021	FILTER FUEL	1
31	A05712	CLIP	1
32	A05554	BALANCER	1
33	A06224	FUEL TUBE	1
34	A06223	OIL RETURN PIPE	1
35	A06036	FUEL TUBE	1
36	A06446	RETAINER FUEL TUBE	1
<b>SET 2 37-39</b>	A04839	FUEL TANK CAP ASSEMBLY	1

TABLE 4

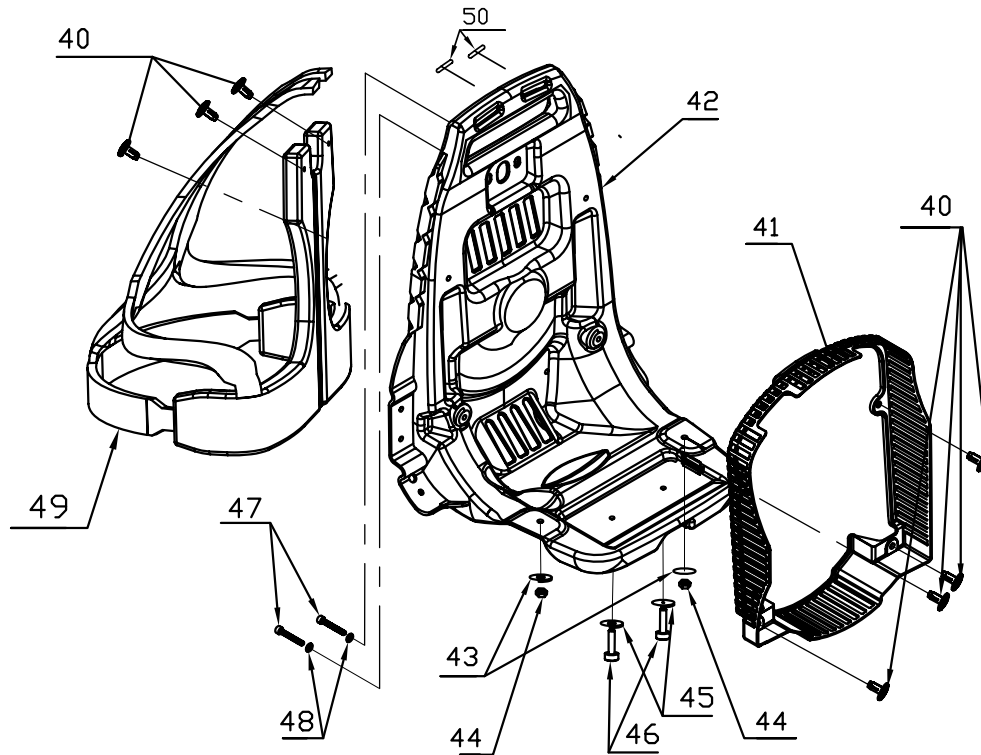

POS.	CODE	DESCRIPTION	QTY
40	A06269	PLASTIC-SCREW	7
41	A06267	PROTECTIVE FRAME	1
42	A06266	BACKPACK	1
43	A06284	WASHER Ø6	2
44	A06281	NUT M6	2
45	A06003	WASHER	2
46	A05988	SCREW M5X12	2
47	A05984	SCREW M5X20	2
48	A06027	WASHER	2
49	A06270	BACKING	1
50	A06268	BACK CUSHION HANGIGB BUCKLE	2




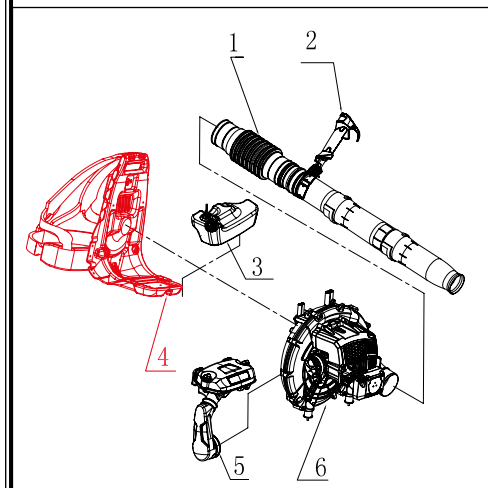


TABLE 5

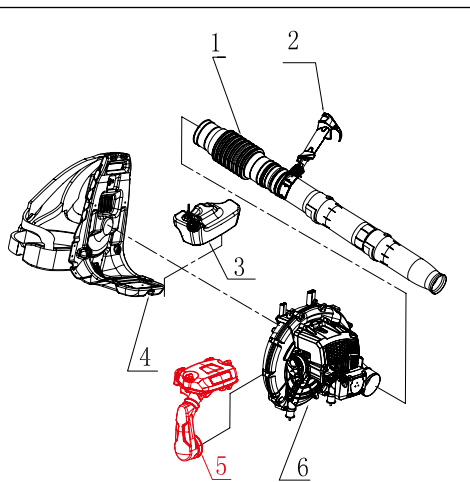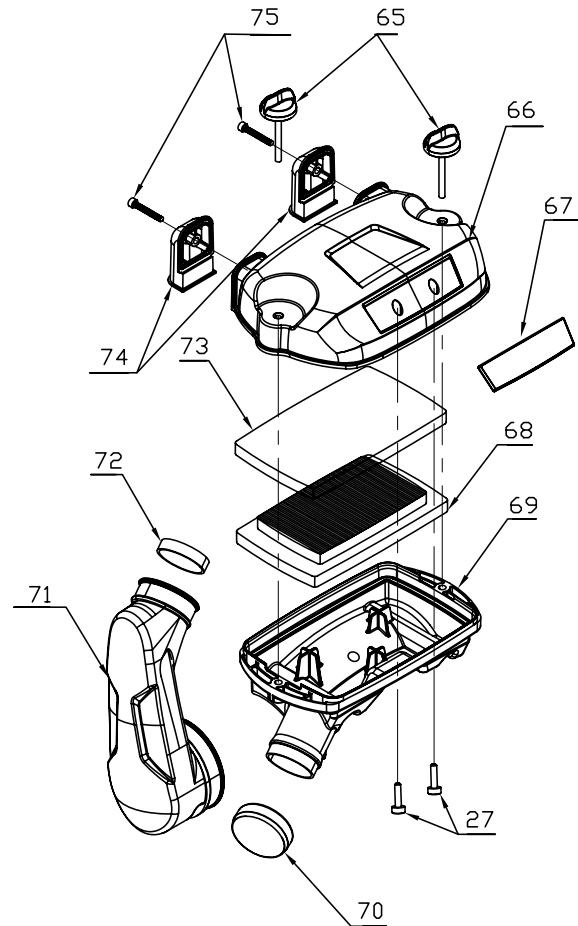

POS.	CODE	DESCRIPTION	QTY
27	A05993	SCREW M4X14	2
65	A06216	LOCKING KONB	2
66	A06209	AIR FILTER UP COVER	1
67	A06211	LOGO	1
68	A06207	PAPER FILTER ELEMENT	1
69	A06215	AIR FILTER LOWER COVER	1
70	A06213	VICTAULIC Ø80--Ø100	1
71	A06206	DRAFT PIPE	1
72	A06212	VICTAULIC Ø44--Ø64	1
73	A06208	FILTER SPONGE	1
74	A06210	AIR FILYER SIDE COVER	2

TABLE 6

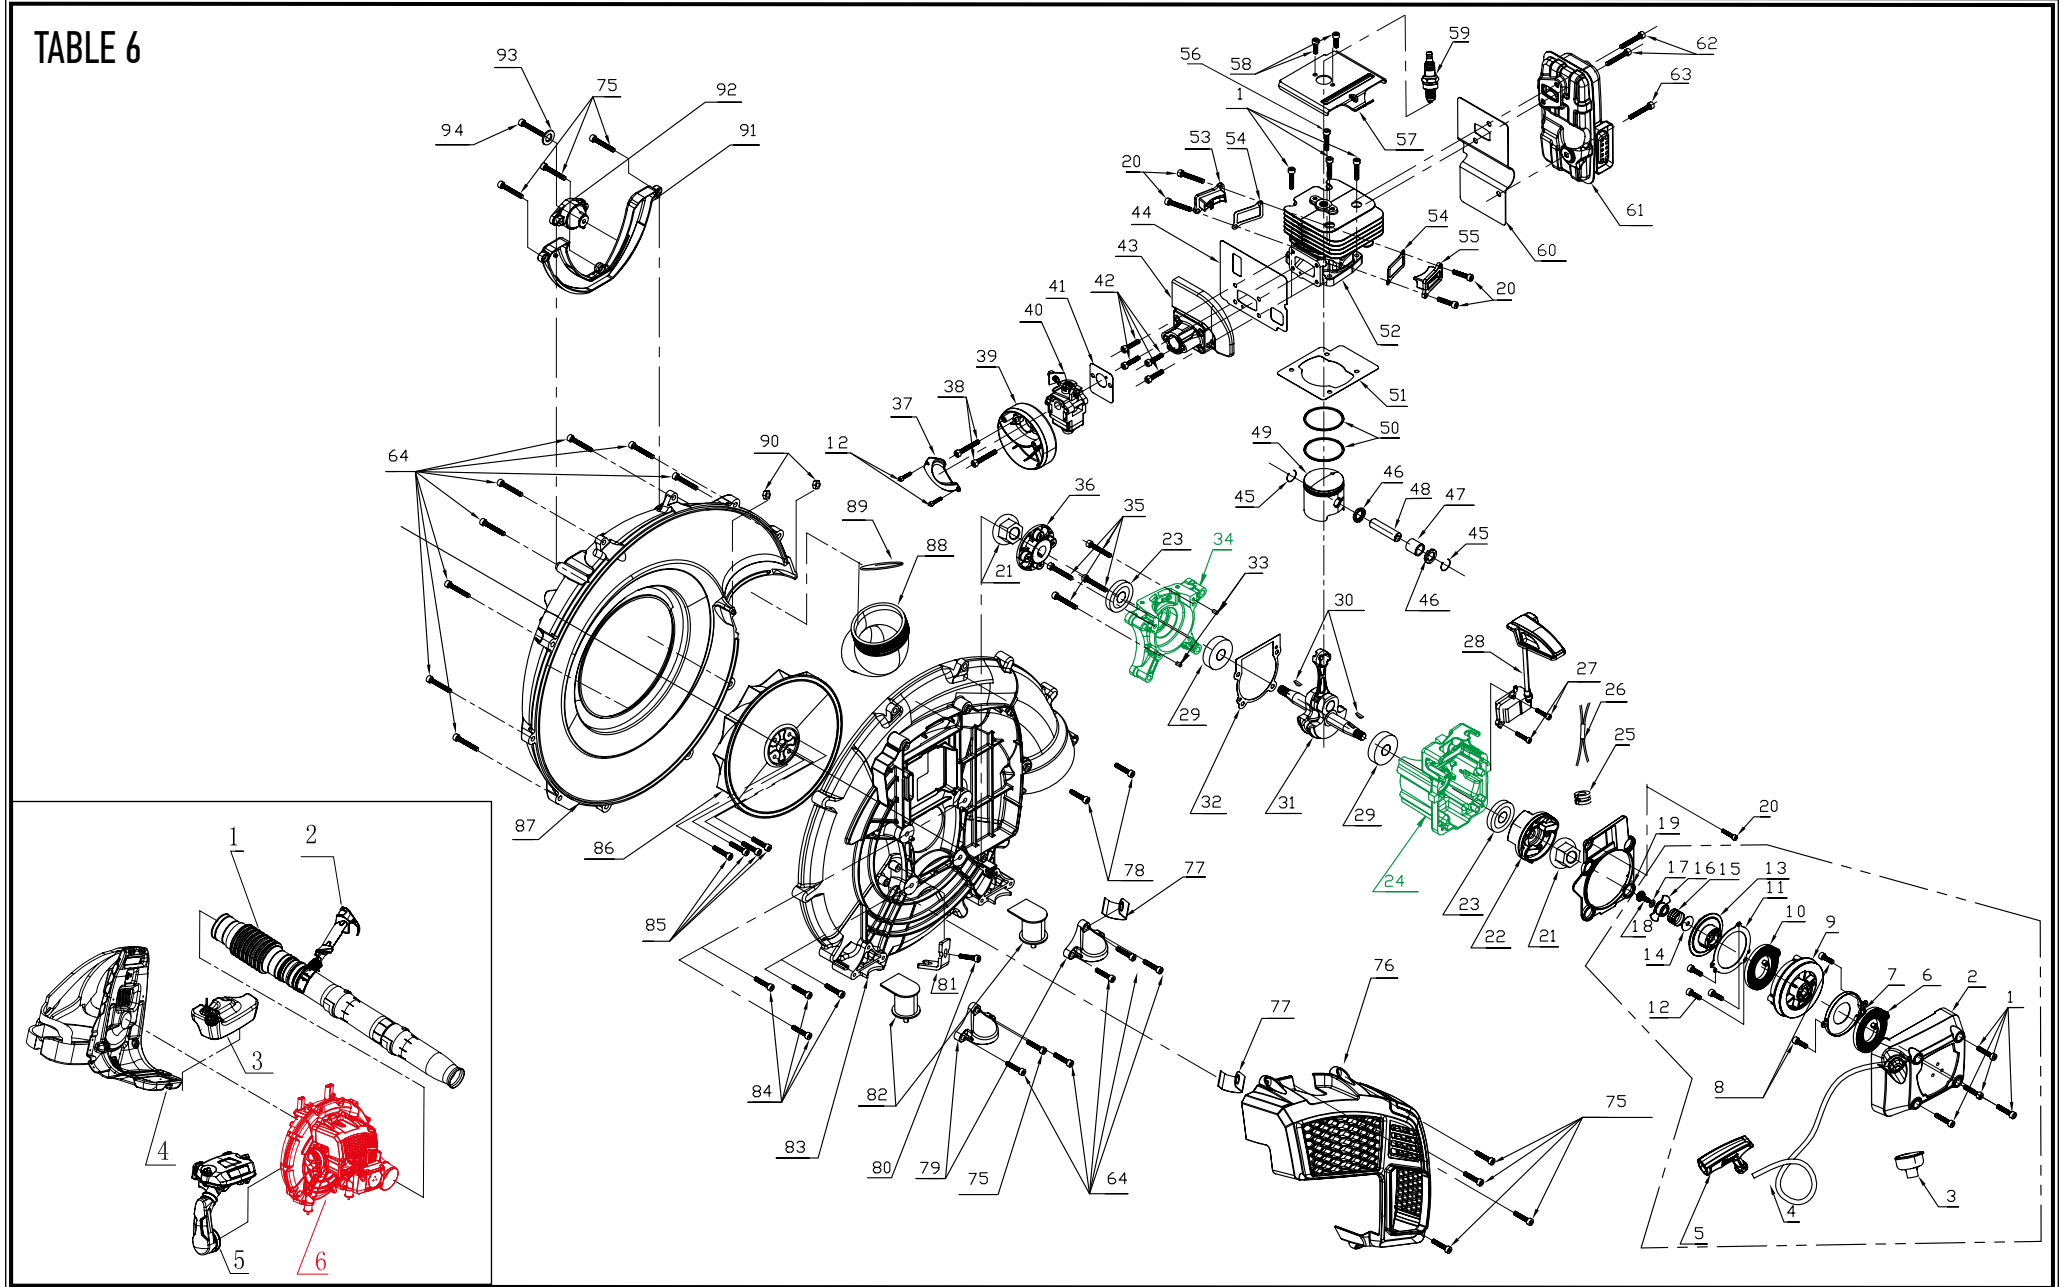

POS.	CODE	DESCRIPTION	QTY
1	A05985	SCREW M5X25	7
2	A06225	START HOUSING	1
3	A05727	EYELET	1
4	A06040	START ROPE	1
5	A06026	START GRIP	1
6	A06235	COIL SPRING	1
7	A06228	PLATE	1
8	A05969	ST SCREW 3.5×6	2
9	A06226	START PULLEY	1
10	A06234	COIL SPRING	1
11	A06232	SPRING PLATE	1
12	A05972	SCREW 4.2×9.5	5
13	A06227	RATCHET	1
14	A06229	WASHER	1
15	A06230	SPRING	1
16	A06231	RATCHET GLAND	1
17	A06236	ANTI WEAR GASKET	1
18	A06233	STARTER SCREW	1
19	A06191	SEPARATOR	1
20	A05977	SCREW M4X12	6
21	A05996	NUT M10	2
22	A06221	MAGNETO ROTOR	1
23	A06032	OIL-SEAL 15×30×7	2
<b>SET 3 (24+34)</b>	A06195	CRANKCASE	1
25	A06219	ROUND PLUG	1
26	A06220	SHORTER LINE	1
27	A05993	SCREW M4X14	2

POS.	CODE	DESCRIPTION	QTY
28	A06218	IGNITION	1
29	A06009	BALL BEARING 6302	2
30	A05519	KEY	2
31	A06204	CRANK SHAFT ASSEMBLY	1
32	A06197	CRANK CASE GASKET	1
33	A06274	PIN	2
35	A05994	SCREW M5X35	4
36	A06187	FAN MOUNT	1
37	A06205	OIL BAFFLE	1
38	A05989	SCREW M5X60	2
39	A06214	FILTER MOUNT	1
40	A06194	CARBURETOR	1
41	A06185	CARBURETOR GASKET	1
42	A05986	SCREW M5X30	4
43	A06193	ADMITTING PIPE	1
44	A06184	INLET PIPE SEALING GASKET	1
45	A06201	PISTON RING CIRCLIP	2
46	A06202	NEEDLE BEARING RING	2
47	A06203	BEARING	1
48	A06200	PISTON PIN	1
49	A06198	PISTON	1
50	A06199	PISTON RING	2
51	A06182	CYLINDER GASKET	1
52	A06190	CYLINDER	1
53	A06179	CYLINDER FRONT COVER	1
54	A06181	SIDE COVER GASKET	2
55	A06180	CYLINDER REAR COVER	1
56	A05984	SCREW M5×22	1

POS.	CODE	DESCRIPTION	QTY
57	A06183	AIR GUIDE	1
58	A05988	SCREW M5X12	2
59	A06012	SPARK PLUG	1
60	A06186	MUFFLER GASKET	1
61	A06217	MUFFLER	1
62	A05991	SCREW	2
63	A05992	SCREW	1
64	A05976	SCREW 5×25	13
75	A05980	SCREW 4.8×19	9
76	A06188	CYLINDER COVER	1
77	A06447	THROTTLE CLAMP	2
78	A06238	SCREW M5X70	2
79	A06028	ANTI STRIPPING COVER	2
80	A05948	SCREW 5×14	1
81	A06240	THROTTLE BRACKET	1
82	A06245	DAMPING RUBBER CASTING	2
83	A06244	HALF VOLUTE	1
84	A06189	SCREW M6X45	4
85	A05982	SCREW M6X25-10.9	4
86	A06246	WORM WHEEL	1
87	A06241	FRONT VOLUTE	1
88	A06239	ELBOW	1
89	A06277	O-RING	1
90	A06279	NUT M5	2
91	A05579	VOLUTE COVER	1
92	A06242	DAMPING DISC CASTING	1
93	A06243	RUBBER GASKET	1
94	A05994	SCREW M5X35	1