




POS.	CODE	DESCRIPTION	QTY
1	A05244	SCREW	1
2	A05245	OUTSIDE COVER	1
3	A05246	FILTER NET	1
4	A05247	SCREW 3X 8	1
5	A05248	SCREW M5 X 60	2
6	A05249	CHOKE	1
7	A05250	INSIDE COVER	1
8	A05251	CHOKE HANDLE	1
9	A05252	CARBURETOR	1
10	A05253	GASKET	1
11	A05385	SCREW M5X25	2
12	A05255	ADMITTING PIPE	1
13	A05256	GASKET	1
14	A05257	OIL SEAL	2
15	A05379	SCREW M5X12	4
16	A05259	CRANK CASE GASKET	1
17	A05260	PIN	2
18	A05261	BEARING 6001-P6	2
19	A05262	NEEDLE BEARING	1
20	A05263	CRANK SHAFT COMP.	1
21	A05264	KEY	1
22	A05265	PISTON	1
23	A05266	PISTON PIN	1
24	A05267	PISTON PIN CIRCLIP	2
25	A05268	PISTON RING	2
26	A05269	GASKET	1
27	A05270	CYLINDER	1
28	A05271	SCREW M5X16	4
29	A05272	PLUG	1

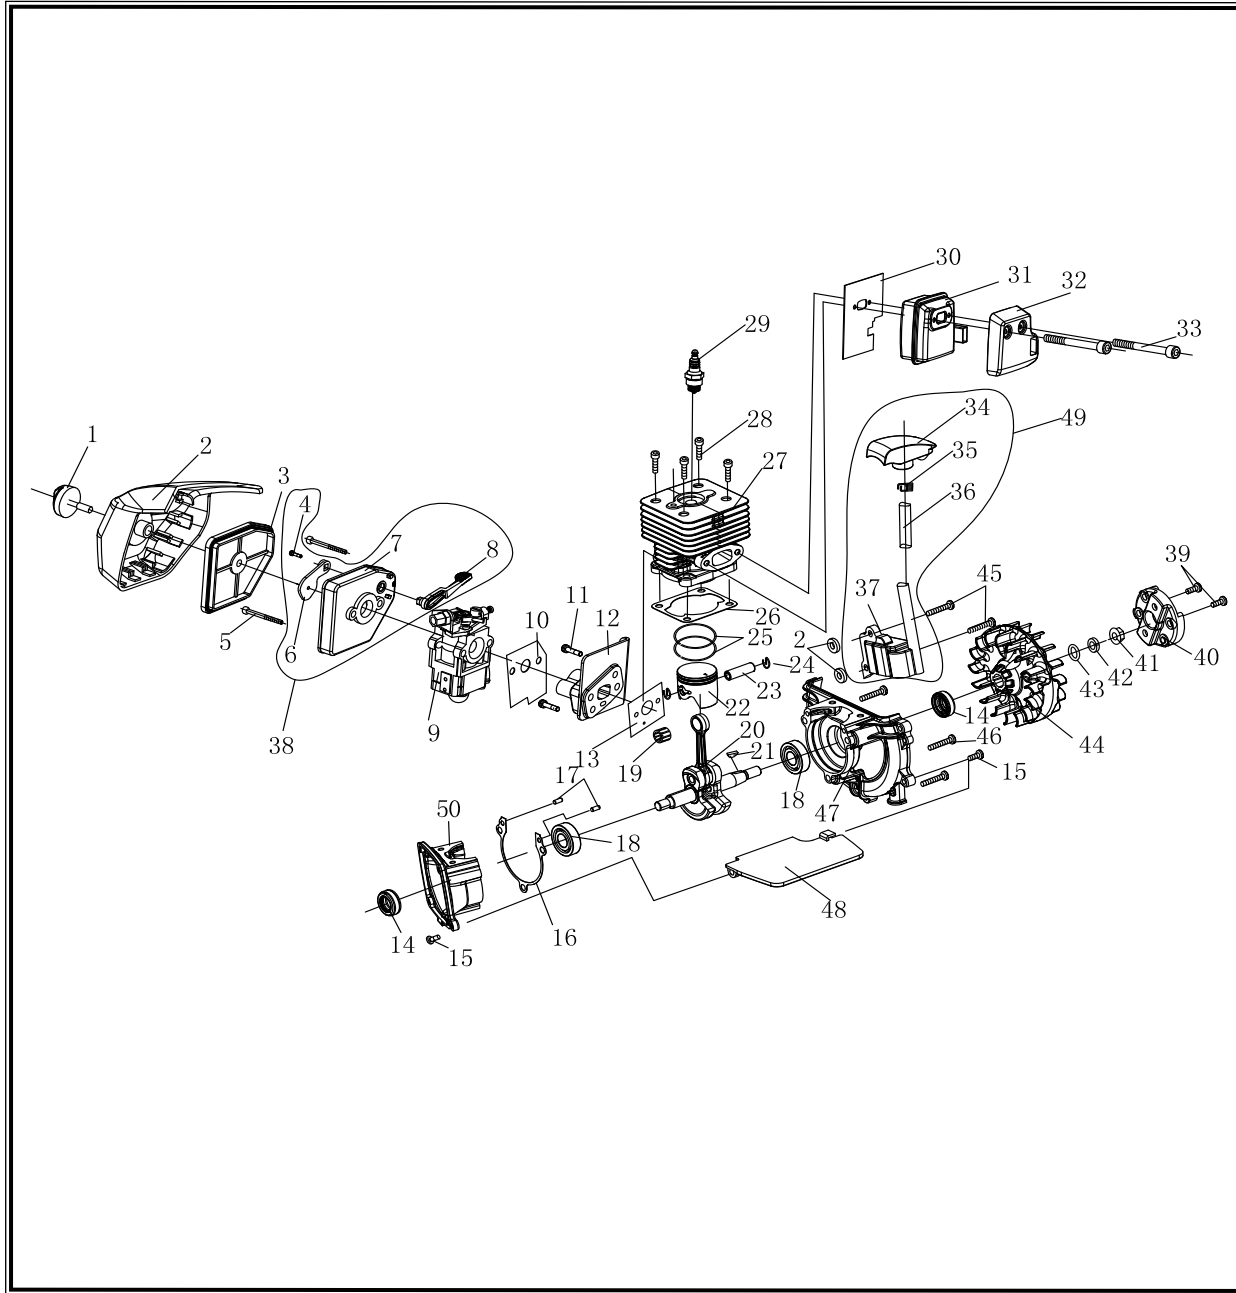

POS.	CODE	DESCRIPTION	QTY
30	A05273	MUFFLER GASKET	1
31	A05274	MUFFLER	1
32	A05275	MUFFLER COVER	1
33	A05276	SCREW M5X55	2
34	A05277	CAP	1
35	A05278	SPRING	1
36	A05279	PIPE 6X60	1
37	A05280	IGNITION COIL	1
38	A05281	INSIDE COVER ASSEMBLY	1
39	A05282	SCREW M6X16	2
40	A05283	START REEL	1
41	A05284	NUT M8	1
42	A05285	WASHER	1
43	A05286	WASHER	1
44	A05287	FLY WHEEL	1
45	A05288	SCREW M4X20	2
46	A05398	SCREW M5X20	3
47	A05290	REAR HALF CRANK CASE	1
48	A05291	GASKET	1
49	A05292	IGNITION COIL COMP	1
50	A05293	FRONT HALF CRANK CASE	1

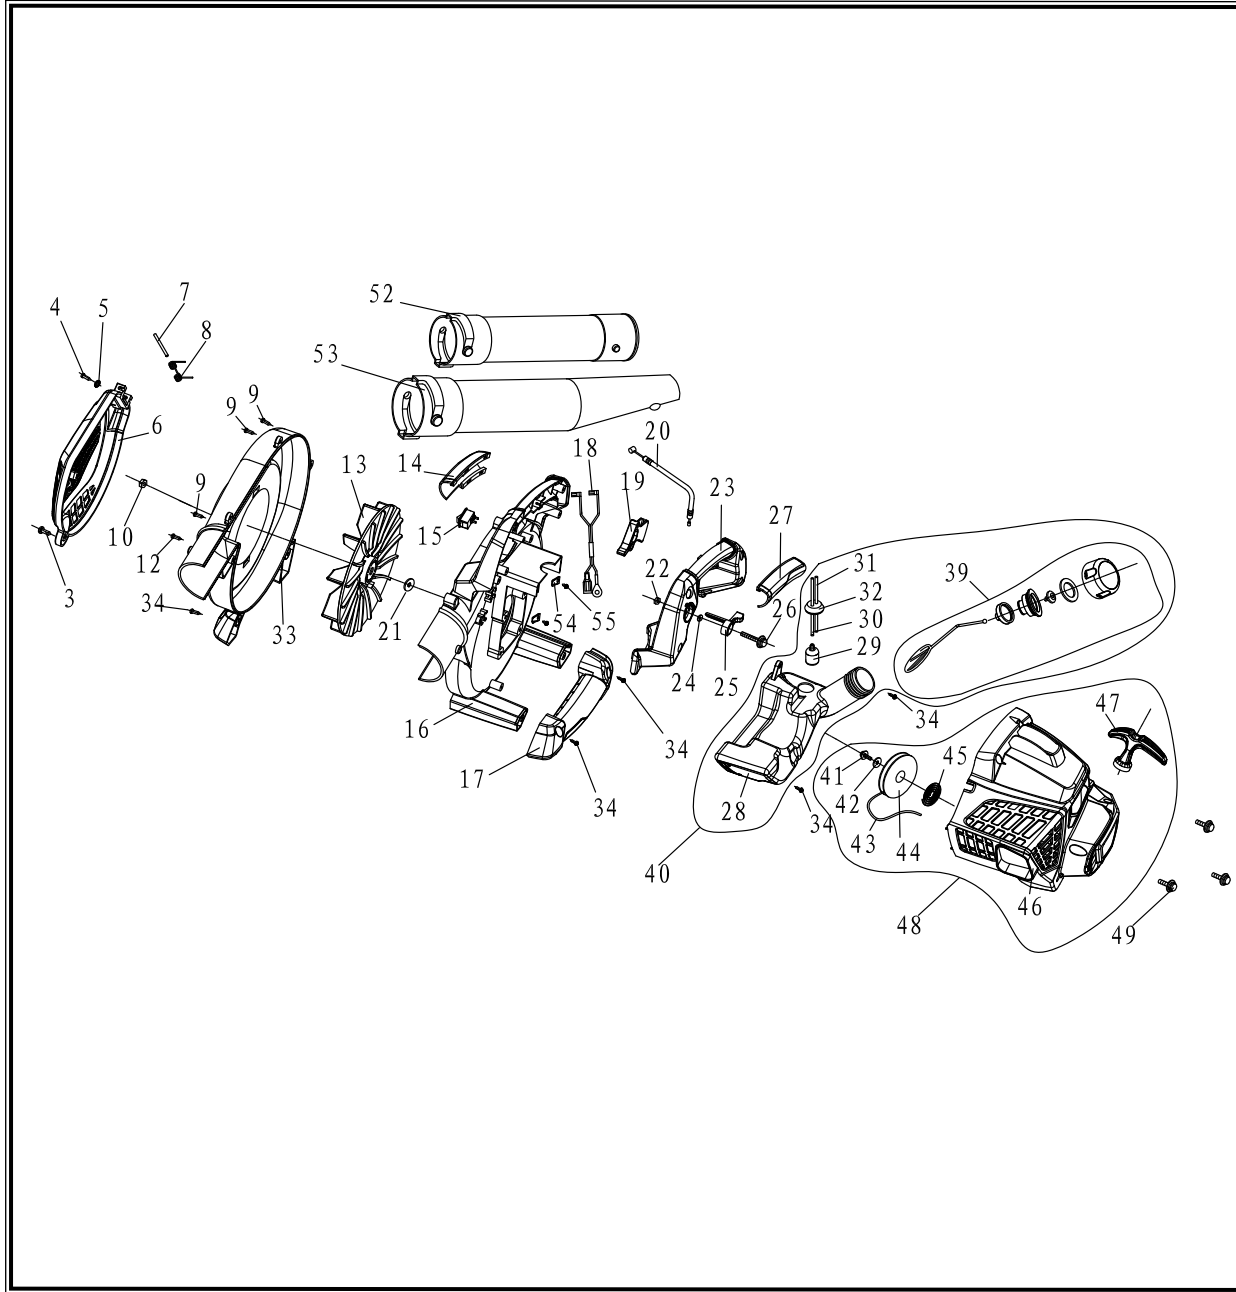

POS.	CODE	DESCRIPTION	QTY
3	A05296	SCREW M5X10	1
4	A05297	SCREW M5X16	1
5	A05298	WASHER	1
6	A05299	PROTECTION	1
7	A05300	SPING SCREW	1
8	A05301	SPING	1
9	A05305	SCREW M5X19	3
10	A05303	NUT M8	1
12	A05305	SCREW M5X22	1
13	A05306	IMPELLER	1
14	A05307	HANDLE COVER (2)	1
15	A05308	STOP SWITCH	1
16	A05309	FRONT VALUTE CASE	1
17	A05310	HANDLE	1
18	A05311	STOP WIRE	1
19	A05312	CONTROL HANDLE	1
20	A05313	FUEL THROTTLE	1
21	A05314	WASHER	1
22	A05315	NUT M5	1
23	A05316	HANDLE	1
24	A05317	WASHER	1
25	A05318	CONTROL HANDLE	1
26	A05319	SCREW M5X20	1
27	A05320	HANDLE COVER(1)	1
28	A05321	FUEL TANK	1
29	A05404	FILTER	1
30	A05323	FUEL PIPE	1
31	A05324	FUEL PIPE	1

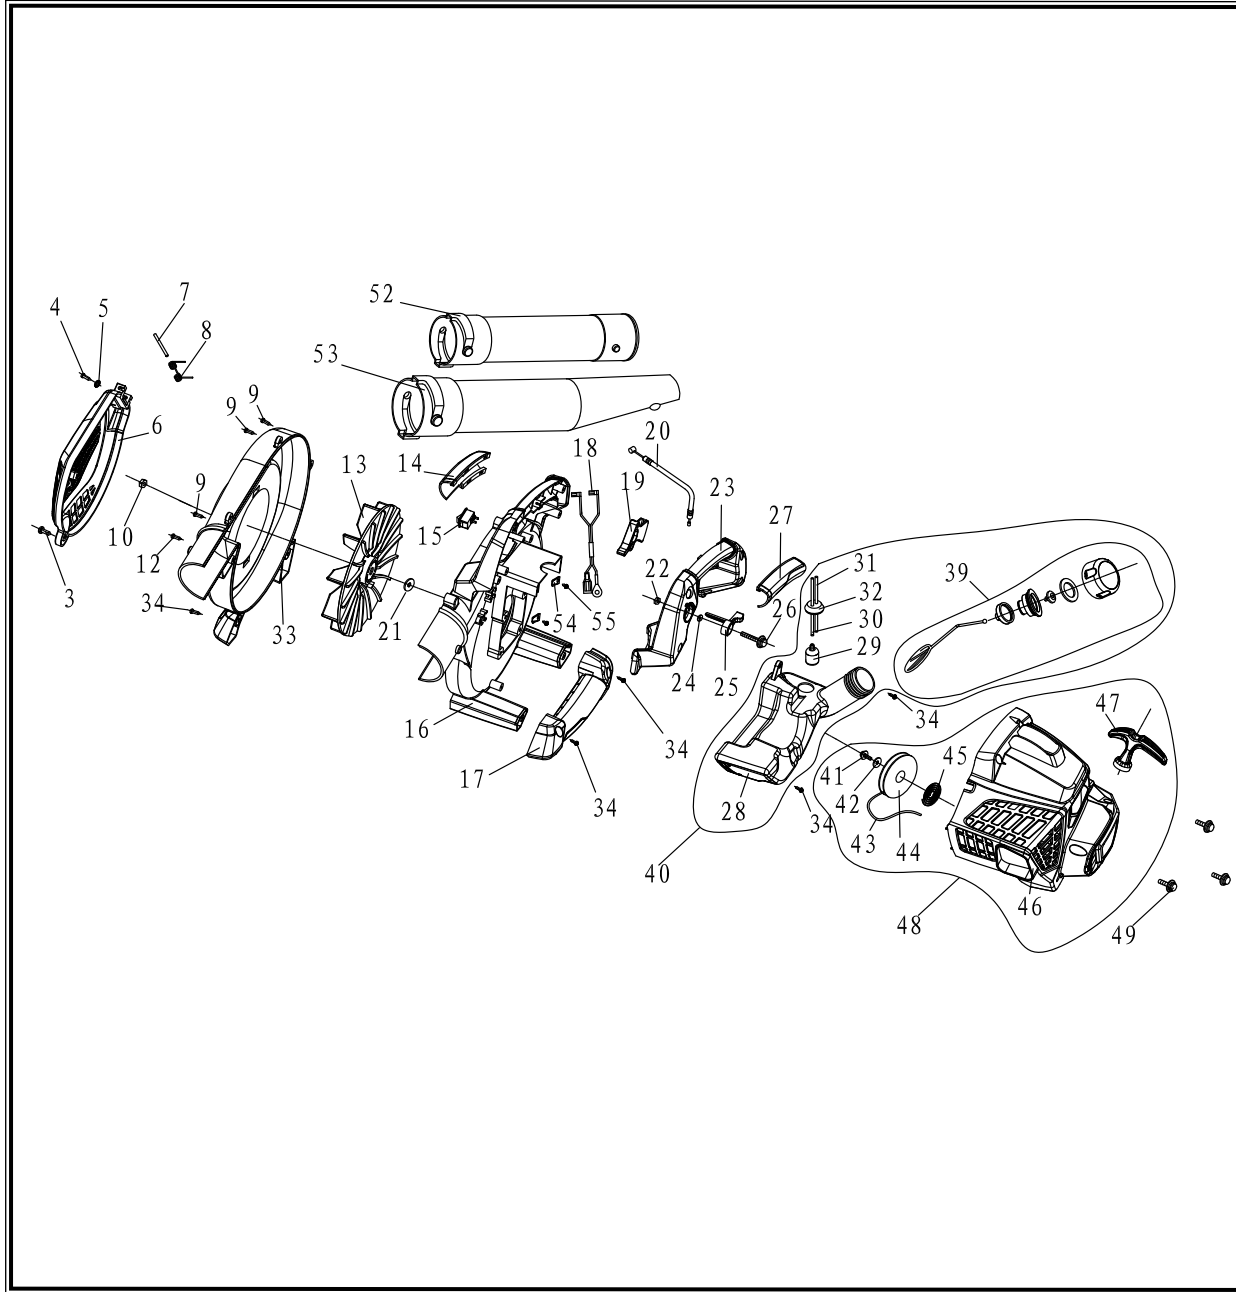

POS.	CODE	DESCRIPTION	QTY
32	A05325	PLUG	1
33	A05326	BACK VALUTE CASE	1
34	A05327	SCREW M5X16	4
39	A05328	FUEL TANK LID ASSEMBLY	1
40	A05329	FUEL TANK ASSEMBLY	1
41	A05330	SCREW M5X10	1
42	A05331	WASHER	1
43	A05332	ROPE	1
44	A05333	STARTER ROPE REEL	1
45	A05334	RECOIL SPRING	1
46	A05335	STARTER BODY	1
47	A05336	STARTER HANDLE	1
48	A05337	STARTER	1
49	A05338	SCREW M5X12	3
52	A05341	PIPE	1
53	A05342	PIPE	1
54	A05343	BAFFLE	2
55	A05258	SCREW	2