



E01

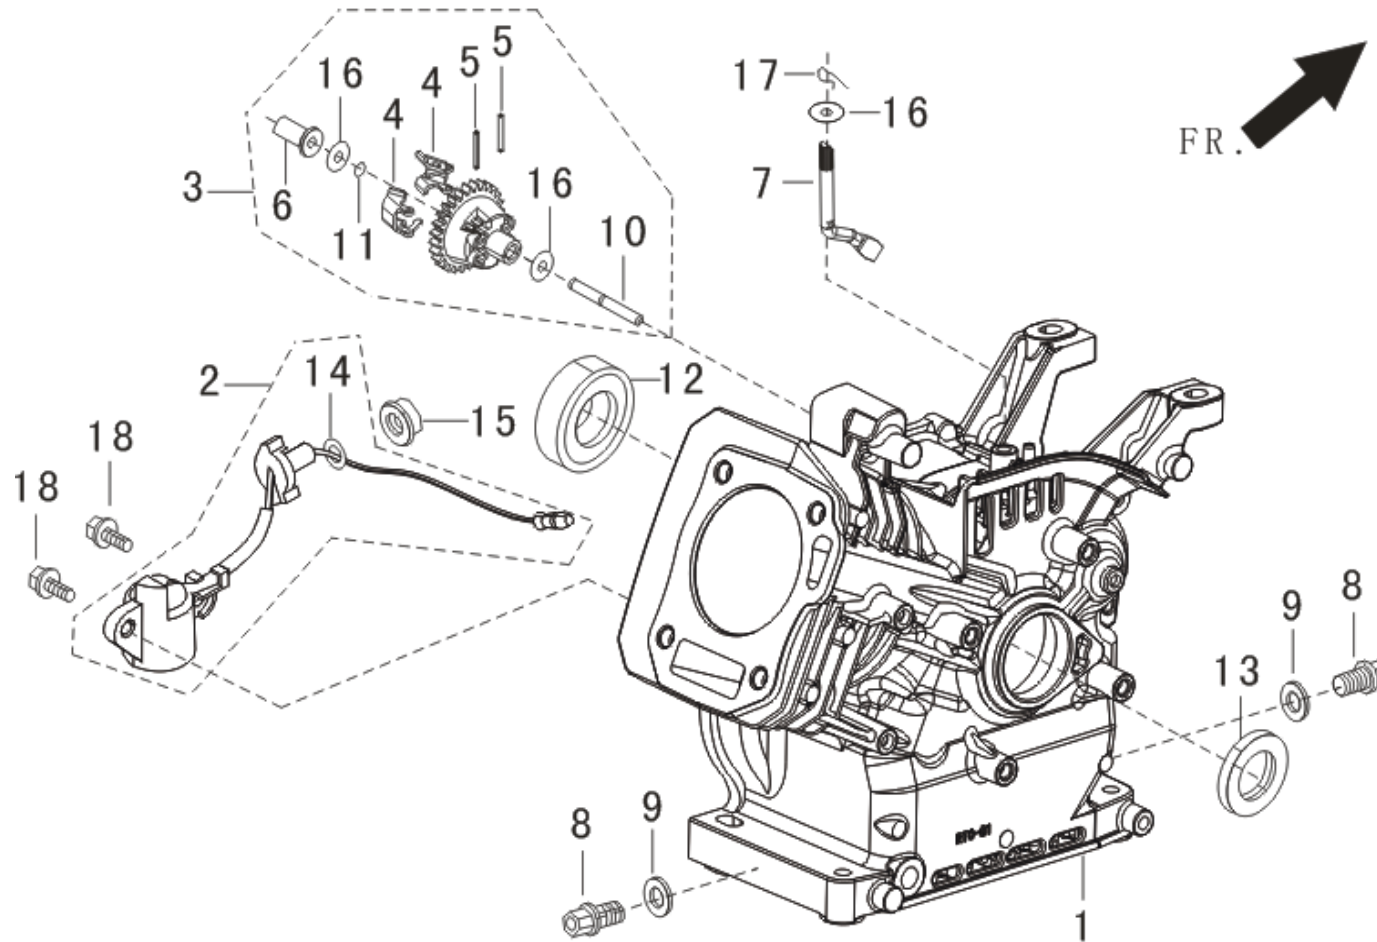


POS.	CODE	DESCRIPTION	QTY
E01-1	A13066	CRANKCASE	1
E01-2	A08608	ENGINE OIL SENSOR	1
E01-3	A09908	GOVERNOR GEAR	1
E01-7	A08481	GOVERNOR ARM	1
E01-8	A08287	DRAIN PLUG BOLT	2
E01-9	A08482	WASHER	2
E01-12	A08484	DEEP GROOVE BALL BEARING	1
E01-13	A08483	OIL SEAL	1
E01-15	A08485	NUT	1
E01-16	A08610	WASHER	1
E01-17	A08951	COTTER PIN	1
E01-18	A08852	BOLT	2

E02

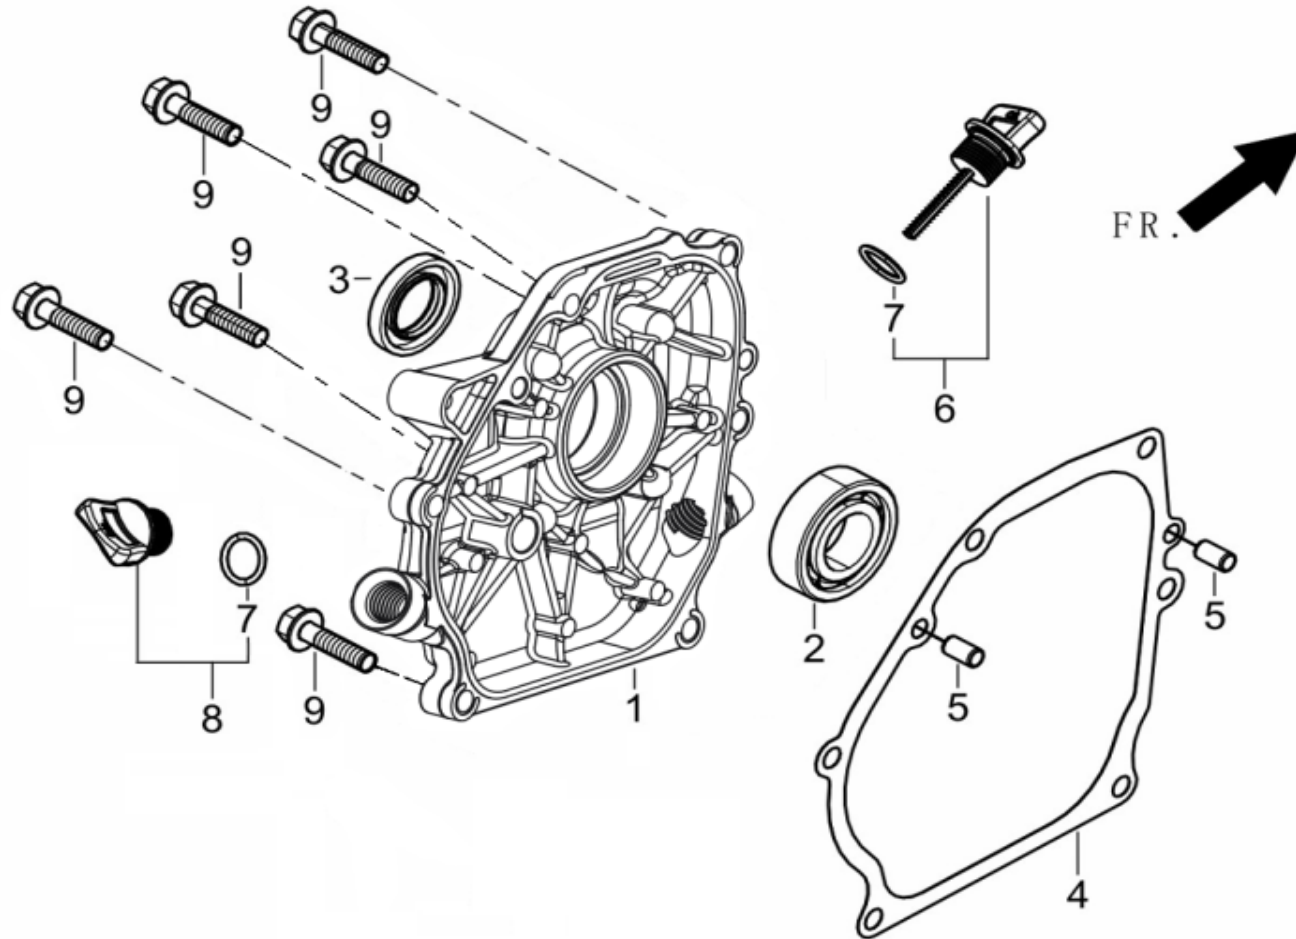


POS.	CODE	DESCRIPTION	QTY
E02-1	A10785	CRANKCASE COVER	1
E02-2	A08484	DEEP GROOVE BALL BEARING	1
E02-3	A08483	OIL SEAL	1
E02-4	A08289	CRANKCASE GASKET	1
E02-5	A08486	POSITION PIN	2
E02-6	A08468	OIL DIPSTICK	1
E02-8	A09912	ENGINE OIL PLUG	1
E02-9	A08939	BOLT	6

E03

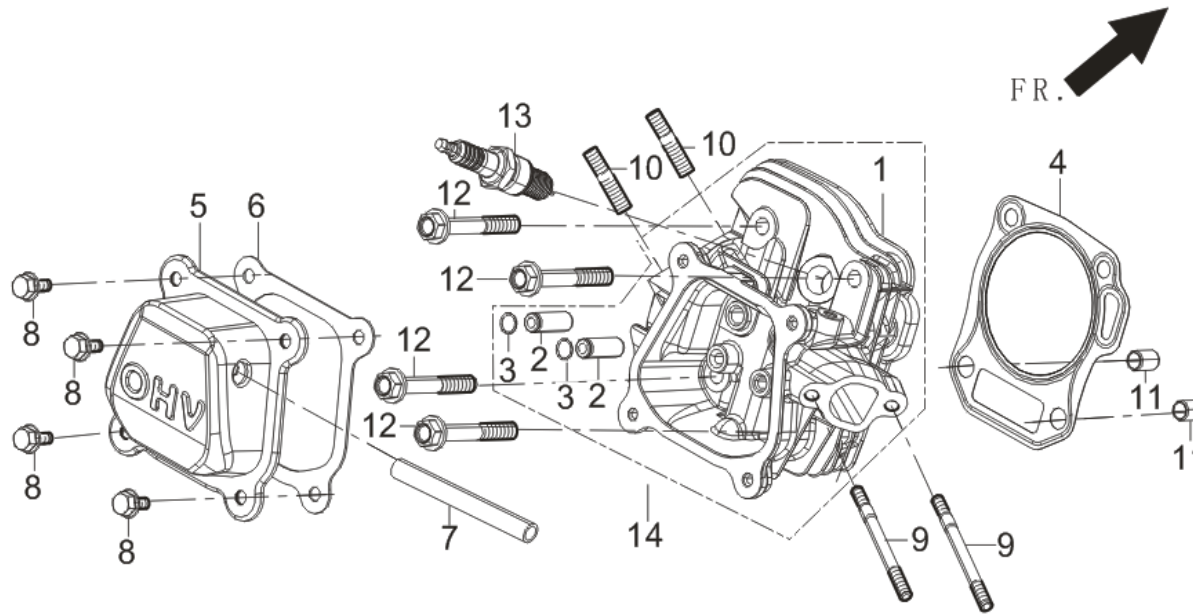


POS.	CODE	DESCRIPTION	QTY
E03-4	A08294	CYLINDER HEAD GASKET	1
E03-5	A08291	CYLINDER HEAD COVER	1
E03-6	A08292	CYLINDER HEAD COVER GASKET	1
E03-7	A09913	BREATHER TUBE	1
E03-8	A08968	BOLT	4
E03-9	A11338	STUD BOLT	2
E03-10	A08489	STUD BOLT	2
E03-11	A08943	POSITION PIN	2
E03-12	A08293	CYLINDER HEAD BOLT	4
E03-13	A08940	SPARK PLUG	1
E03-14	A08290	CYLINDER HEAD	1

E04

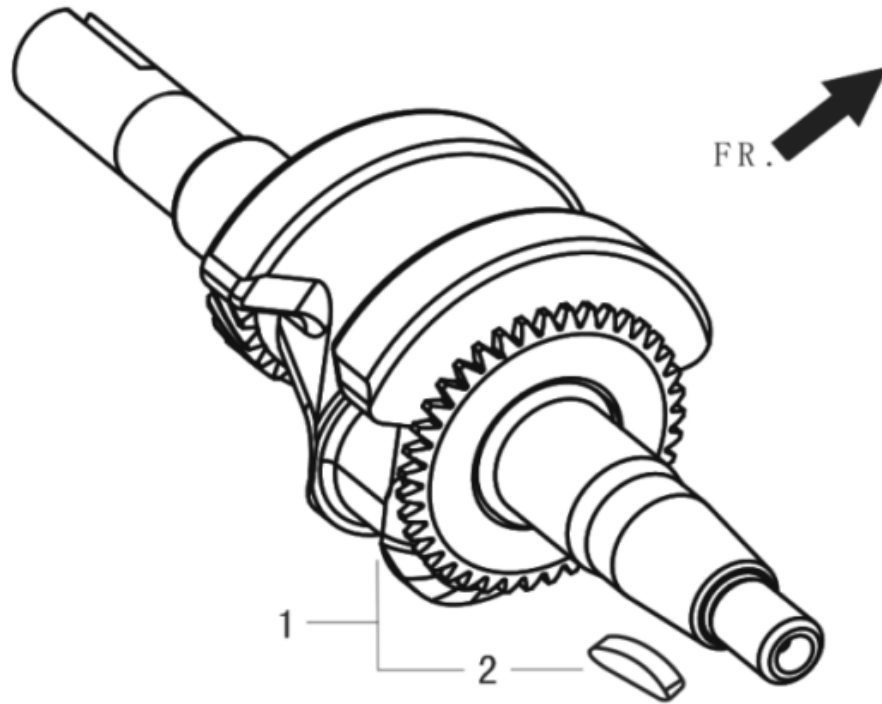


POS.	CODE	DESCRIPTION	QTY
E04-1	A13073	CRANKSHAFT ASSEMBLY	1
E04-2	A09916	KEY	1

E05

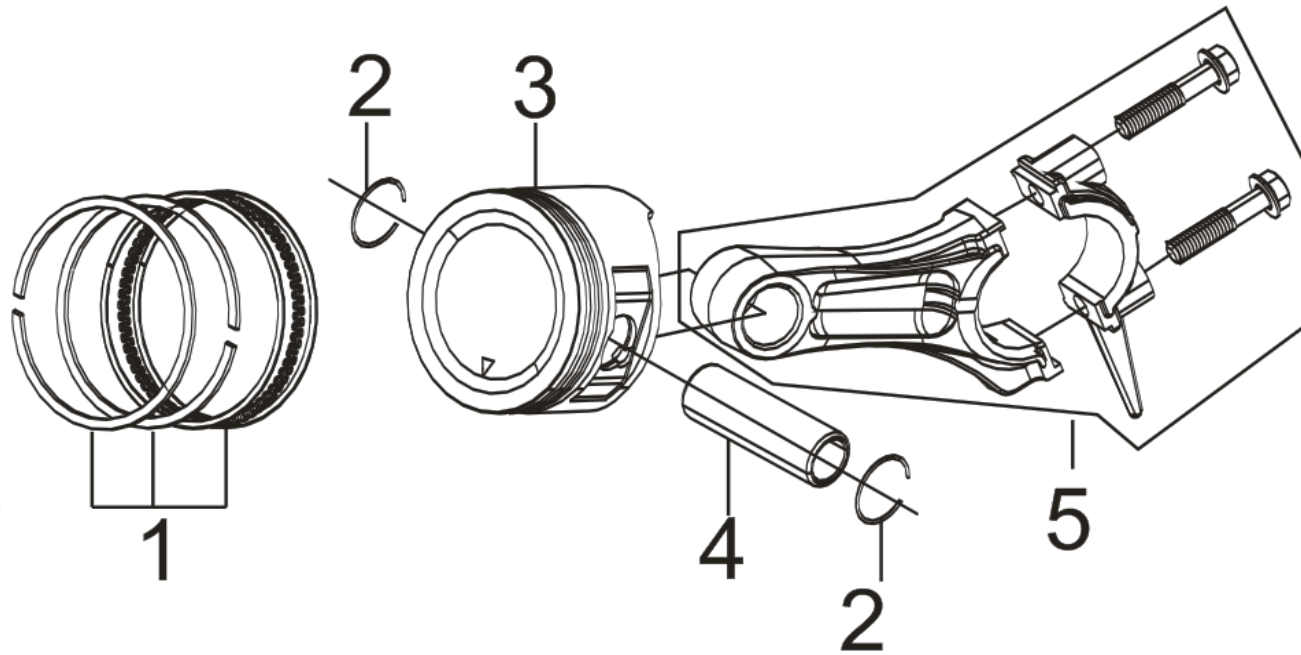


POS.	CODE	DESCRIPTION	QTY
E05-1	A08408	PISTON RING SET	1
E05-2	A08409	PISTON PIN CLIP	2
E05-3	A08295	PISTON	1
E05-4	A08296	PISTON PIN	1
E05-5	A08297	CONNECTING ROD	1

E06

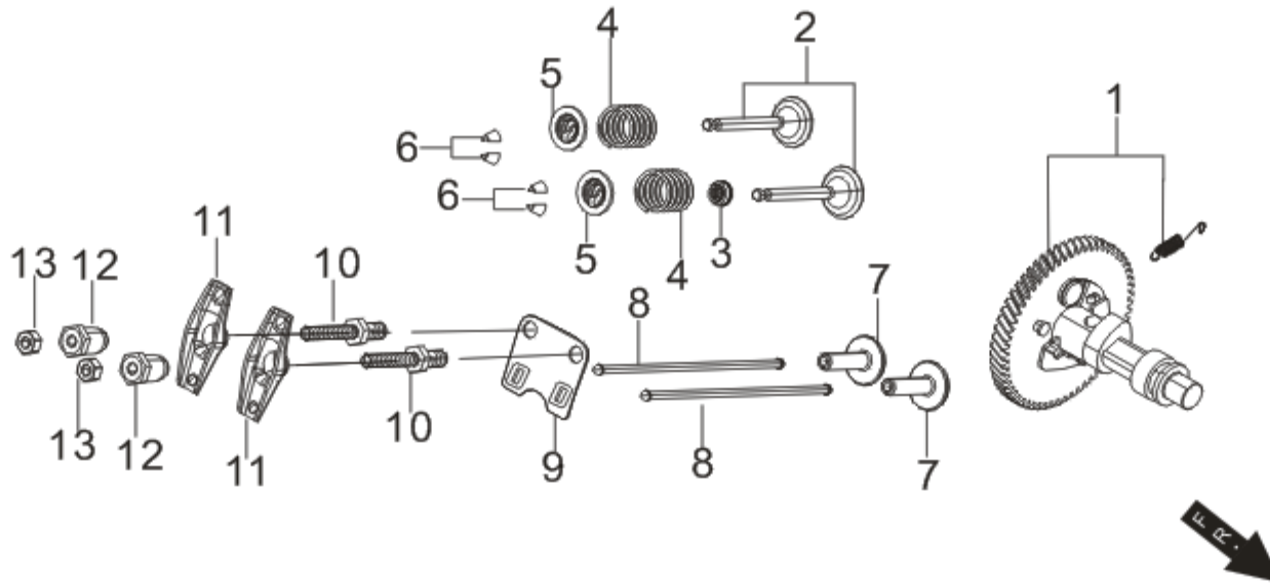


POS.	CODE	DESCRIPTION	QTY
E06-1	A08451	CAMSHAFT ASSEMBLY	1
E06-2	A08298	VALVES SET	1
E06-3	A08299	SEAL GUIDE	1
E06-4	A08300	VALVE SPRING	2
E06-5	A08301	VALVE SPRING SEAT	2
E06-6	A08302	VALVE LOCK CLAMP	4
E06-7	A08440	VALVE TAPPET	2
E06-8	A08441	VALVE LIFTER	2
E06-9	A08442	LIFTER STOPPER PLATE	1
E06-10	A08459	ROCKSHAFT BOLT	2
E06-11	A08460	ROCKER VALVE	2
E06-12	A08461	VALVE ADJUSTING NUT	2
E06-13	A08462	VALVE LOCK NUT	2

E07

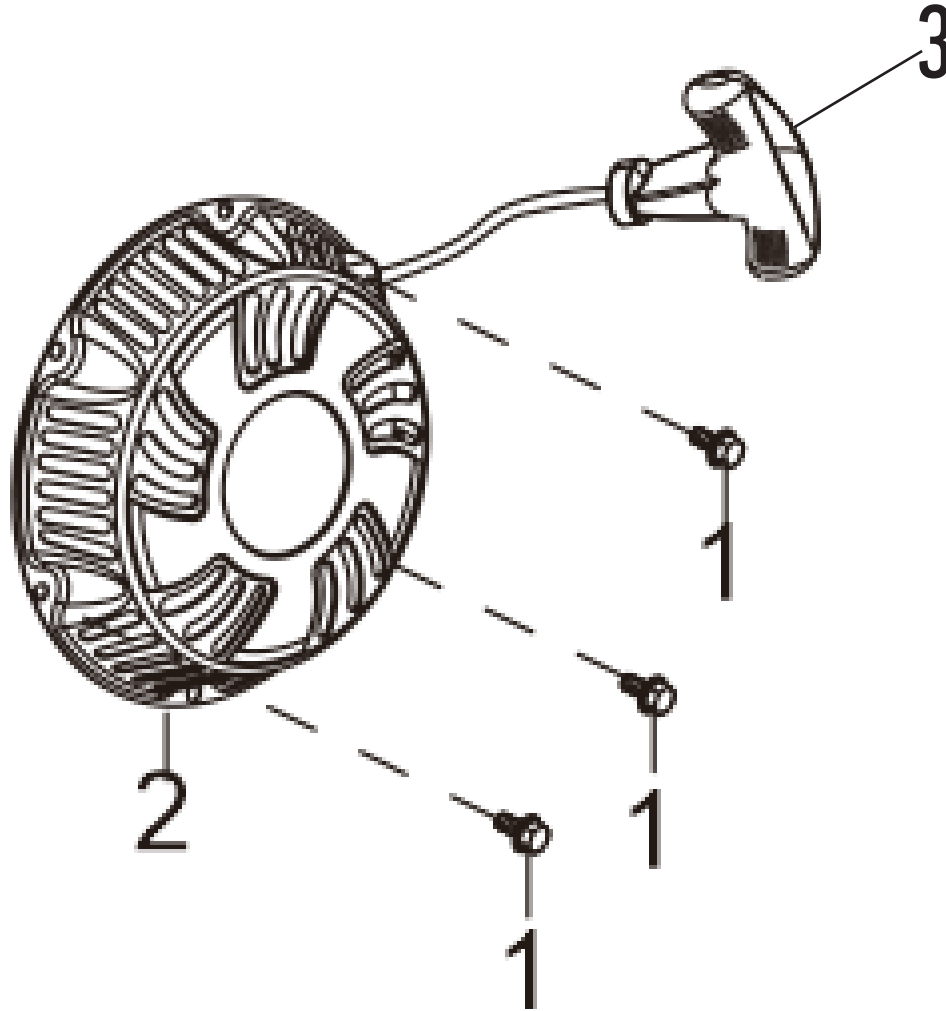


POS.	CODE	DESCRIPTION	QTY
E07-1	A08613	BOLT	3
E07-2	A13077	RECOIL STARTER ASSEMBLY	1
E07-3	A10242	STARTER GRIP	1

E08

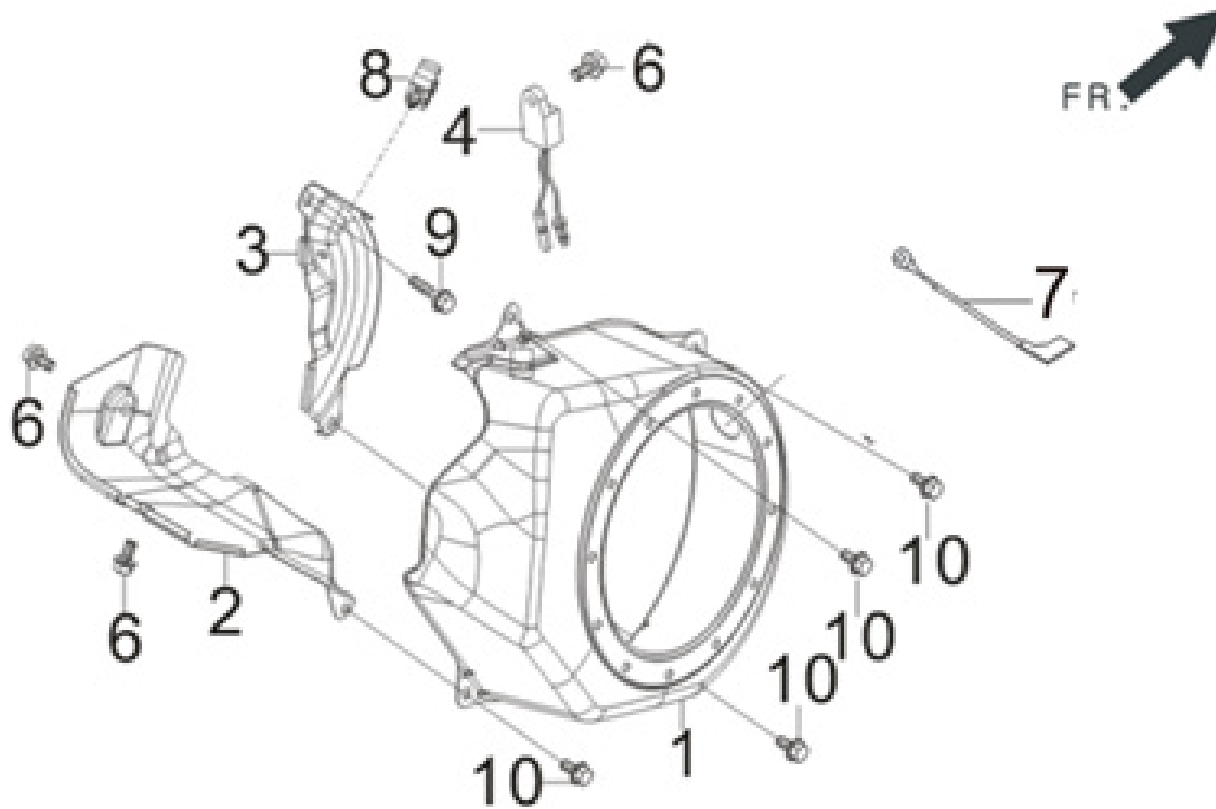


POS.	CODE	DESCRIPTION	QTY
E08-1	A13015	SHROUD	1
E08-2	A08491	CYLINDER BODY SHROUD	1
E08-3	A11198	LOWER SHIELD	1
E08-4	A08615	OIL PROTECTOR	1
E08-6	A08494	BOLT	3
E08-7	A11299	STOP ENGINE WIRE	1
E08-8	A08495	COLLAR	1
E08-9	A08496	BOLT	1
E08-10	A08968	BOLT	4

E09

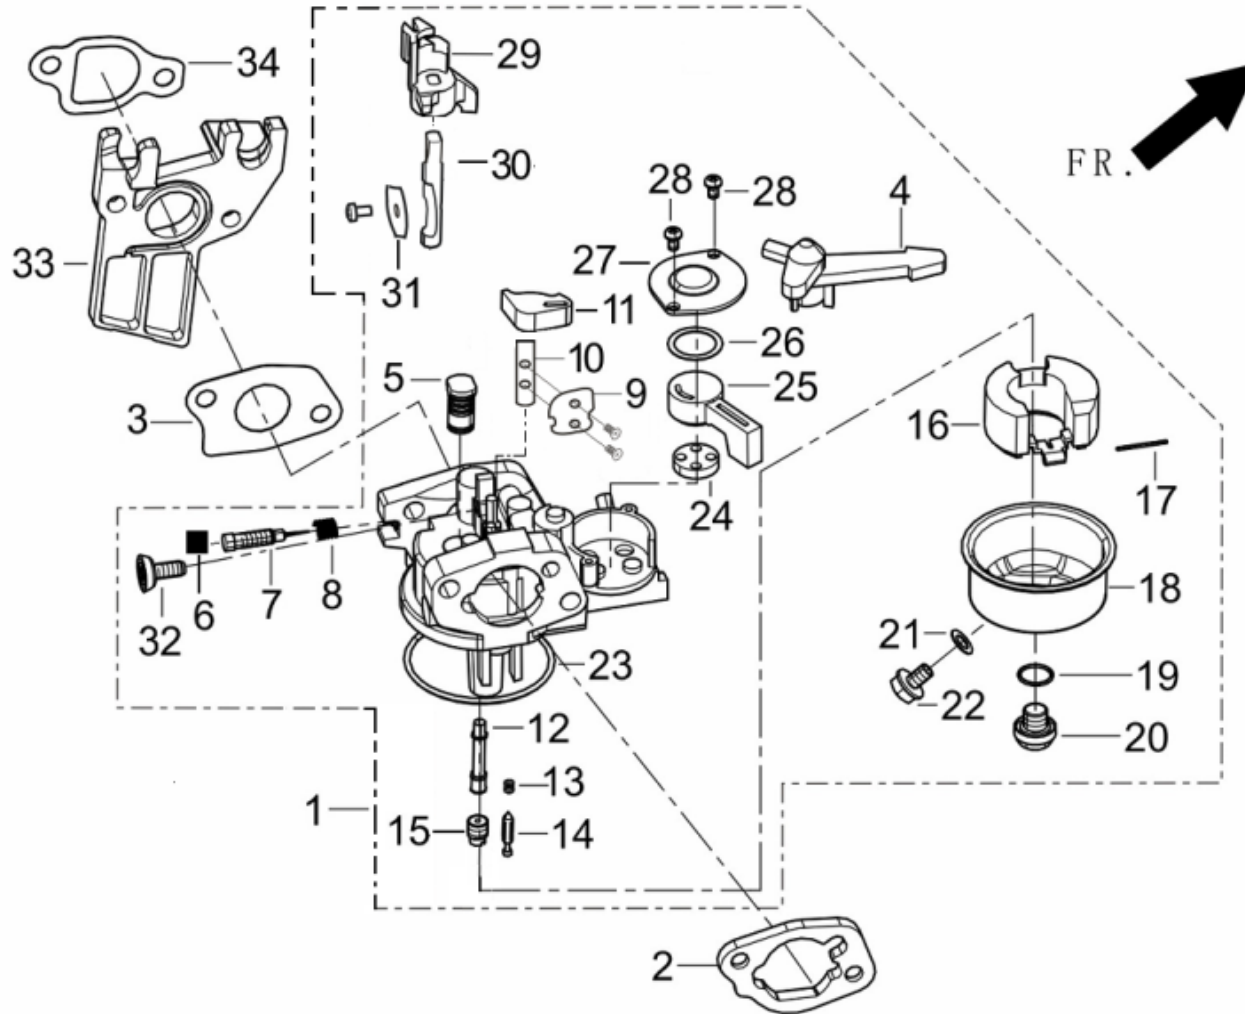


POS.	CODE	DESCRIPTION	QTY
E09-1	A13038	CARBURETOR ASSEMBLY	1
E09-2	A09924	AIR CLEANER SEAL GASKET	1
E09-3	A08469	CARBURETOR SEAL GASKET	1
E09-33	A08478	CARBURETOR INSULATOR PLATE	1
E09-34	A08470	CARBURETOR INSULATOR GASKET	1

E10

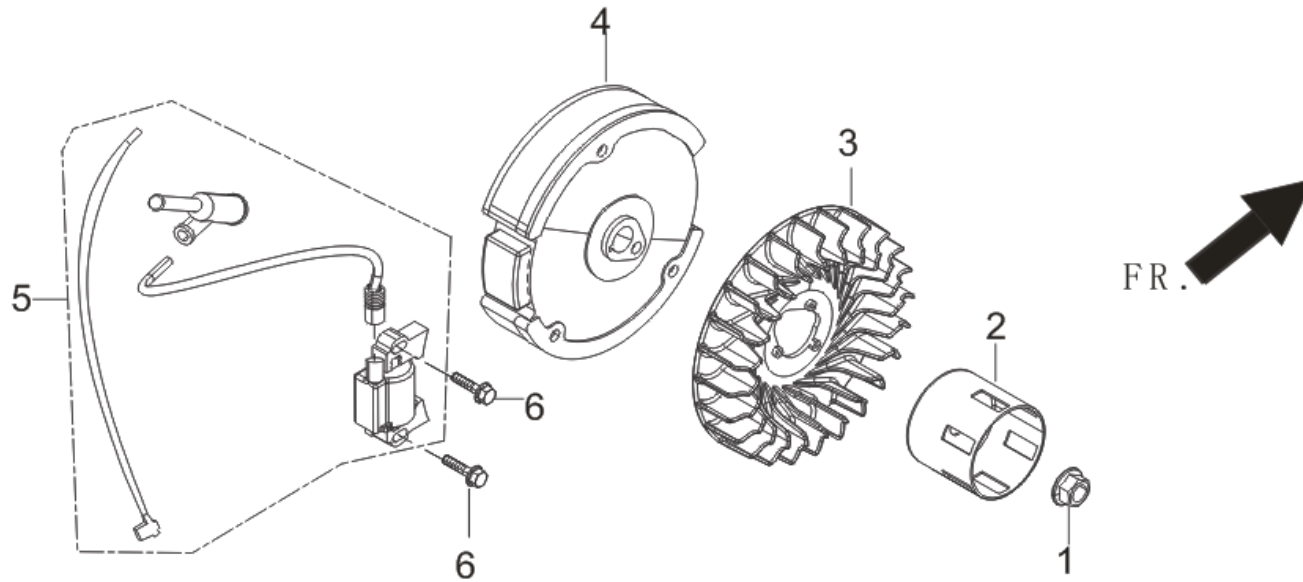


POS.	CODE	DESCRIPTION	QTY
E10-1	A08420	FLYWHEEL NUT	1
E10-2	A08618	STARTER PULLEY	1
E10-3	A08619	IMPELLER	1
E10-4	A08429	FLYWHEEL	1
E10-5	A13029	IGNITION COIL	1
E10-6	A08502	BOLT	2

E11

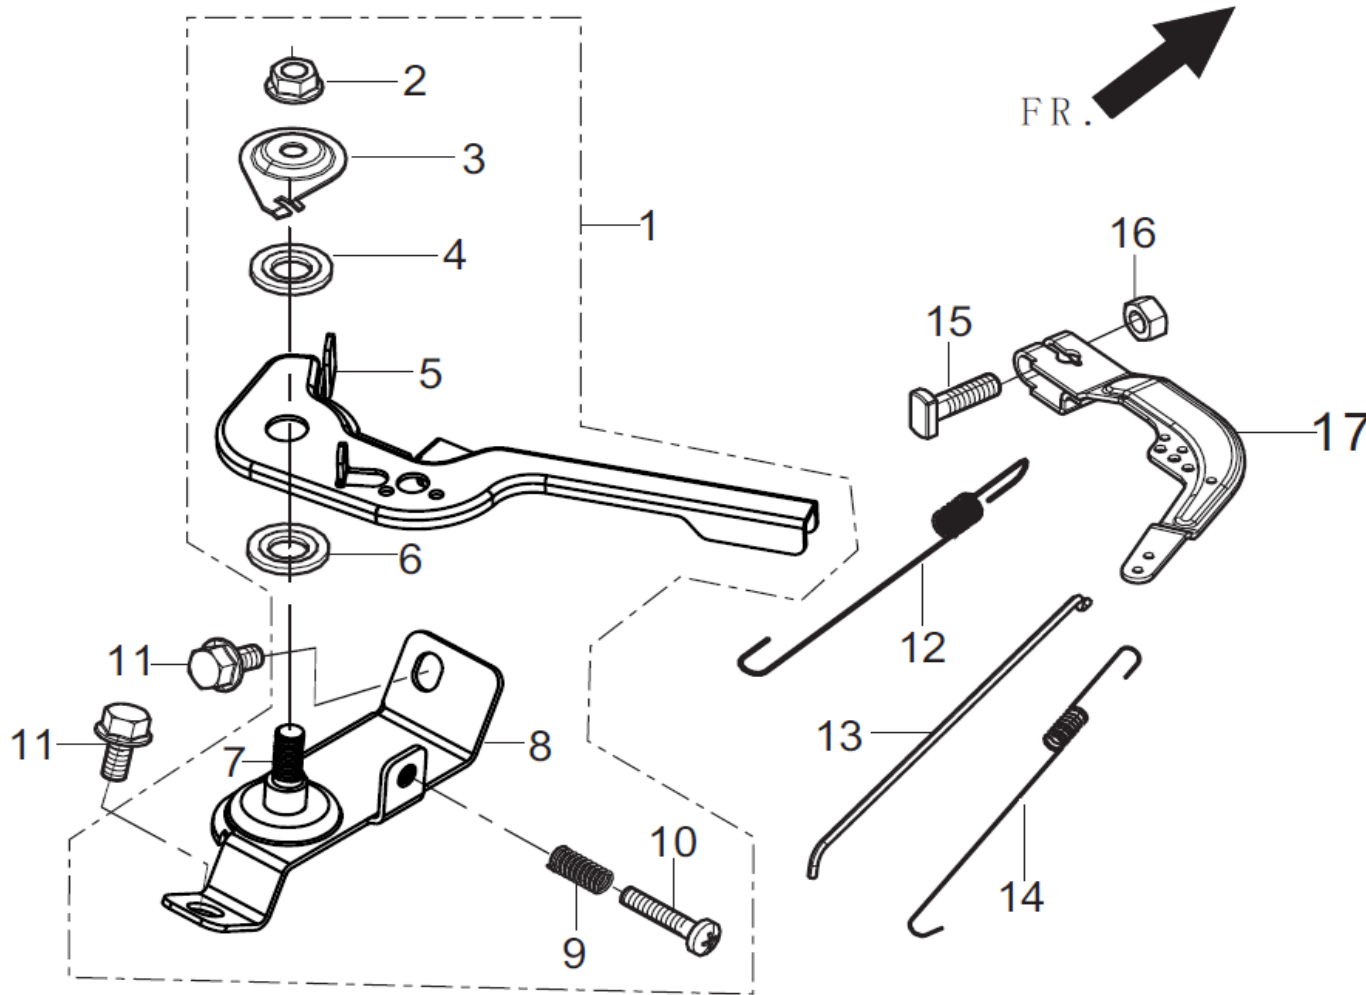

POS.	CODE	DESCRIPTION	QTY
E11-1	A13044	THROTTLE CONTROL ASSEMBLY	1
E11-11	A08494	BOLT	2
E11-12	A13019	GOVERNOR SPRING	1
E11-13	A09927	GOVERNOR ROD	1
E11-14	A08509	THROTTLE VALVE RETURNING SPRING	1
E11-15	A12999	GOVERNOR SUPPORT BOLT	1
E11-16	A08506	NUT	1
E11-17	A08504	GOVERNOR BRACKET	1


F01

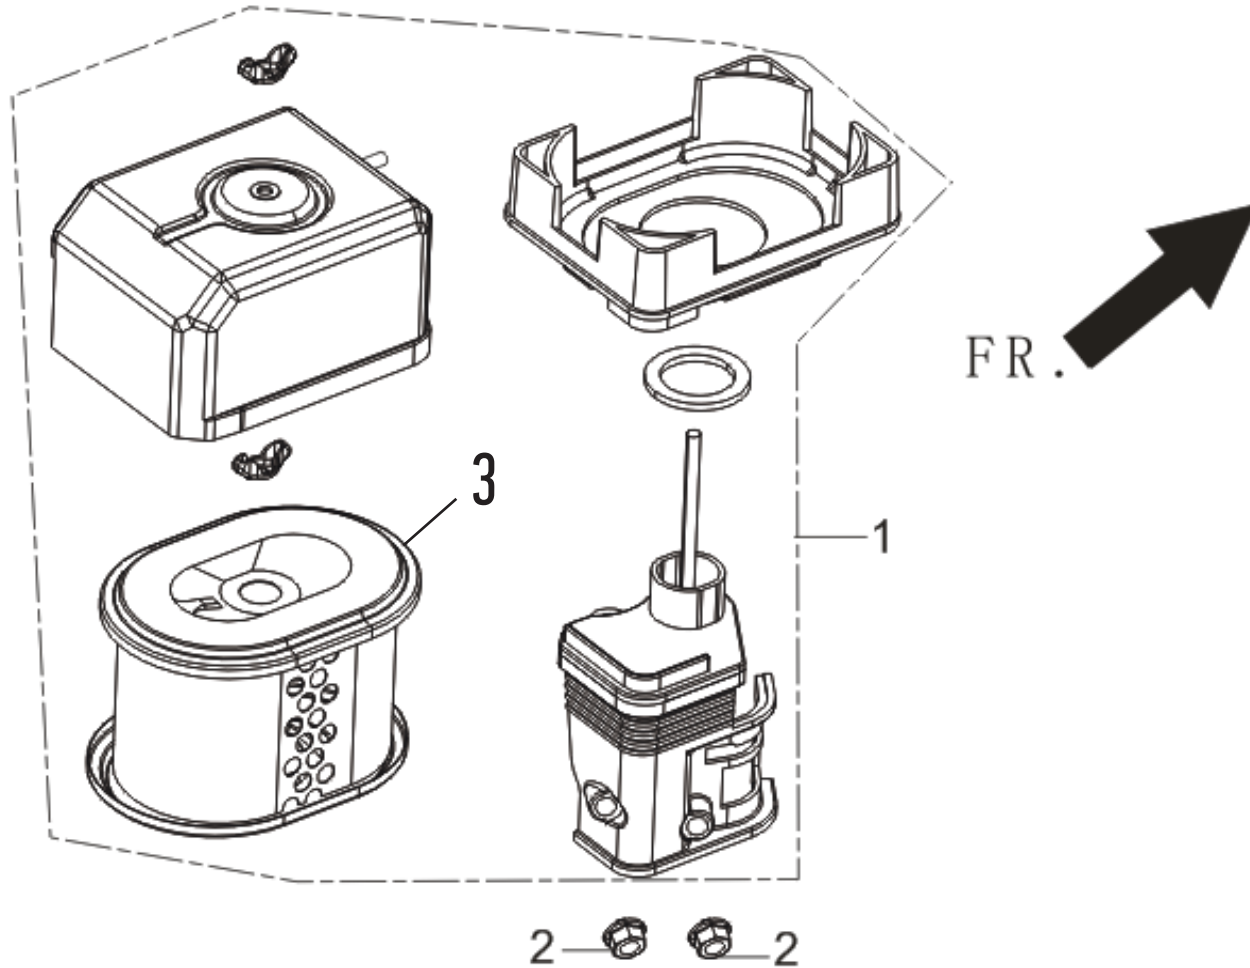


POS.	CODE	DESCRIPTION	QTY
F01-1	A13089	AIR FILTER	1
F01-2	A08506	NUT	2
F01-3	A10830	AIR FILTER ELEMENT	1

POS.	CODE	DESCRIPTION	QTY
F02-1	A08622	EXHAUST OUTLET GASKET	1
F02-2	A08747	NUT	2
F02-3	A13027	MUFFLER ASSEMBLY	1

F02

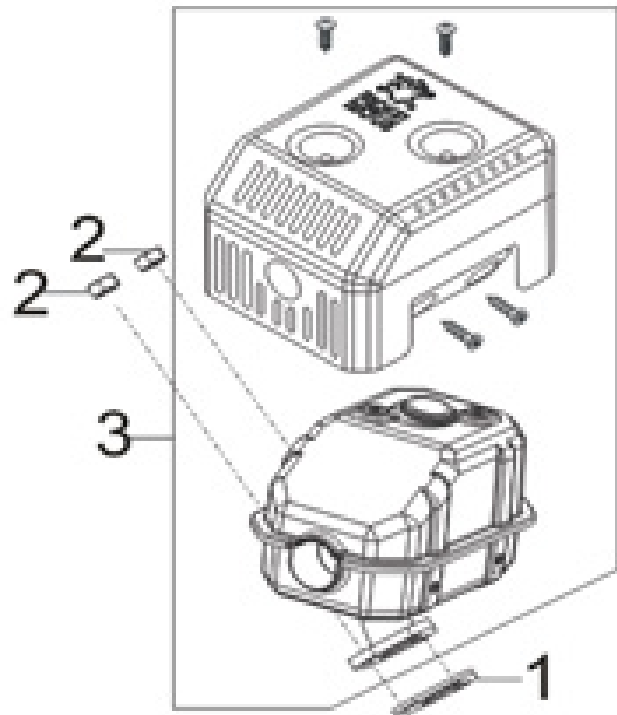


F03

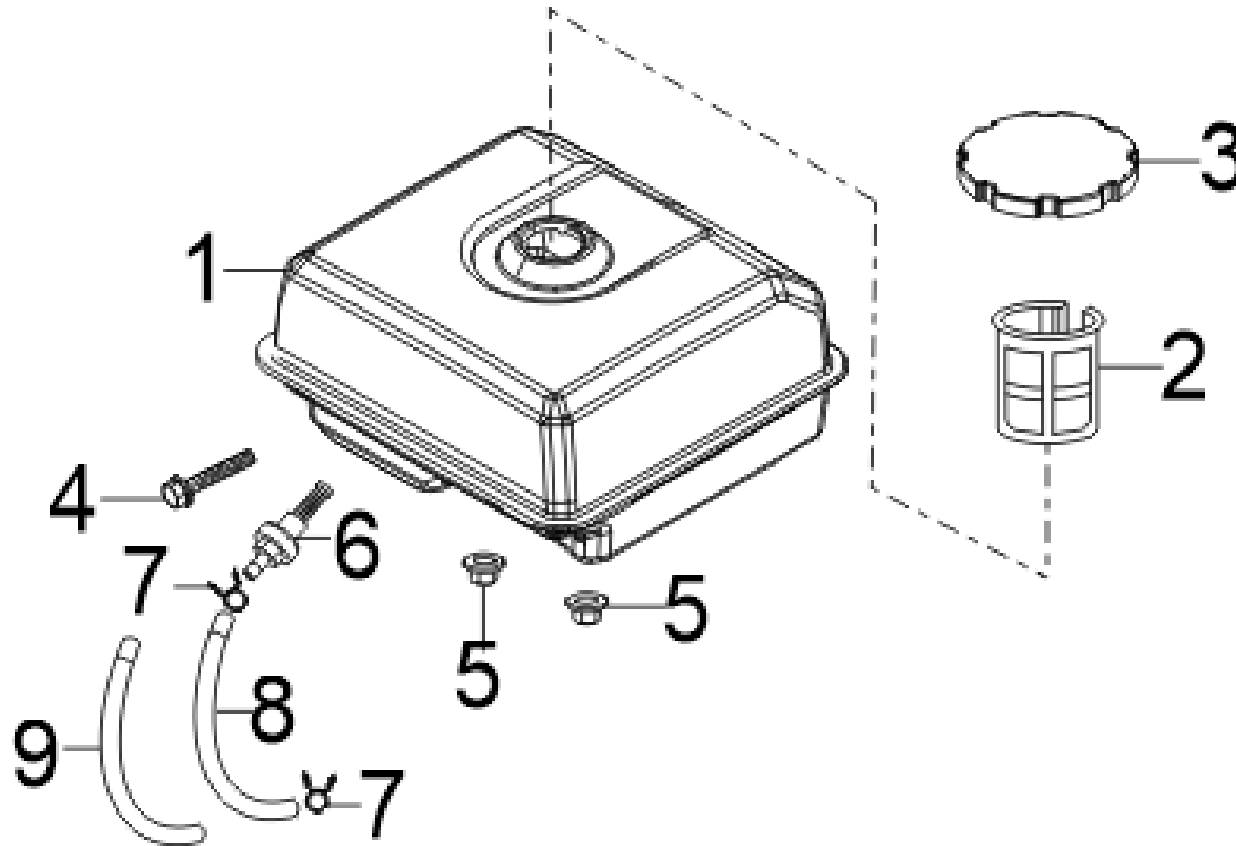


POS.	CODE	DESCRIPTION	QTY
F03-1	A13007	FUEL TANK	1
F03-2	A09932	FUEL STRAINER	1
F03-3	A11333	FUEL TANK COVER	1
F03-4	A08830	BOLT	1
F03-5	A08506	NUT	2
F03-6	A09934	FUEL TANK OIL OUTLET	1
F03-7	A08816	COLLAR	2
F03-8	A09935	FUEL TUBE	1
F03-9	A09936	RUBBER JACKET	1

F04

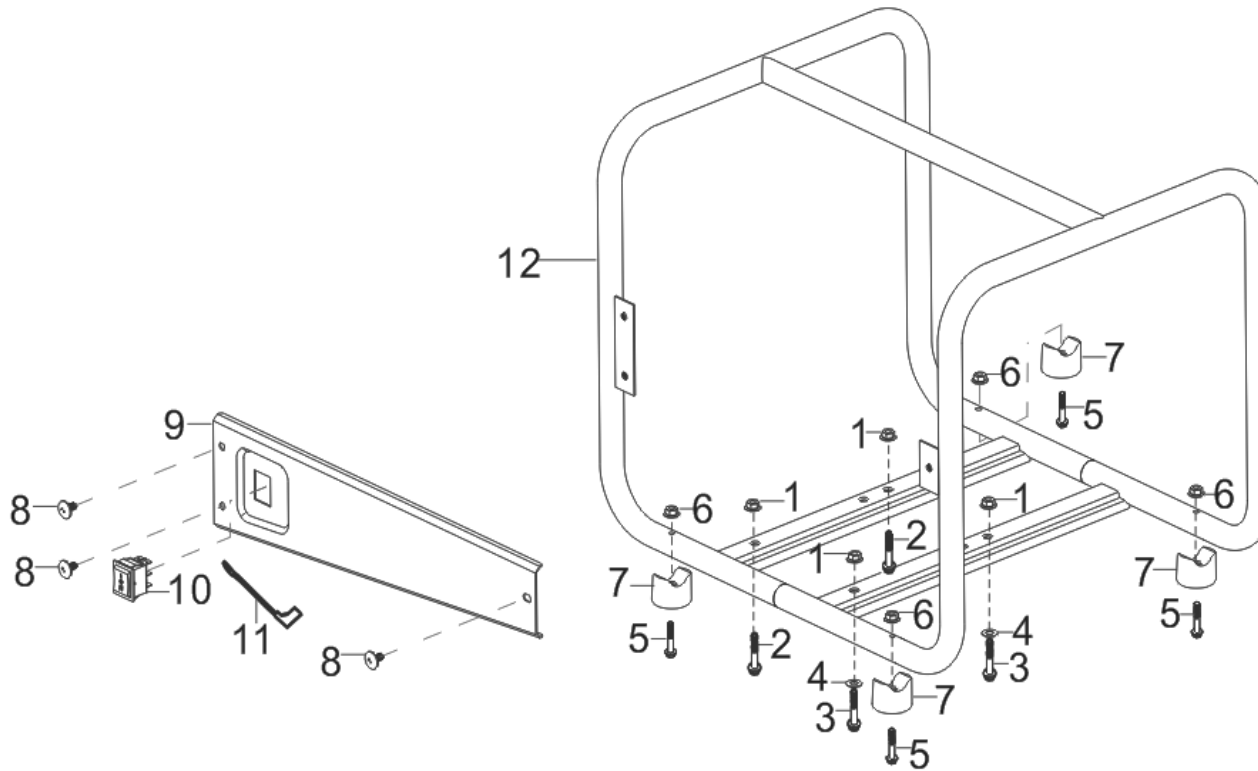

POS.	CODE	DESCRIPTION	QTY
F04-1	A11017	NUT	4
F04-2	A08600	BOLT	2
F04-3	A10693	BOLT	2
F04-4	A09945	WASHER	2
F04-5	A10690	BOLT	4
F04-6	A08506	NUT	4
F04-7	A11334	ENGINE FRAME SHOCK ABSORPTION SEAT	4
F04-8	A11159	SCREW	3
F04-9	A10823	ENGINE FRAME DECORATED PLATE	1
F04-10	A11243	SWITCH	1
F04-11	A11299	STOP ENGINE WIRE	1
F04-12	A10848	ENGINE FRAME ASSEMBLY	1

F61

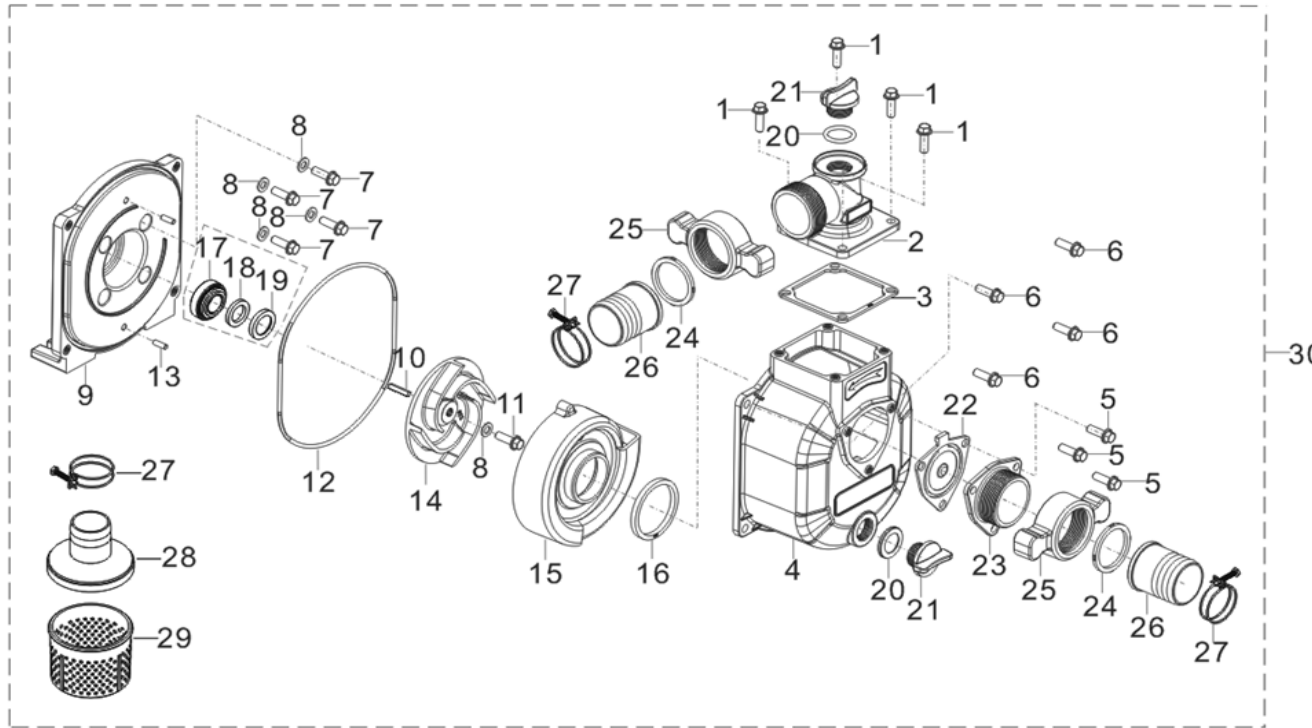

POS.	CODE	DESCRIPTION	QTY
F61-1	A10703	BOLT	4
F61-2	A11029	WATER OUTLET	1
F61-3	A10908	OUTLET GASKE	1
F61-4	A11098	PUMP BODY	1
F61-5	A10702	BOLT	3
F61-6	A09946	BOLT	4
F61-7	A10694	BOLT	4
F61-8	A10857	WASHER	5
F61-9	A10991	WATER PUMP JOINT	1
F61-10	A11000	GENERAL FLAT KEY	1
F61-11	A10695	BOLT	1
F61-12	A10814	WATER PUMP JOINT CUSHION	1
F61-13	A11038	CYLINDRICAL PIN	2
F61-14	A10946	WATER PUMP IMPELLER	1
F61-15	A10744	WHORL CASE	1
F61-16	A11113	WHORL CASE SEALING RIGN	1
F61-17	A11161	MECHANISM SEAL	1
F61-18	A11177	PORCELAIN SEAL	1
F61-19	A11134	IMPELLER SEAL RING	1
F61-20	A11292	SCREW PLUG WASHER	2
F61-21	A11070	THREAD PLUG	2
F61-22	A10897	INLET WATER GASKET	1
F61-23	A10955	WATER INLET	1
F61-24	A11125	RING, HOSE JOINT SEAL	2
F61-25	A10980	HOSE JOINT	2
F61-26	A10966	HOSE INTERFACE	2
F61-27	A10724	HOSE HOOP	3
F61-28	A10790	FILTER COVER	1
F61-29	A10835	FILTER	1
F61-30	A11087	WATER PUMP ASSEMBLY	1