



**E01**

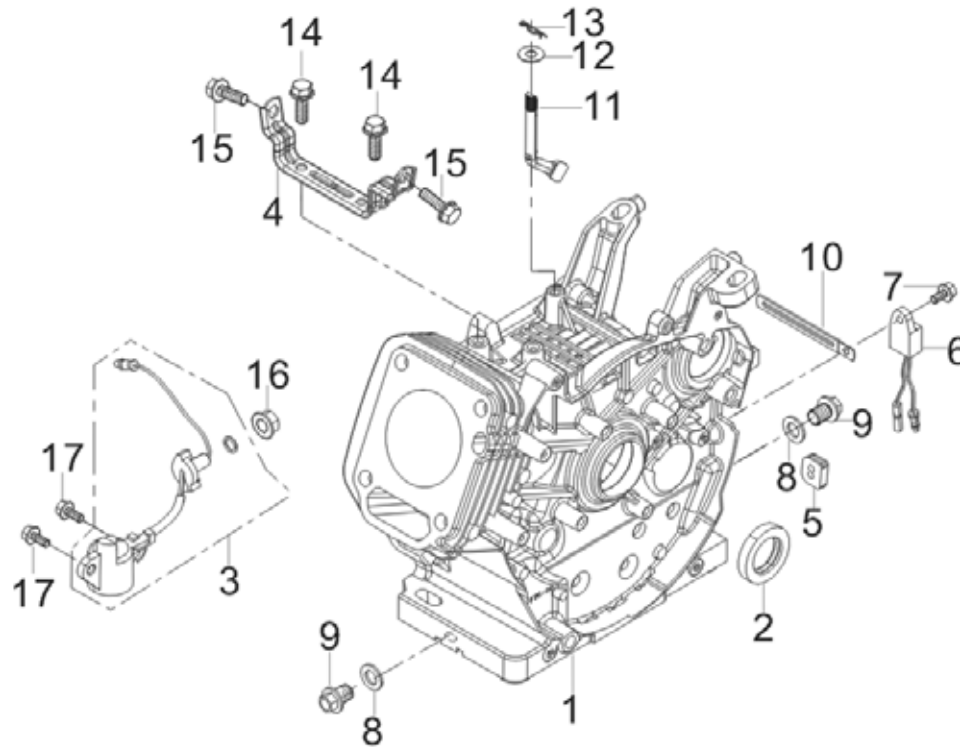


POS.	CODE	DESCRIPTION	QTY
E01-1	A13067	CRANKCASE	1
E01-2	A10503	OIL SEAL	1
E01-3	A08544	ENGINE OIL SENSOR	1
E01-4	A12998	FUEL TANK INSTALLATION FRAME	1
E01-5	A08545	RUBBER PLUG	1
E01-6	A08615	OIL PROTECTOR	1
E01-7	A08968	BOLT	1
E01-8	A08546	WASHER	2
E01-9	A09104	DRAIN PLUG BOLT	2
E01-10	A08924	WIRE CLIP	1
E01-11	A10504	GOVERNOR ARM	1
E01-12	A08548	WASHER	1
E01-13	A08951	COTTER PIN	1
E01-14	A09026	BOLT	2
E01-15	A08624	BOLT	2
E01-16	A08485	NUT	1
E01-17	A08496	BOLT	2

**E02**

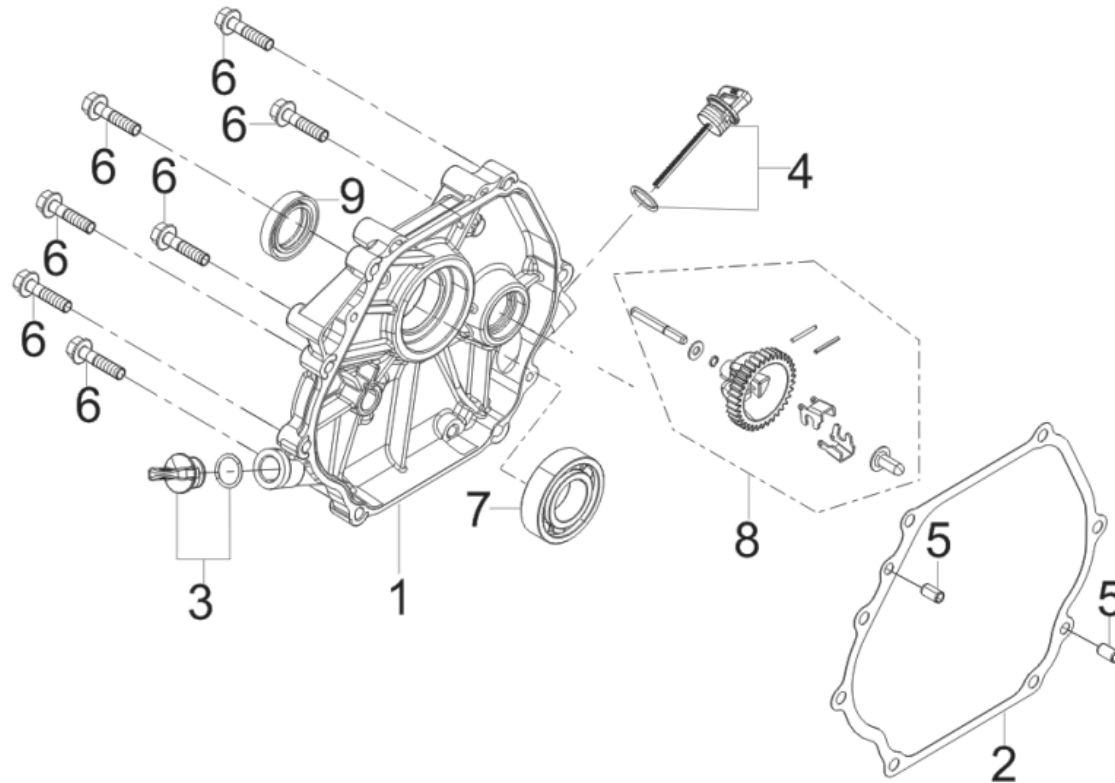


POS.	CODE	DESCRIPTION	QTY
E02-1	A13032	CRANKCASE COVER	1
E02-2	A10506	CRANKCASE GASKET	1
E02-3	A10507	ENGINE OIL PLUG	1
E02-4	A10508	OIL DIPSTICK	1
E02-5	A08486	PIN	2
E02-6	A08600	BOLT	7
E02-7	A10509	DEEP GROOVE BALL BEARING	1
E02-8	A10510	GOVERNOR GEAR	1
E02-9	A10503	OIL SEAL	1

**E03**

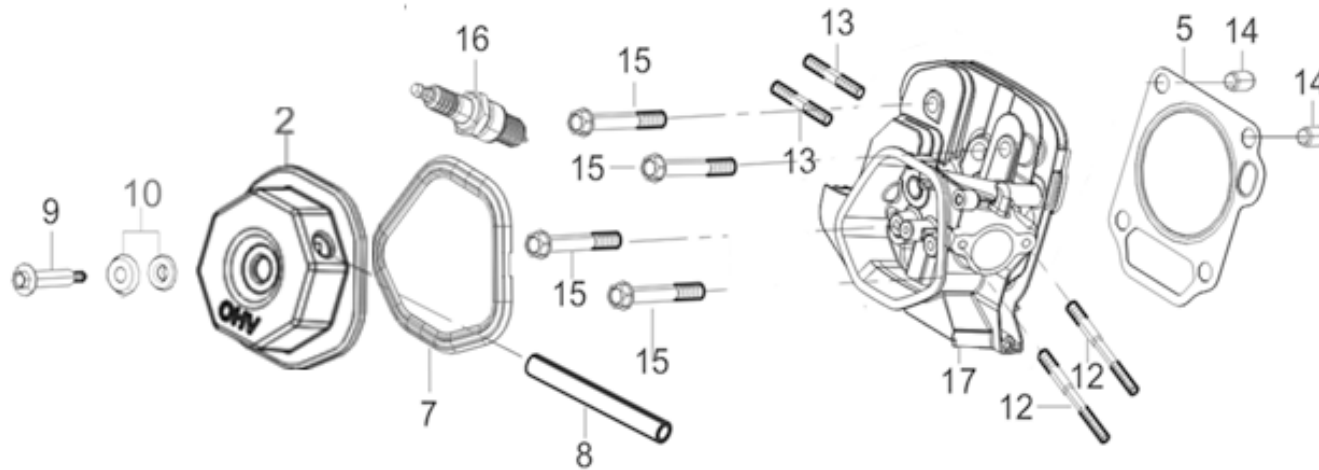


POS.	CODE	DESCRIPTION	QTY
E03-2	A10513	CYLINDER HEAD COVER	1
E03-5	A10511	CYLINDER HEAD GASKET	1
E03-7	A10514	CYLINDER HEAD COVER GASKET	1
E03-8	A10515	BREATHER TUBE	1
E03-9	A08309	CYLINDER HEAD COVER BOLT	1
E03-10	A08310	GASKET	1
E03-12	A10516	STUD BOLT	2
E03-13	A10517	STUD BOLT	2
E03-14	A08557	POSITION PIN	2
E03-15	A08311	CYLINDER HEAD BOLT	4
E03-16	A08940	SPARK PLUG	1
E03-17	A10512	CYLINDER HEAD	1

**E04**

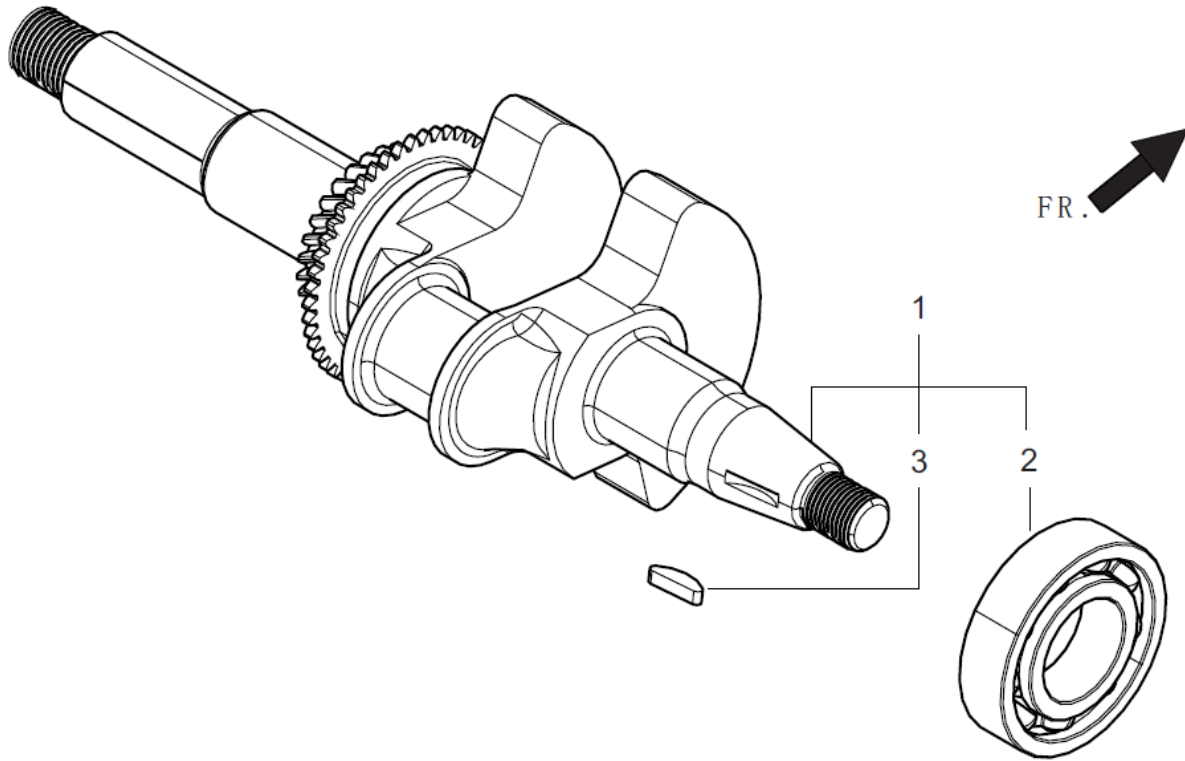


POS.	CODE	DESCRIPTION	QTY
E04-1	A10808	CRANKSHAFT ASSEMBLY	1

**E05**

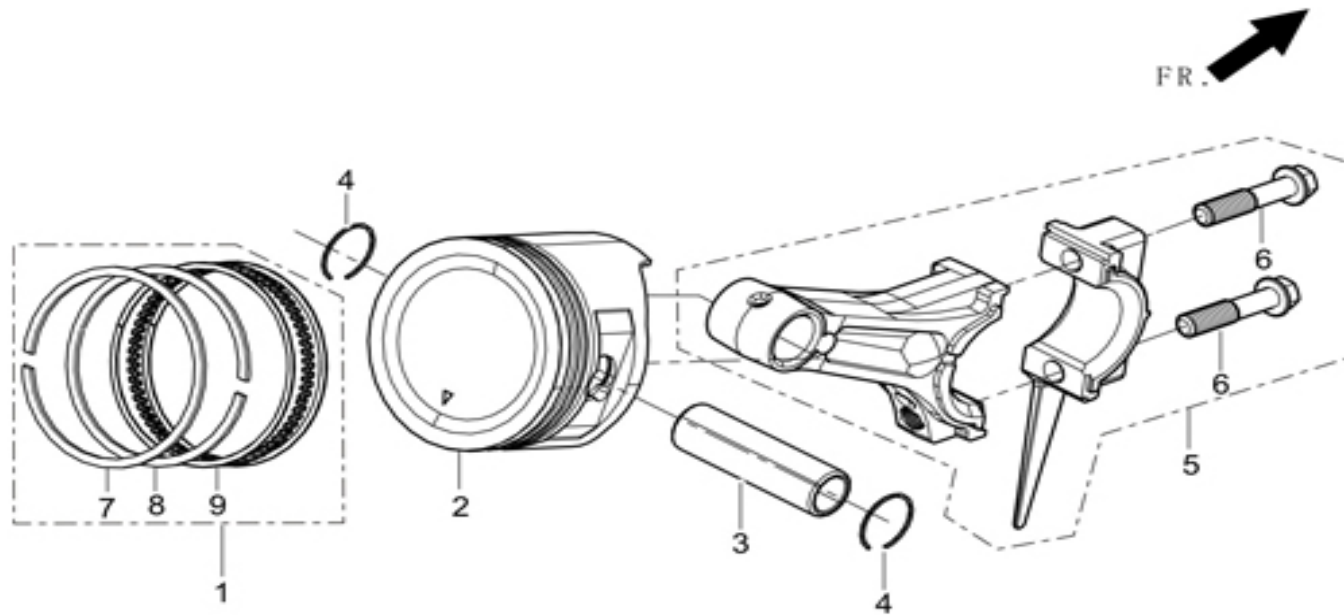


POS.	CODE	DESCRIPTION	QTY
E05-1	A10519	PISTON RING SET	1
E05-2	A10520	PISTON	1
E05-3	A10521	PISTON PIN	1
E05-4	A10522	PISTON PIN CLIP	2
E05-5	A10523	CONNECTING ROD	1

**E06**

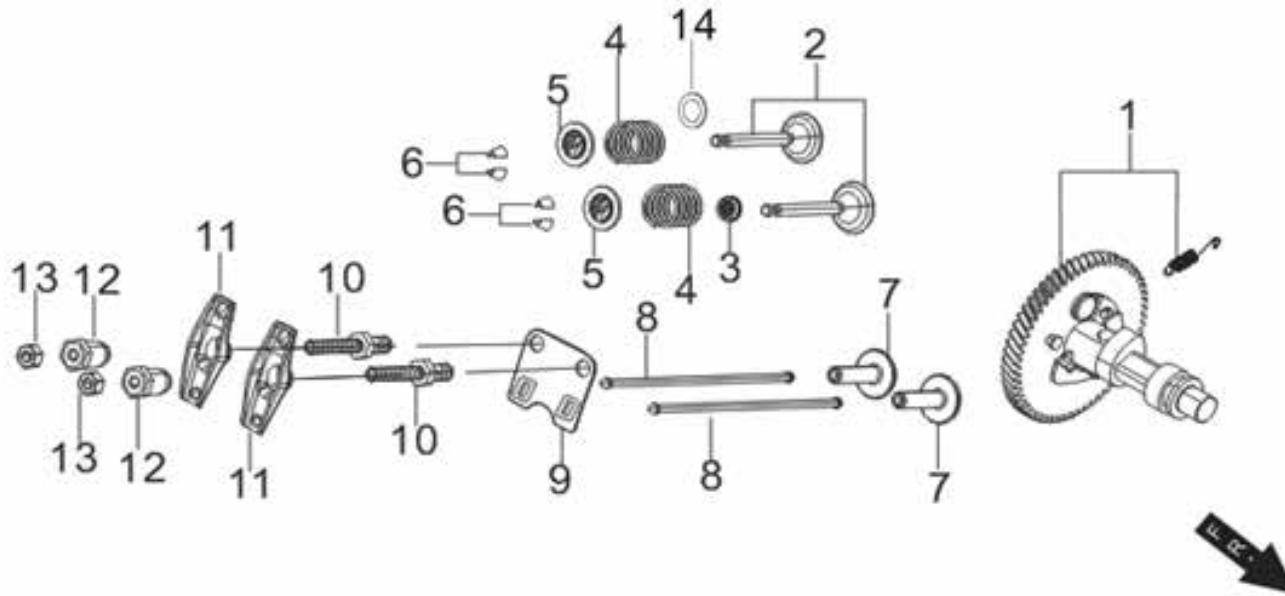


POS.	CODE	DESCRIPTION	QTY
E06-1	A10524	CAMSHAFT ASSEMBLY	1
E06-2	A10526	VALVES SET	1
E06-3	A08338	SEAL GUIDE	1
E06-4	A10529	VALVE SPRING	2
E06-5	A10527	VALVE SPRING SEAT	2
E06-6	A10528	VALVE LOCK CLAMP	4
E06-7	A10530	VALVE TAPPET	2
E06-8	A10525	VALVE LIFTER	2
E06-9	A08972	LIFTER STOPPER PLATE	1
E06-10	A08459	ROCKSHAFT BOLT	2
E06-11	A08463	ROCKER VALVE	2
E06-12	A08461	VALVE ADJUSTING NUT	2
E06-13	A08462	VALVE LOCK NUT	2
E06-14	A08322	VALVE SPRING RETAINER	1

**E07**

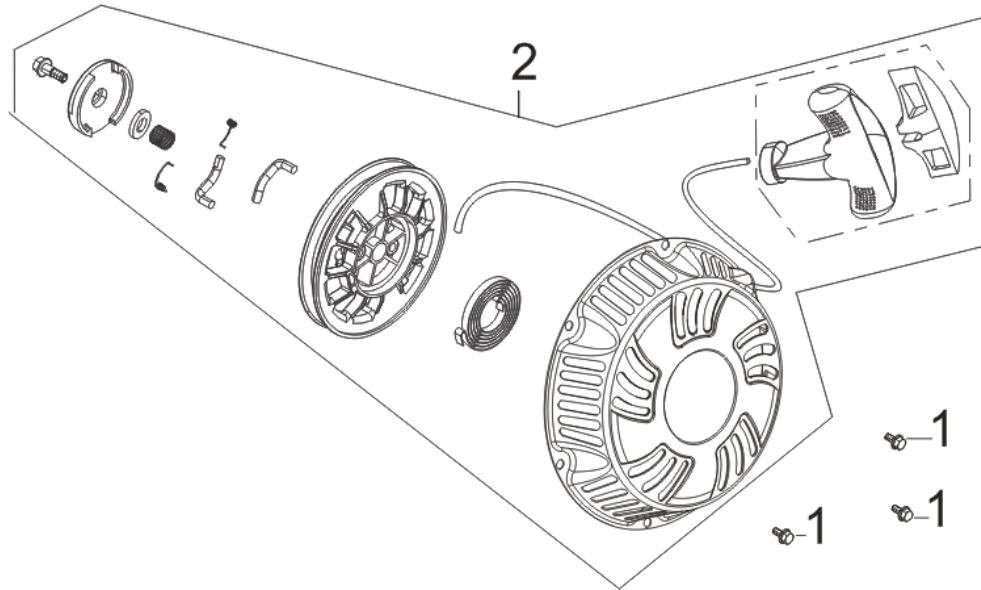

POS.	CODE	DESCRIPTION	QTY
E07-1	A08613	BOLT	3
E07-2	A13075	RECOIL STARTER ASSEMBLY	1


**E08**

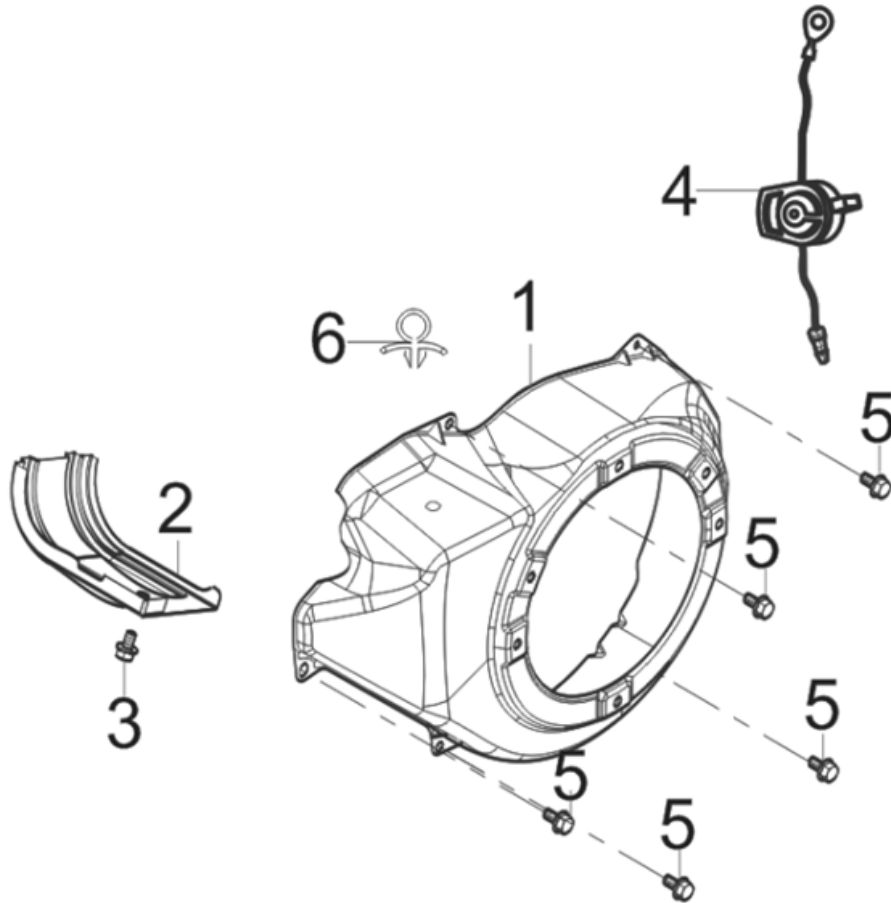

POS.	CODE	DESCRIPTION	QTY
E08-1	A13013	SHROUD	1
E08-2	A10534	CYLINDER BODY SHROUD	1
E08-3	A08968	BOLT	1
E08-4	A11245	STOP ENGINE SWITCH	1
E08-5	A08968	BOLT	5
E08-6	A10535	WIRE CLIP	1




**E09**

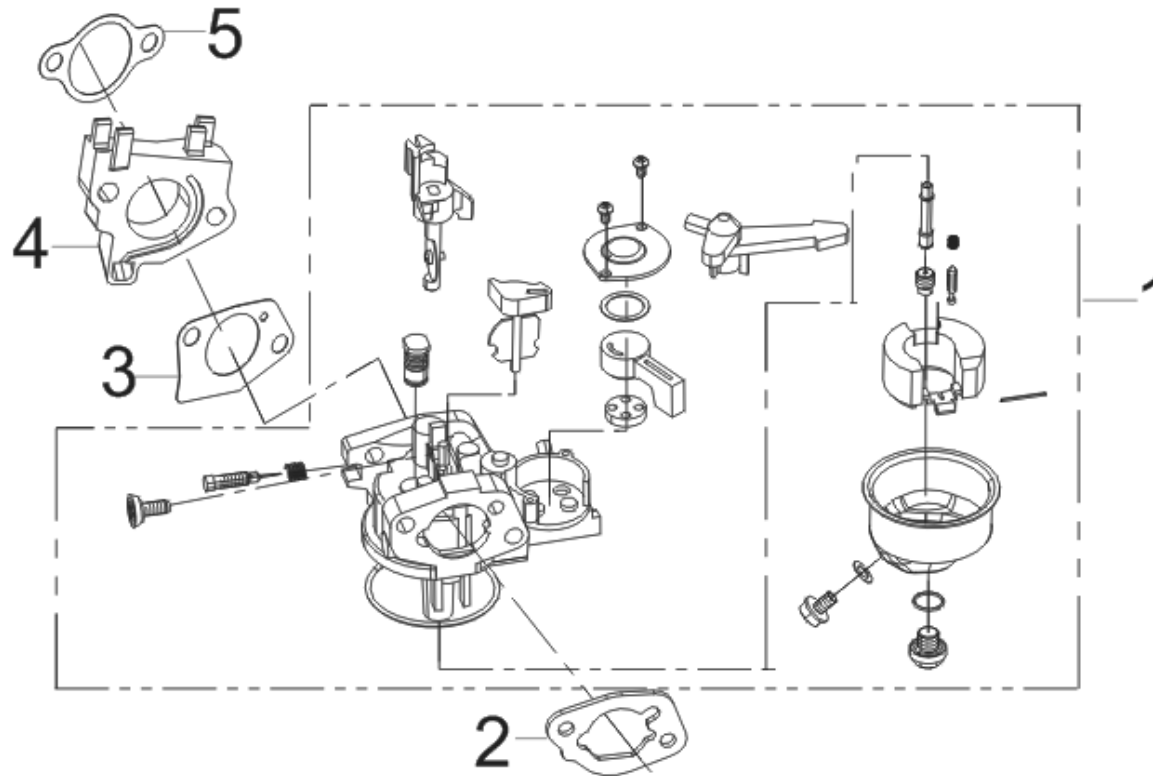


POS.	CODE	DESCRIPTION	QTY
E09-1	A13039	CARBURETOR ASSEMBLY	1
E09-2	A10537	AIR CLEANER SEAL GASKET	1
E09-3	A10538	CARBURETOR SEAL GASKET	1
E09-4	A10539	CARBURETOR INSULATOR PLATE	1
E09-5	A10540	INLET GASKET	1

**E10**

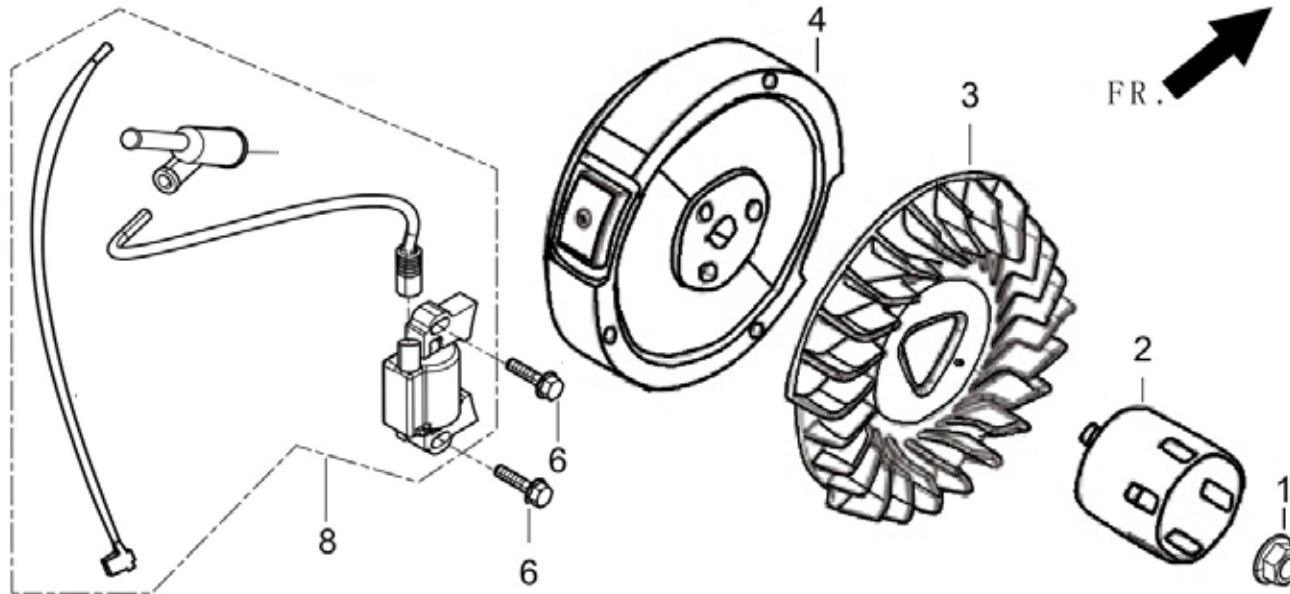


POS.	CODE	DESCRIPTION	QTY
E10-1	A08431	FLYWHEEL NUT	1
E10-2	A10541	STARTER PULLEY	1
E10-3	A10542	IMPELLER	1
E10-4	A10543	FLYWHEEL	1
E10-6	A08937	BOLT	2
E10-8	A10544	IGNITION COIL	1

**E11**

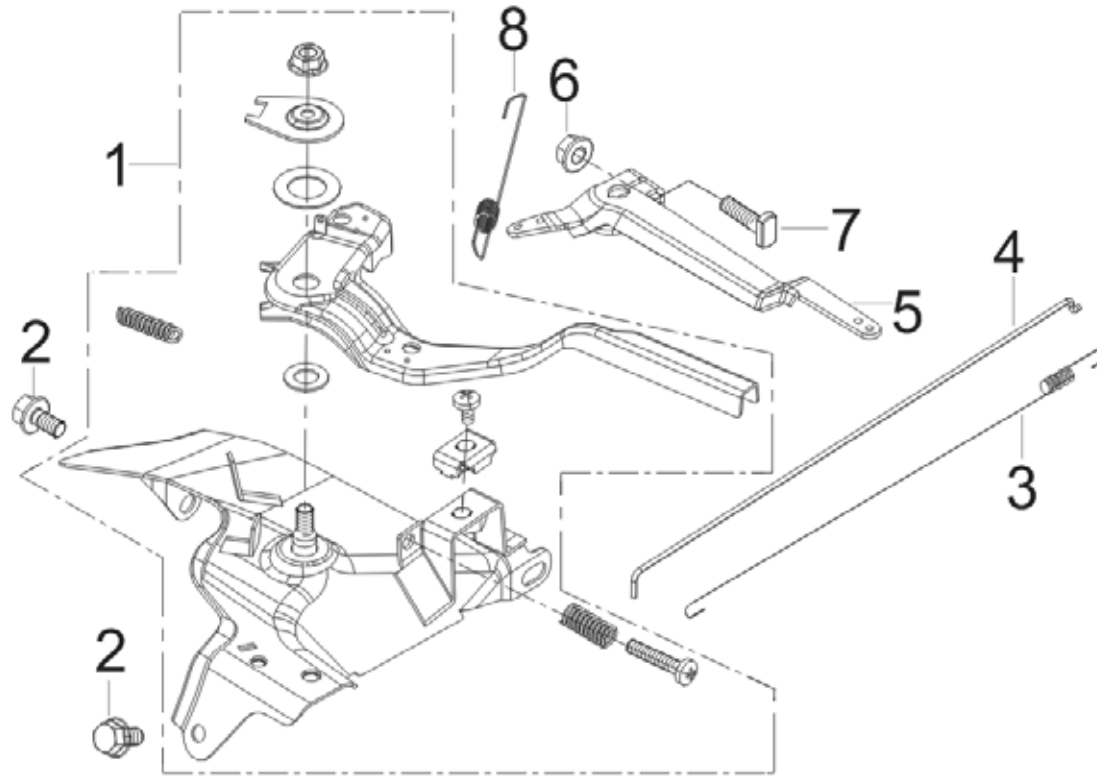


POS.	CODE	DESCRIPTION	QTY
E11-1	A13045	THROTTLE CONTROL ASSEMBLY	1
E11-2	A08968	BOLT	2
E11-3	A08568	THROTTLE VALVE RETURNING SPRING	1
E11-4	A10546	GOVERNOR ROD	1
E11-5	A10547	GOVERNOR BRACKET	1
E11-6	A08506	NUT	1
E11-7	A08505	GOVERNOR SUPPORT BOLT	1
E11-8	A10548	GOVERNOR SPRING	1

**F01**

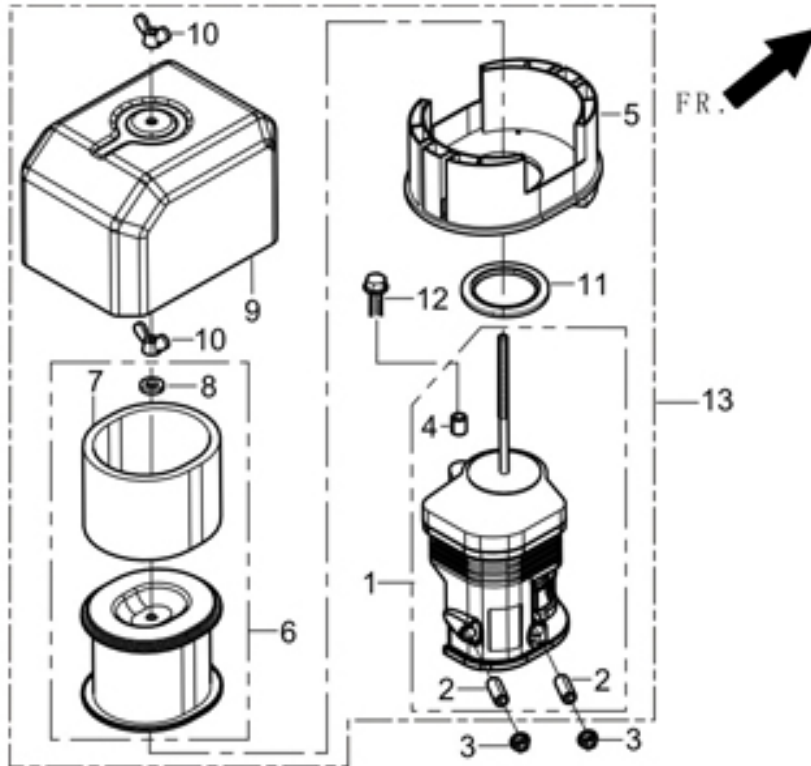


POS.	CODE	DESCRIPTION	QTY
F01-3	A08506	NUT	2
F01-6	A11335	AIR FILTER ELEMENT	1
F01-12	A08767	BOLT	1
F01-13	A13090	AIR CLEANER ASSEMBLY	1

**F02**

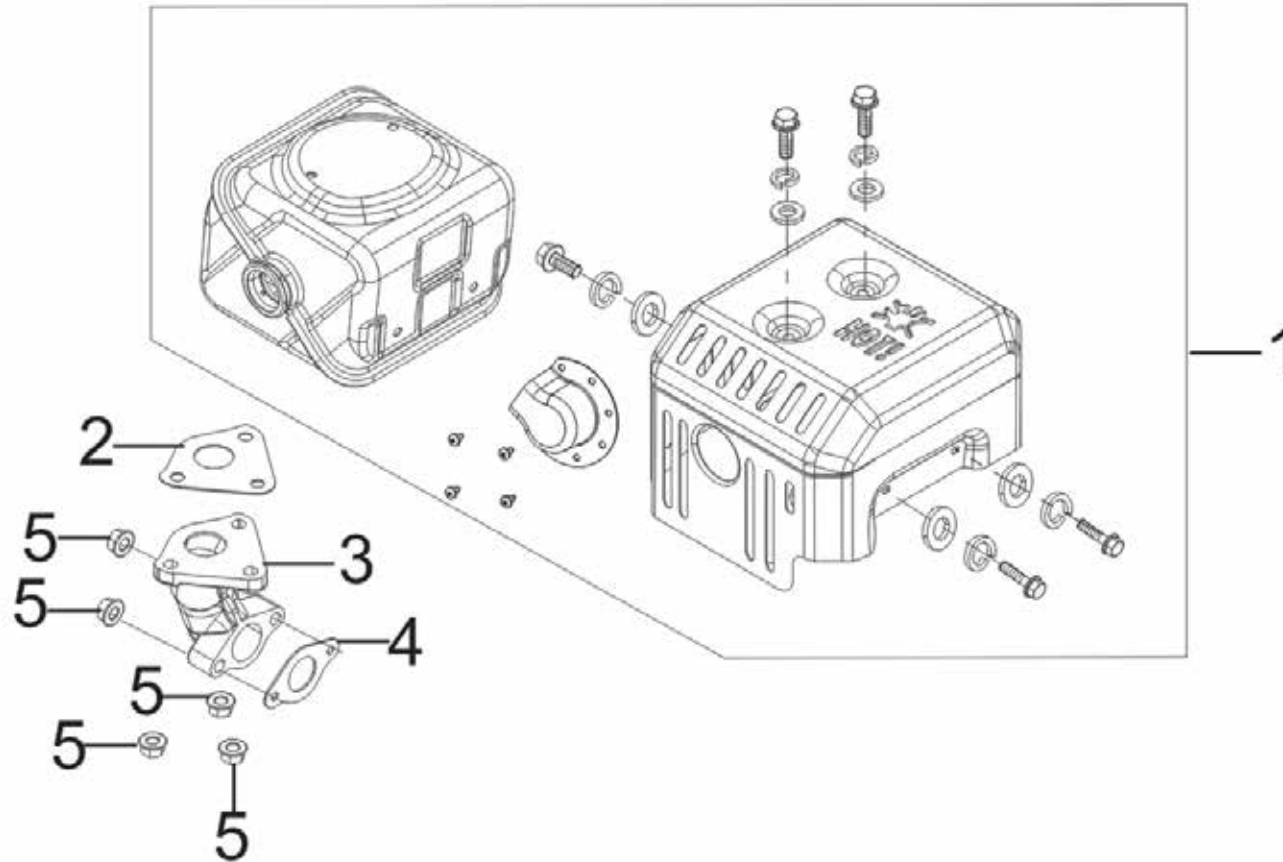


POS.	CODE	DESCRIPTION	QTY
F02-1	A13025	MUFFLER ASSEMBLY	1
F02-2	A10549	MUFFLER GASKET	1
F02-3	A10550	EXHAUST PIPE	1
F02-4	A08575	EXHAUST OUTLET GASKET	1
F02-5	A08520	NUT	5

**F03**

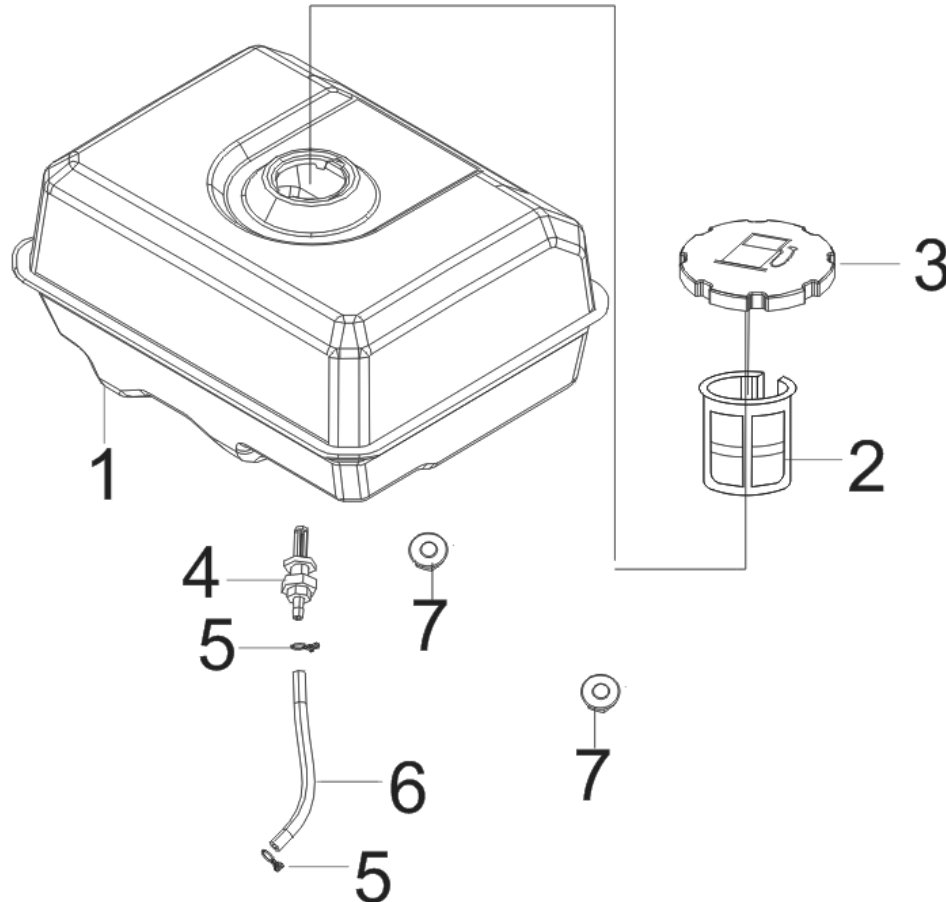


POS.	CODE	DESCRIPTION	QTY
F03-1	A11252	FUEL TANK	1
F03-2	A09932	FUEL STRAINER	1
F03-3	A11333	FUEL TANK COVER	1
F03-4	A09934	FUEL TANK OIL OUTLET	1
F03-5	A08816	COLLAR	2
F03-6	A10554	FUEL TUBE	1
F03-7	A08520	NUT	2

**F61**

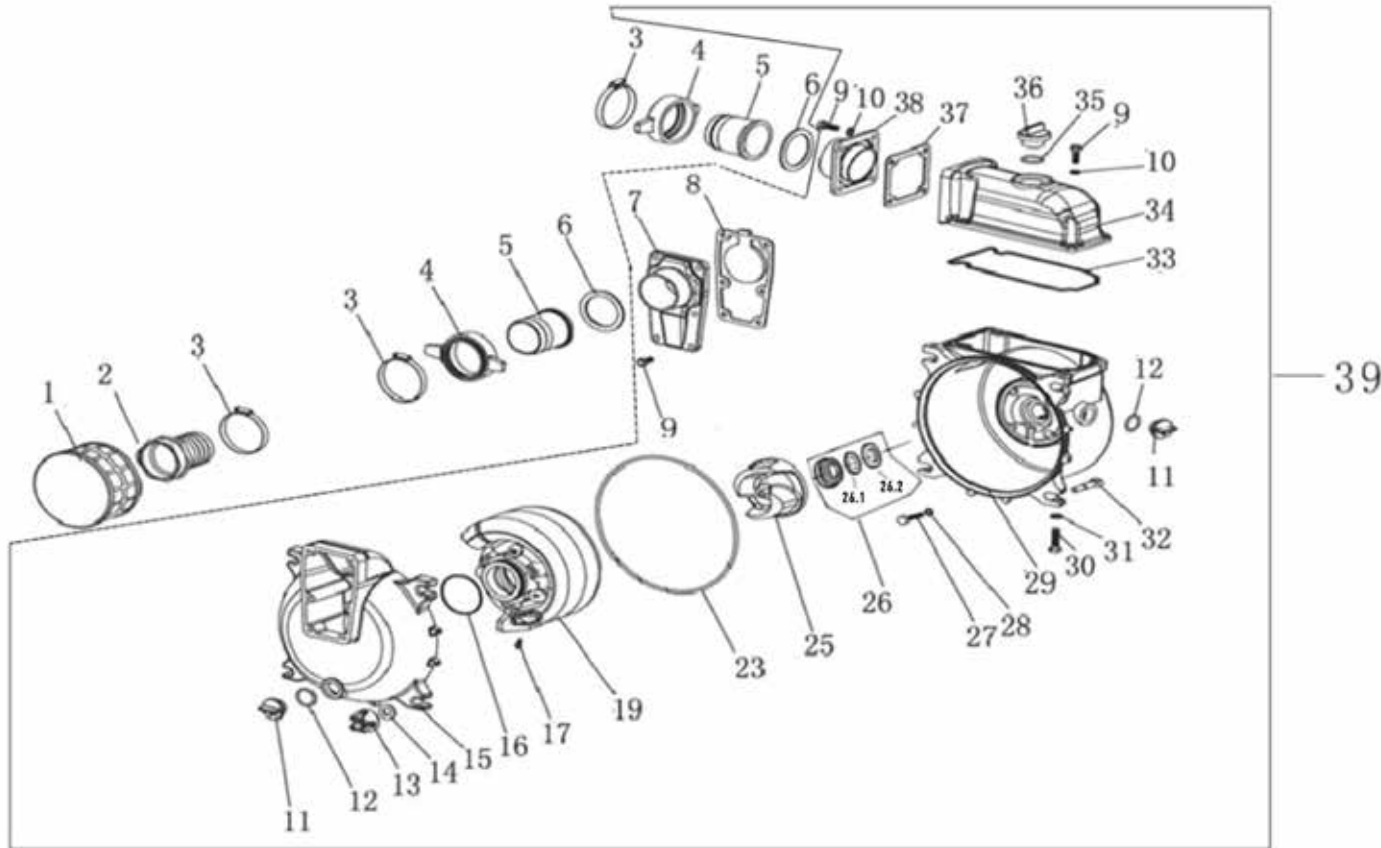

POS.	CODE	DESCRIPTION	QTY
F61-1	A11230	STRAINER	1
F61-2	A10988	WATER PIPE JOINT	1
F61-3	A10935	HOSE HOOP	3
F61-4	A10981	HOSE JOINT	2
F61-5	A10967	HOSE INTERFACE	2
F61-6	A11127	HOSE JOINT SEAL RING	2
F61-7	A10746	WATER INLET	1
F61-8	A10899	INLET WATER GASKET	1
F61-9	A10703	BOLT	14
F61-11	A11072	THREAD PLUG	2
F61-12	A10993	SCREW PLUG WASHER	2
F61-13	A11306	NUT	4
F61-14	A11314	WASHER	4
F61-15	A11205	PUMP BODY	1
F61-16	A11115	WHORL CASE SEALING RIGN	1
F61-17	A08687	BOLT	3
F61-19	A11100	WHORL CASE	1
F61-23	A10816	WATER PUMP JOINT CUSHION	1
F61-25	A10948	WATER PUMP IMPELLER	1
F61-26	A11163	MECHANISM SEAL	1
F61-26.1	A11135	IMPELLER SEAL RING	1
F61-26.2	A11179	PORCELAIN RING	1
F61-27	A11312	BOLT	4
F61-28	A10858	WASHER	4
F61-29	A11030	WATER PUMP JOINT	1
F61-30	A11310	BOLT	4
F61-31	A10858	SPRING WASHER	4
F61-32	A11313	EYELET BOLT	4
F61-33	A11336	WATER OUTLET BODY GASKET	1
F61-34	A11307	WATER OUTLET BODY	1
F61-35	A10993	SCREW PLUG WASHER	1
F61-36	A10956	THREAD PLUG	1
F61-37	A10909	OUTLET GASKET	1
F61-38	A11293	WATER OUTLET	1
F61-39	A11089	WATER PUMP ASSY	1

**F04**

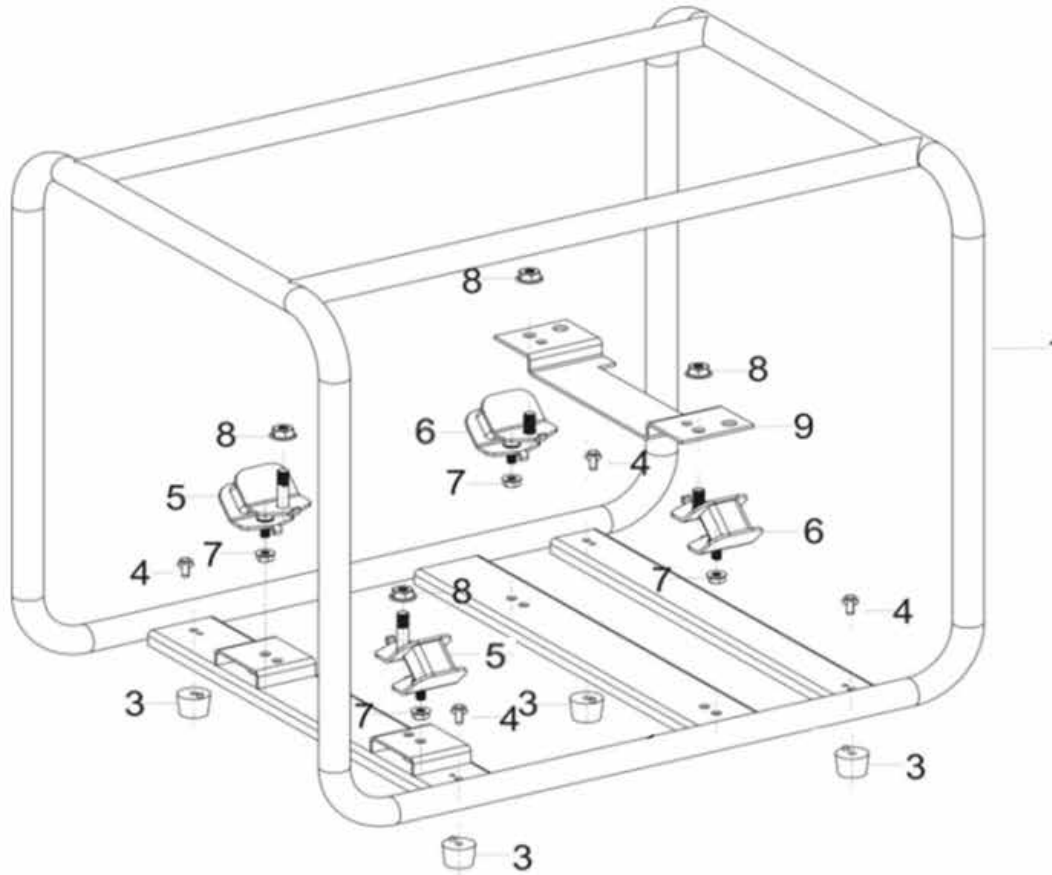

POS.	CODE	DESCRIPTION	QTY
F04-1	A10850	ENGINE FRAME ASSEMBLY	1
F04-3	A11185	ENGINE FRAME SHOCK ABSORPTION SEAT	4
F04-4	A08494	BOLT	4
F04-5	A08668	ENGINE FRAME REAR CUSHION	2
F04-6	A10811	ENGINE FRAME REAR CUSHION	2
F04-7	A11017	NUT	4
F04-8	A08485	NUT	4
F04-9	A11190	WATER PUMP SEAT	1