



E01

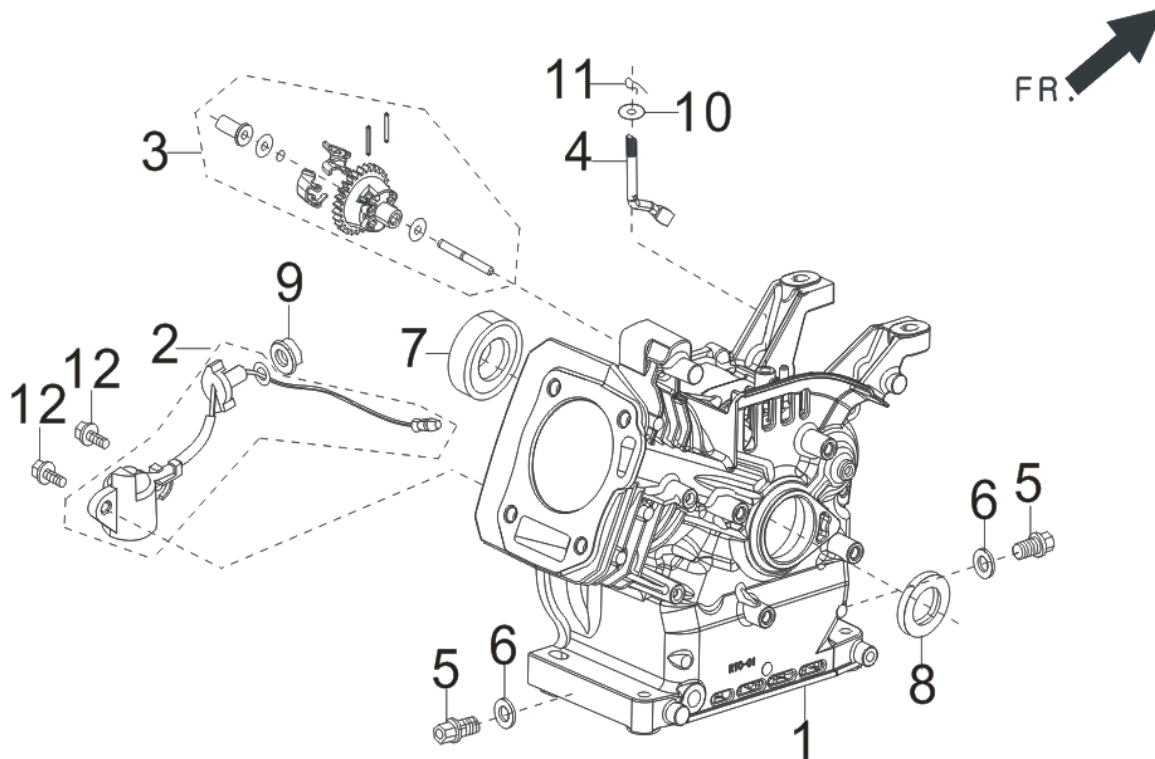


POS.	CODE	DESCRIPTION	QTY
E01-1	A13066	CRANKCASE	1
E01-2	A08608	ENGINE OIL SENSOR	1
E01-3	A09908	GOVERNOR GEAR	1
E01-4	A08481	GOVERNOR ARM	1
E01-5	A08287	FLAT WASHER	2
E01-6	A08482	FLAT WASHER	2
E01-7	A08484	DEEP GROOVE BALL BEARING	1
E01-8	A08483	OIL SEAL	1
E01-9	A08485	NUT	1
E01-10	A08610	FLAT WASHER	1
E01-11	A08951	COTTER PIN	1
E01-12	A08852	BOLT	2

E02

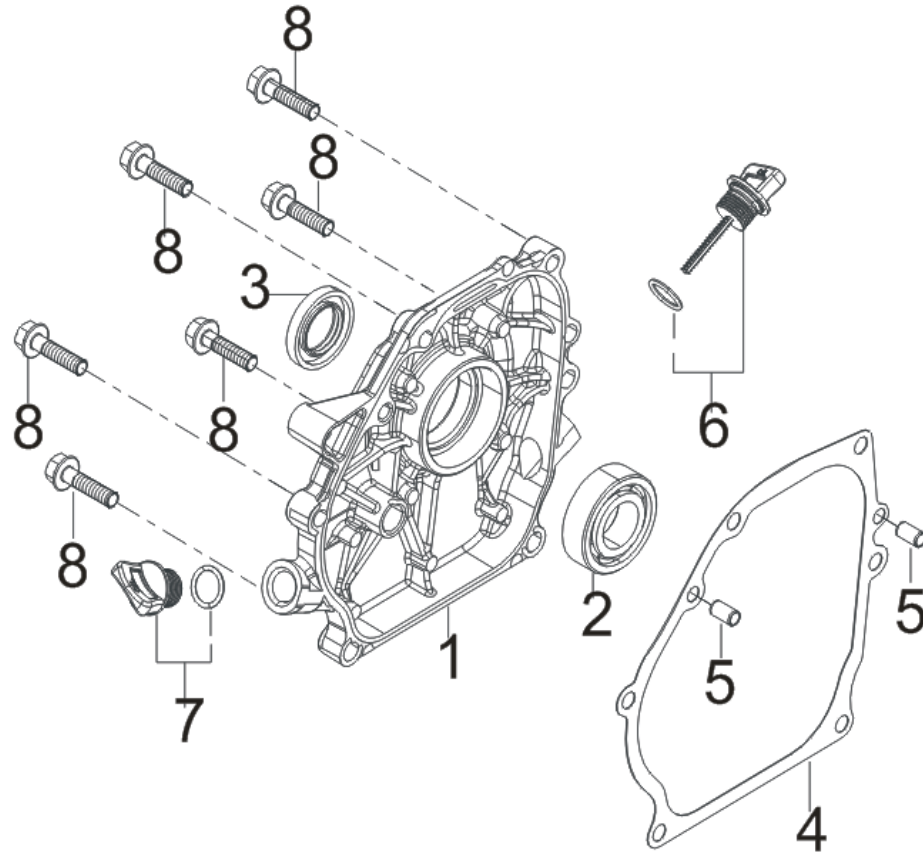

POS.	CODE	DESCRIPTION	QTY
E02-1	A10785	CRANKCASE COVER	1
E02-2	A08484	DEEP GROOVE BALL BEARING	1
E02-3	A08483	OIL SEAL	1
E02-4	A08289	CRANKCASE GASKET	1
E02-5	A08486	POSITION PIN	2
E02-6	A08468	OIL DIPSTICK SUBASSEMBLY	1
E02-7	A09912	ENGINE OIL PLUG	1
E02-8	A08939	BOLT	6


E03

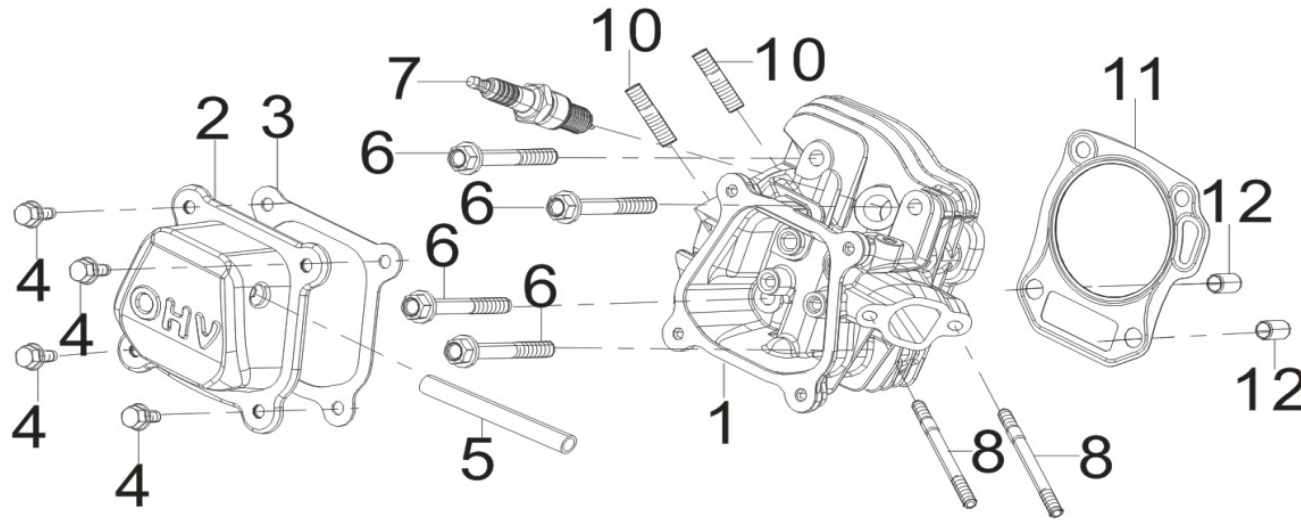


POS.	CODE	DESCRIPTION	QTY
E03-1	A08290	CYLINDER HEAD	1
E03-2	A08291	CYLINDER HEAD COVER	1
E03-3	A08292	CYLINDER HEAD COVER GASKET	1
E03-4	A08968	BOLT	4
E03-5	A09913	BREATHER TUBE	1
E03-6	A08293	CYLINDER HEAD BOLT	4
E03-7	A08940	SPARK PLUG	1
E03-8	A11338	STUD BOLT	2
E03-10	A08489	STUD BOLT	2
E03-11	A08294	CYLINDER HEAD GASKET	1
E03-12	A08943	POSITION PIN	2

POS.	CODE	DESCRIPTION	QTY
E04-1	A13072	CRANKSHAFT ASSEMBLY	1

E04

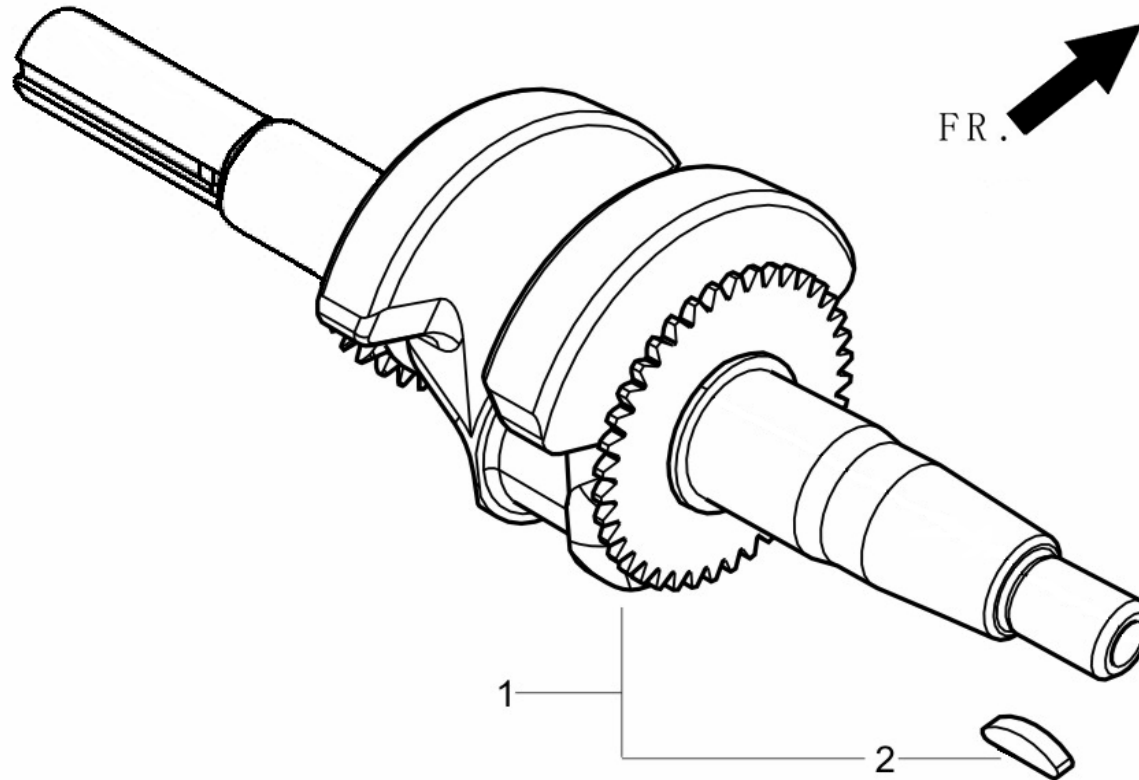


E05

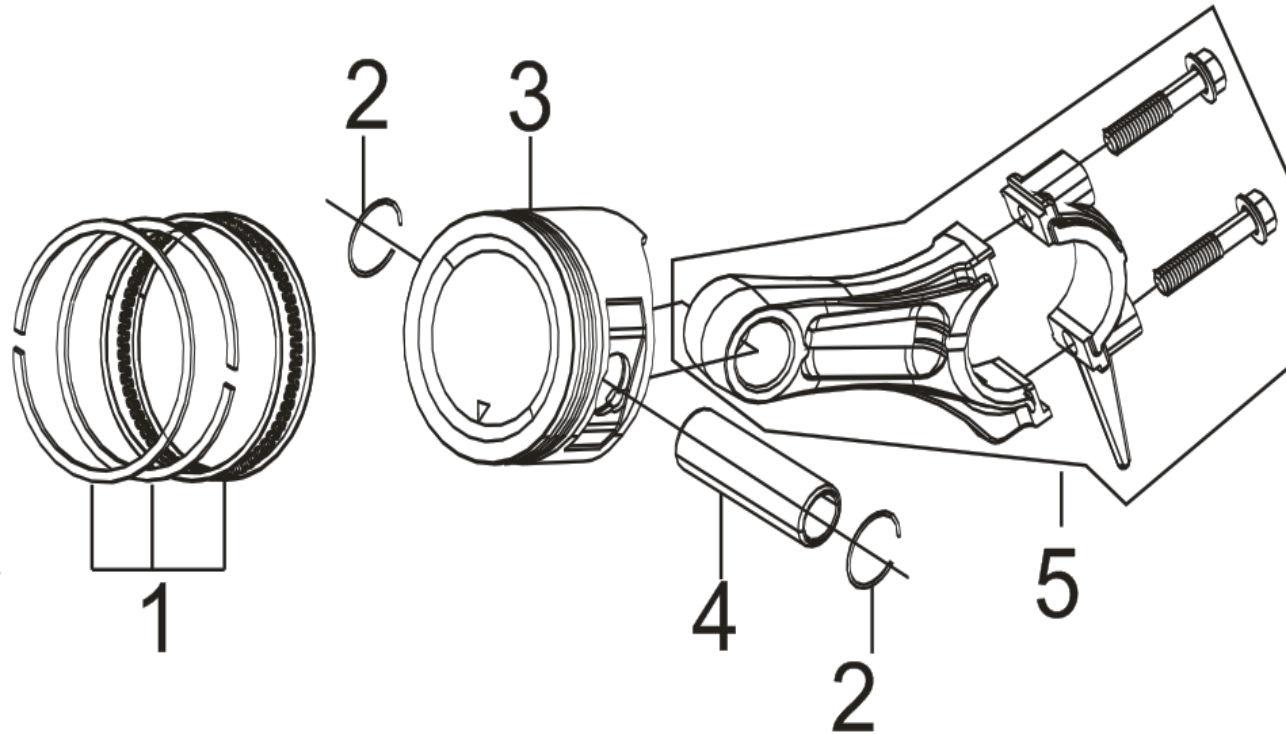


POS.	CODE	DESCRIPTION	QTY
E05-1	A08408	PISTON RING SET	1
E05-2	A08409	PISTON PIN CLIP	2
E05-3	A08295	PISTON	1
E05-4	A08296	PISTON PIN	1
E05-5	A08297	CONNECTING ROD	1

E06

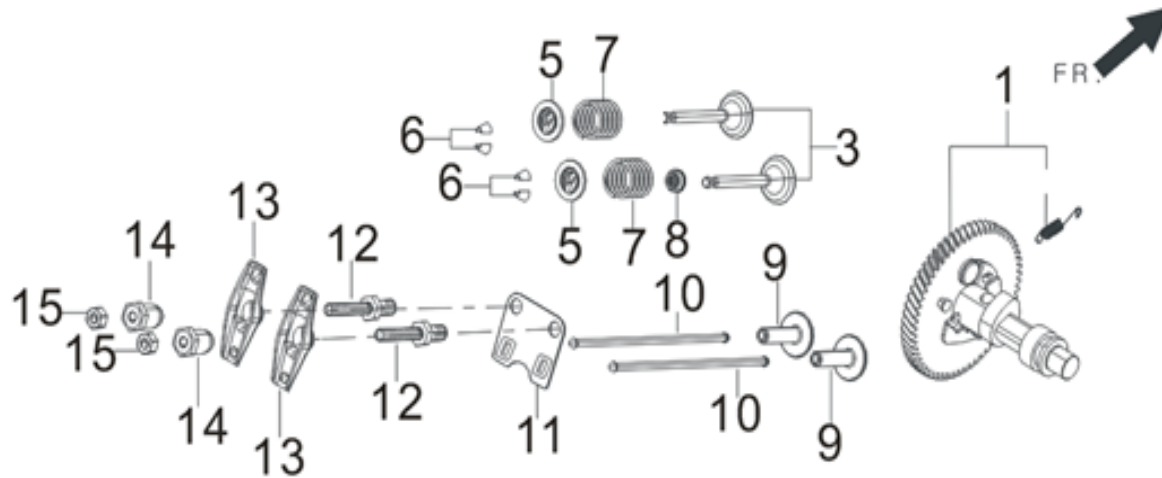


POS.	CODE	DESCRIPTION	QTY
E06-1	A08451	CAMSHAFT ASSEMBLY	1
E06-3	A08298	VALVES SET	1
E06-5	A08301	VALVE SPRING SEAT	2
E06-6	A08302	VALVE LOCK CLAMP	4
E06-7	A08300	VALVE SPRING	2
E06-8	A08299	SEAL GUIDE	1
E06-9	A08440	VALVE TAPPET	2
E06-10	A08441	VALVE LIFTER	2
E06-11	A08442	LIFTER STOPPER PLATE	1
E06-12	A08459	ROCKSHAFT BOLT	2
E06-13	A08460	ROCKER VALVE	2
E06-14	A08461	VALVE ADJUSTING NUT	2
E06-15	A08462	VALVE LOCK NUT	2

E07

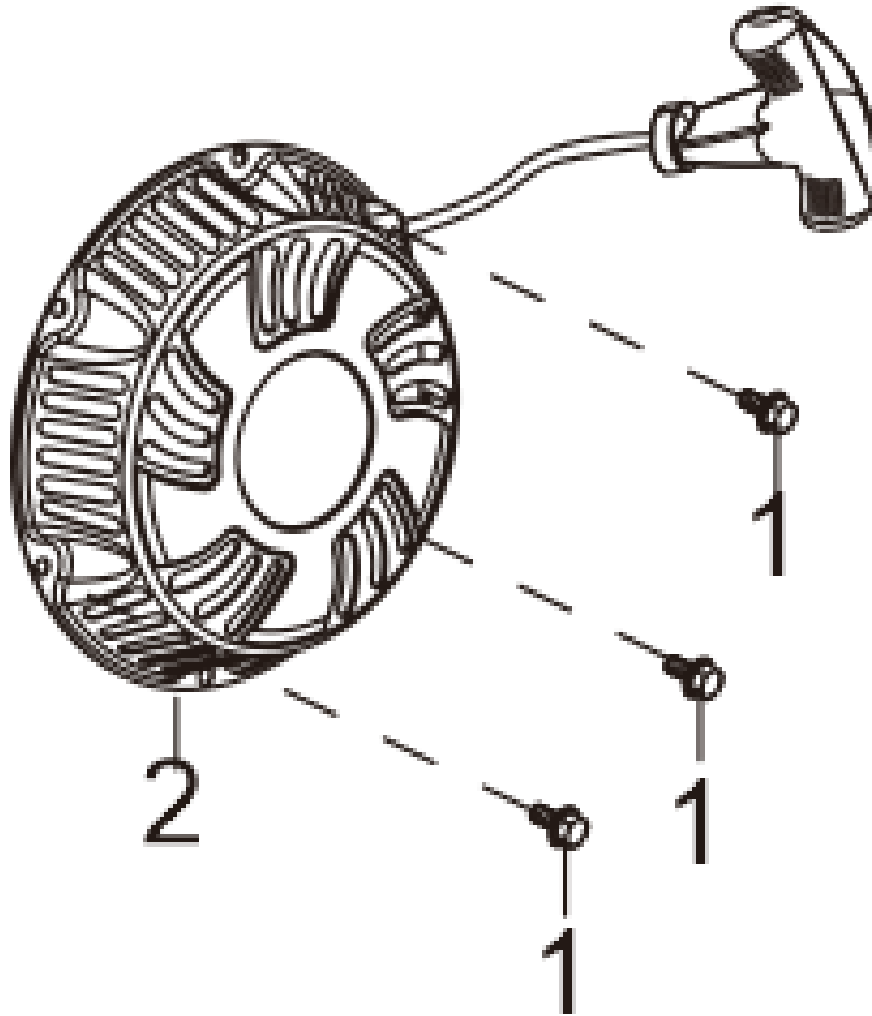


POS.	CODE	DESCRIPTION	QTY
E07-1	A08613	BOLT	3
E07-2	A13077	RECOIL STARTER ASSEMBLY	1

E08

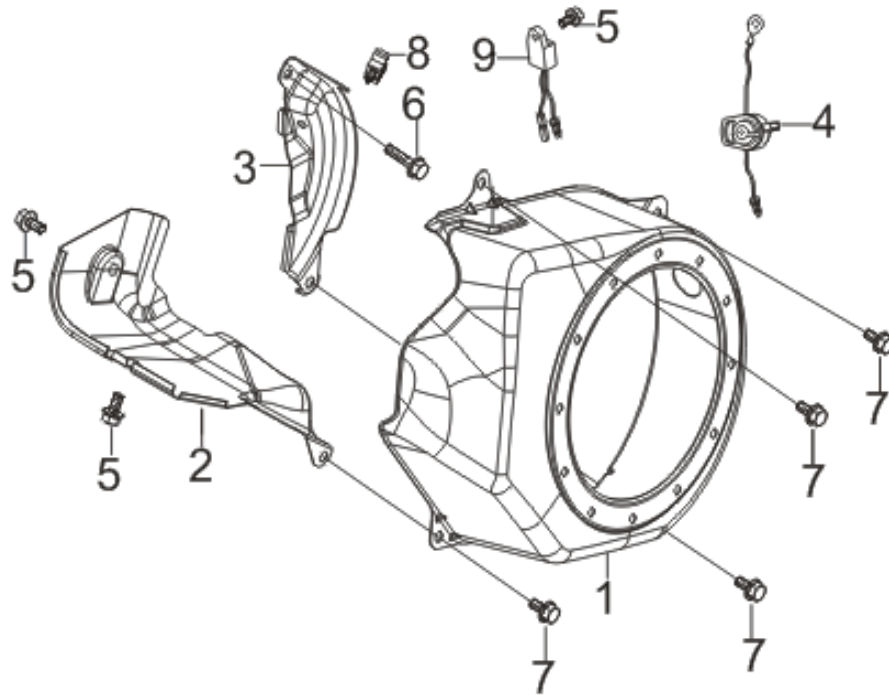


POS.	CODE	DESCRIPTION	QTY
E08-1	A13015	SHROUD	1
E08-2	A08491	CYLINDER BODY SHROUD	1
E08-3	A11198	LOWER SHIELD	1
E08-4	A11245	STOP ENGINE SWITCH	1
E08-5	A08494	BOLT	3
E08-6	A08496	BOLT	1
E08-7	A08968	BOLT	4
E08-8	A08495	COLLAR	1
E08-9	A08615	OIL PROTECTOR	1

E09

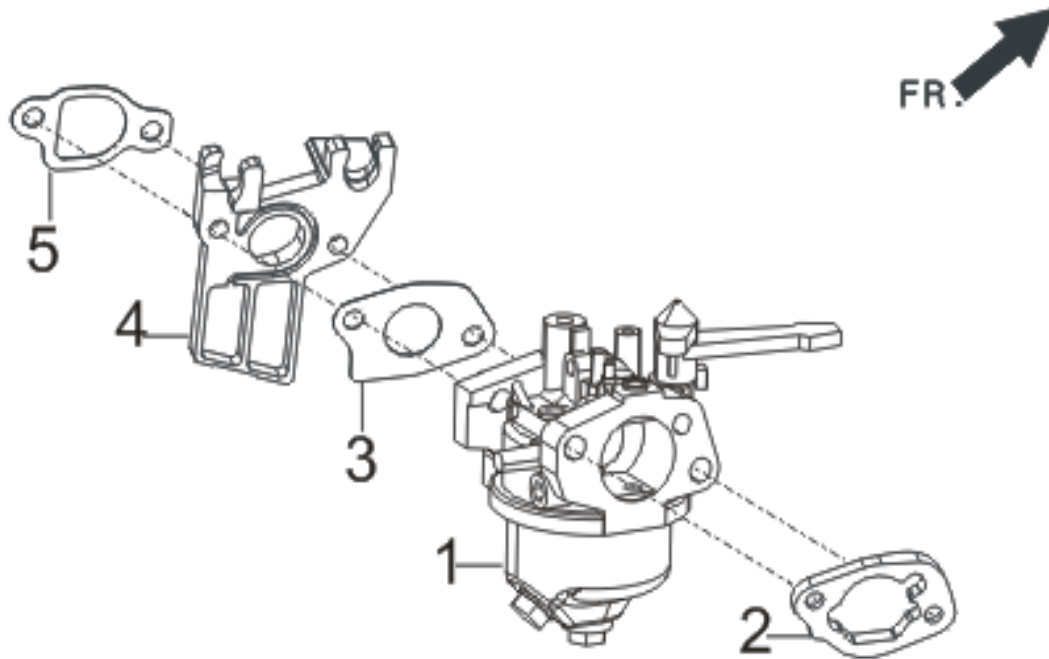


POS.	CODE	DESCRIPTION	QTY
E09-1	A13038	CARBURETOR	1
E09-2	A09924	AIR CLEANER SEAL GASKET	1
E09-3	A08469	CARBURETOR SEAL GASKET	1
E09-4	A08478	CARBURETOR INSULATOR PLATE	1
E09-5	A08470	CARBURETOR INSULATOR GASKET	1

E10

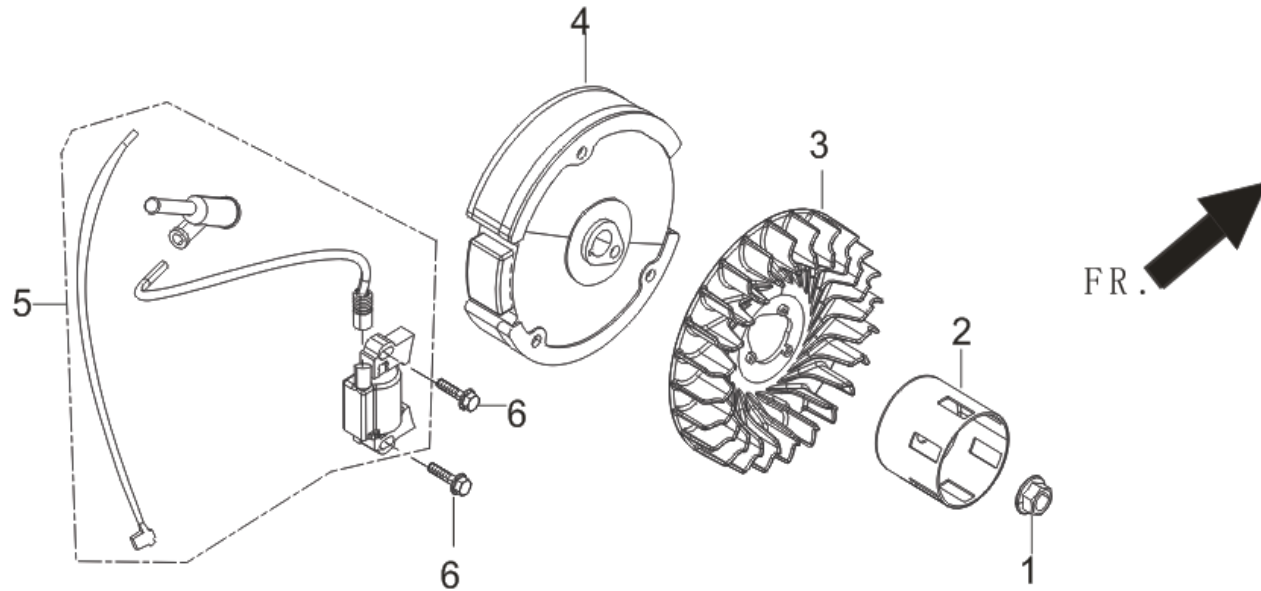


POS.	CODE	DESCRIPTION	QTY
E10-1	A08420	FLYWHEEL NUT	1
E10-2	A08618	STARTER PULLEY	1
E10-3	A08619	IMPELLER	1
E10-4	A08429	FLYWHEEL	1
E10-5	A13029	IGNITION COIL	1
E10-6	A08502	BOLT	2

E11

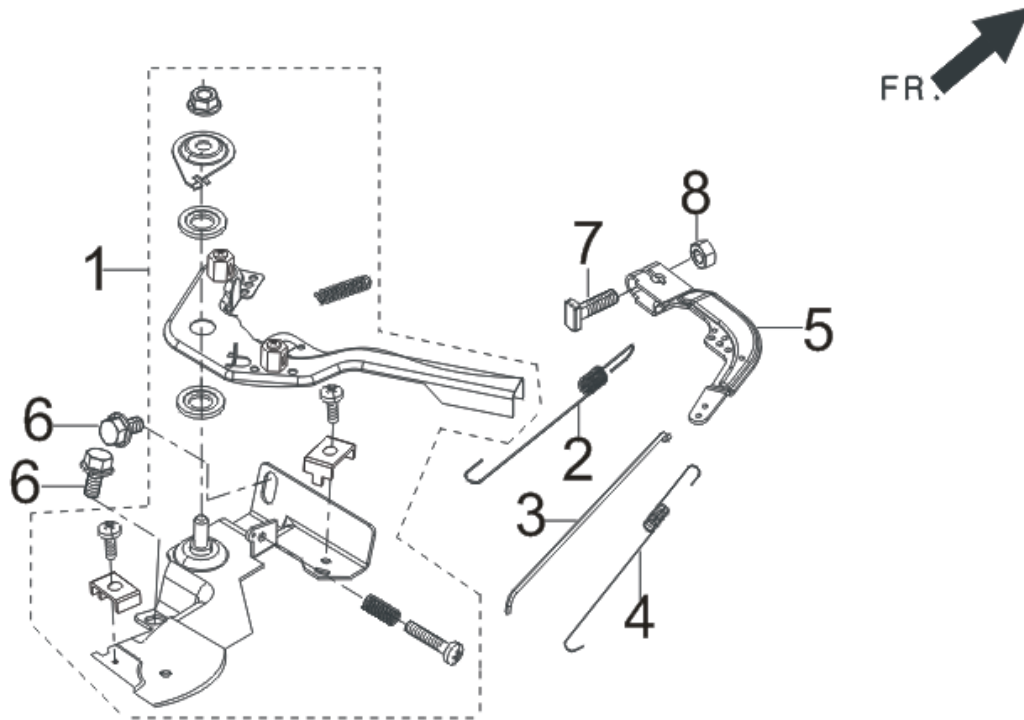


POS.	CODE	DESCRIPTION	QTY
E11-1	A13044	THROTTLE CONTROL	1
E11-2	A13019	GOVERNOR SPRING	1
E11-3	A09927	GOVERNOR ROD	1
E11-4	A08509	THROTTLE VALVE RETURNING SPRING	1
E11-5	A08504	GOVERNOR BRACKET	1
E11-6	A08494	BOLT	2
E11-7	A12999	GOVERNOR SUPPORT BOLT	1
E11-8	A13051	NUT	1

F01

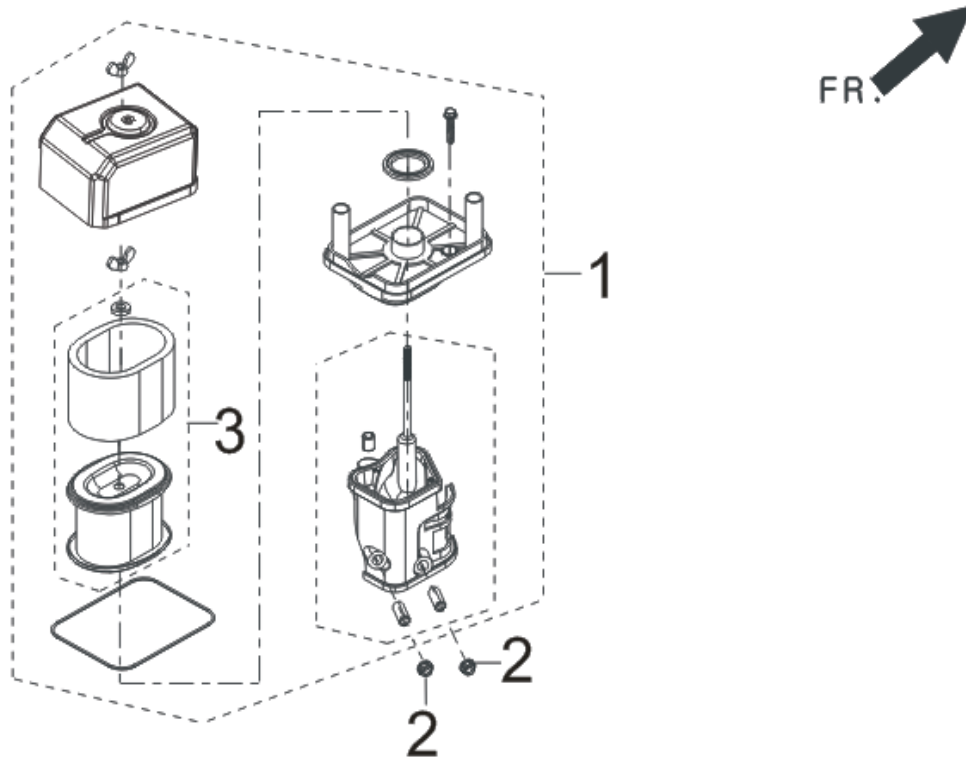


POS.	CODE	DESCRIPTION	QTY
F01-1	A13089	AIR FILTER	1
F01-2	A08506	NUT	2
F01-3	A10830	AIR FILTER ELEMENT	1

F02

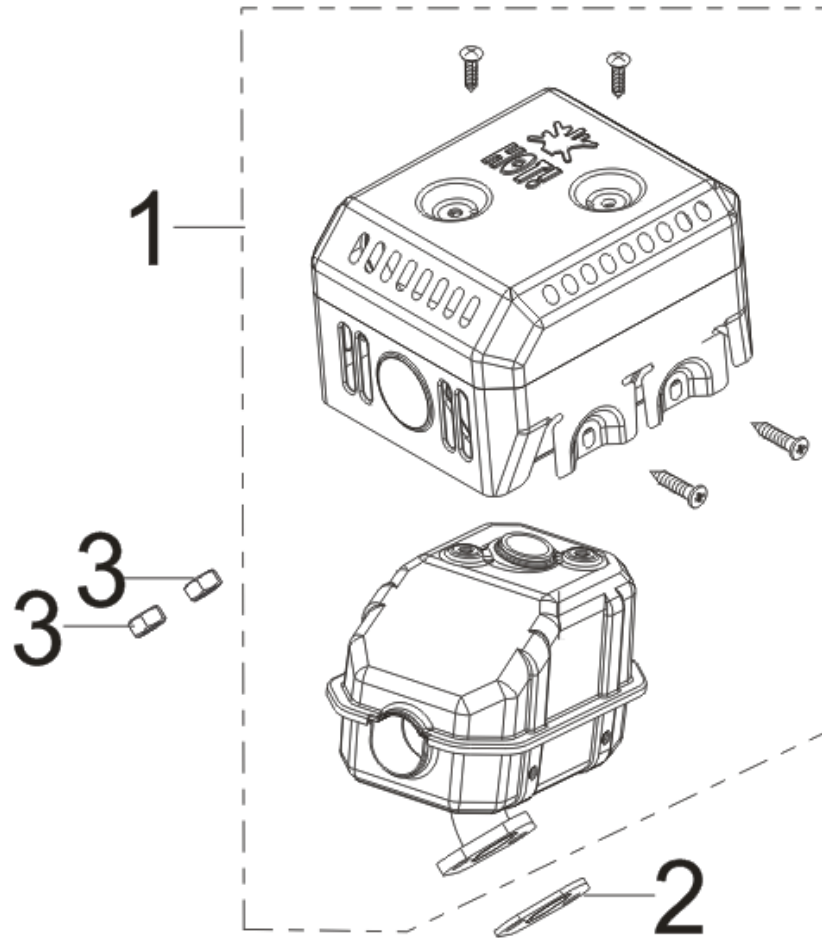


POS.	CODE	DESCRIPTION	QTY
F02-1	A13027	MUFFLER ASSEMBLY	1
F02-2	A08622	EXHAUST OUTLET GASKET	1
F02-3	A08747	NUT	2

F03

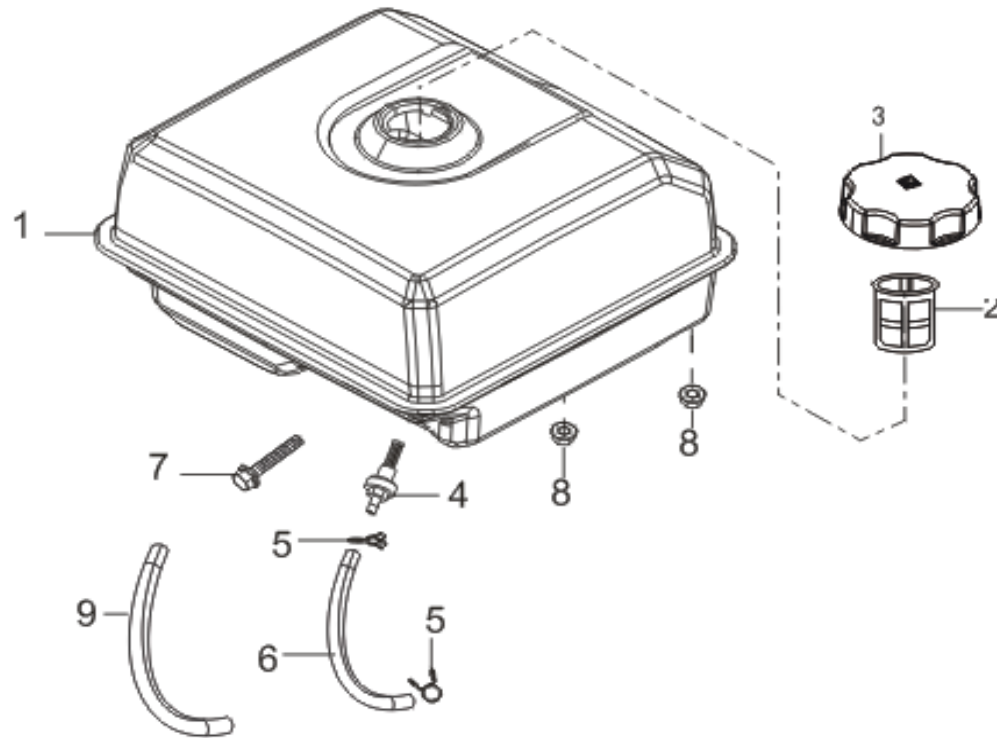


POS.	CODE	DESCRIPTION	QTY
F03-1	A13007	FUEL TANK	1
F03-2	A09932	FUEL STRAINER	1
F03-3	A11333	FUEL TANK COVER	1
F03-4	A09934	FUEL TANK OIL OUTLET	1
F03-5	A08816	COLLAR	2
F03-6	A09935	FUEL TUBE	1
F03-7	A08830	BOLT	1
F03-8	A08506	NUT	2
F03-9	A09936	RUBBER JACKET	1

F04

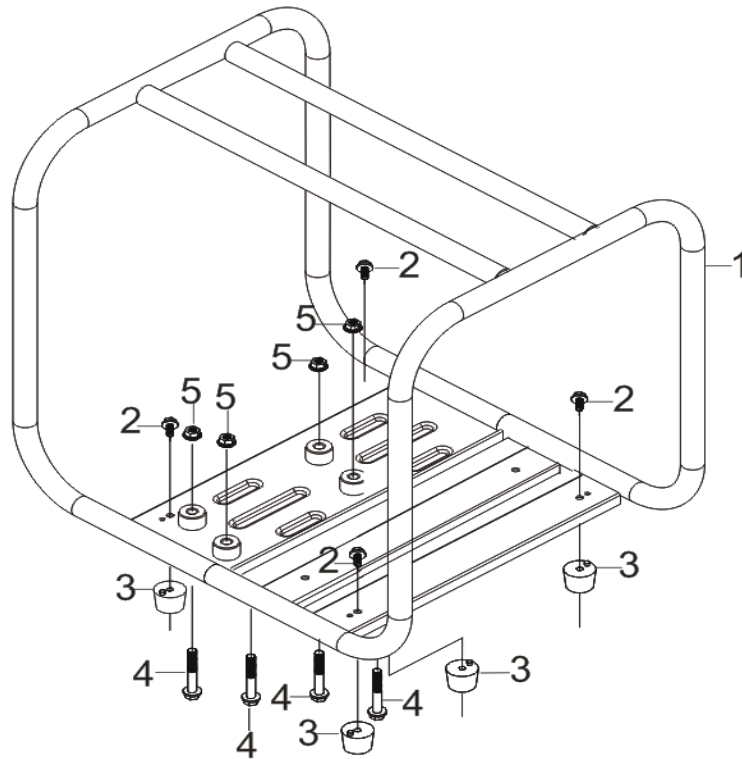


POS.	CODE	DESCRIPTION	QTY
F04-1	A10853	ENGINE FRAME ASSEMBLY	1
F04-2	A08494	BOLT	4
F04-3	A11185	ENGINE FRAME SHOCK ABSORPTION SEAT	4
F04-4	A10645	BOLT	4
F04-5	A11017	NUT	4

F61

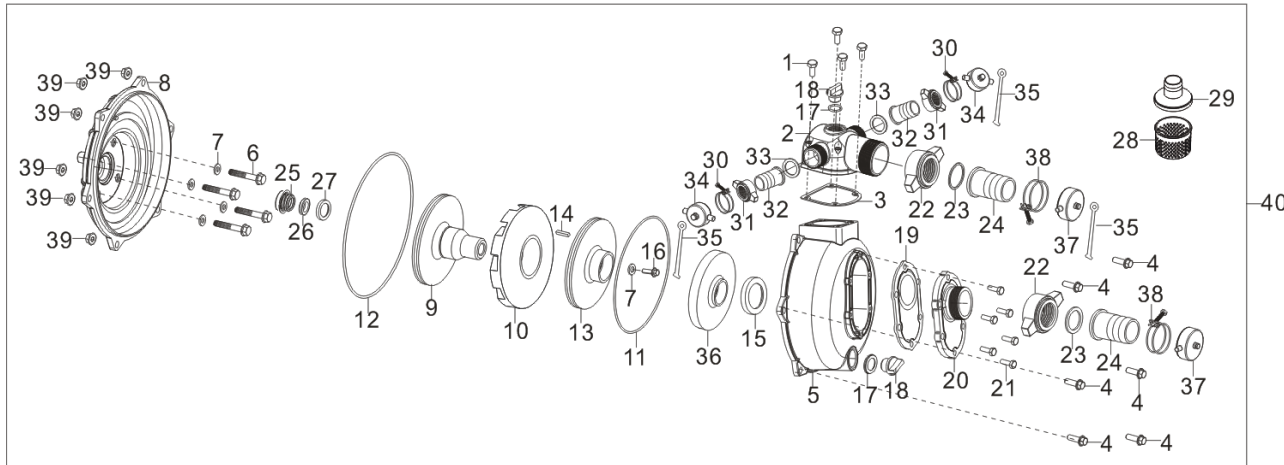

POS.	CODE	DESCRIPTION	QTY
F61-1	A10692	BOLT	4
F61-2	A11032	WATER OUTLET	1
F61-3	A10911	OUTLET GASKET	1
F61-4	A10291	BOLT	6
F61-5	A11102	PUMP BODY	1
F61-6	A10713	BOLT	4
F61-7	A10860	SEAL WASHER	5
F61-8	A10995	WATER PUMP JOINT	1
F61-9	A11320	PRIMARY PUMP IMPELLER	1
F61-10	A11211	IMPELLER SLEEVE	1
F61-11	A11316	IMPELLER BUSH SEAL RING	1
F61-12	A10818	WATER PUMP JOINT CUSHION	1
F61-13	A11321	PRIMARY PUMP IMPELLER	1
F61-14	A10841	FLAT KEY	1
F61-15	A11117	WHORL CASE SEALING RIGN	1
F61-16	A10712	BOLT	1
F61-17	A11296	SCREW PLUG WASHER	2
F61-18	A11075	THREAD PLUG	2
F61-19	A10901	INLET WATER GASKET	1
F61-20	A10958	WATER INLET	1
F61-21	A09957	BOLT	6
F61-22	A10983	HOSE JOINT	2
F61-23	A11129	HOSE JOINT SEAL RING	2
F61-24	A10969	HOSE INTERFACE	2
F61-25	A11165	MECHANISM SEAL	1
F61-26	A11181	PORCELAIN SEAL	1
F61-27	A11137	IMPELLER SEAL RING	1
F61-28	A10837	FILTER	1
F61-29	A10792	FILTER COVER	1

F61

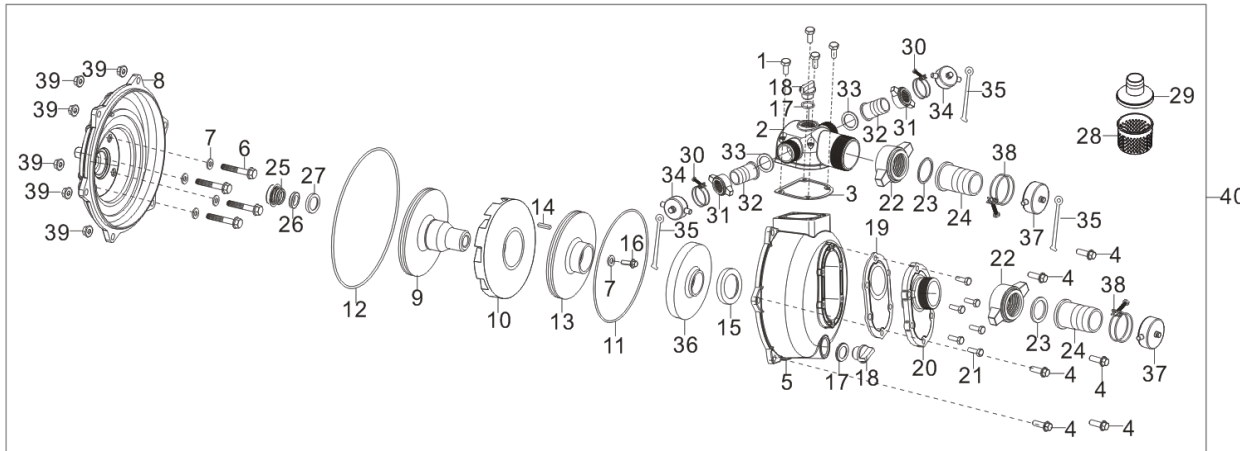

POS.	CODE	DESCRIPTION	QTY
F61-30	A10938	HOSE HOOP	2
F61-31	A10976	HOSE JOINT	2
F61-32	A10962	HOSE INTERFACE	2
F61-33	A11122	HOSE JOINT SEAL RING	2
F61-34	A11317	WATER OUTLET PLUG CAP	2
F61-35	A11319	PLUG CAP HANGING STRIP	3
F61-36	A10748	WHORL CASE	1
F61-37	A11318	WATER OUTLET PLUG CAP	2
F61-38	A10937	HOSE HOOP	2
F61-39	A11018	NUT	6
F61-40	A11091	WATER PUMP ASSEMBLY	1